




The secret to
a great night's sleep

DEHUMIDIFIER

Operating Instructions

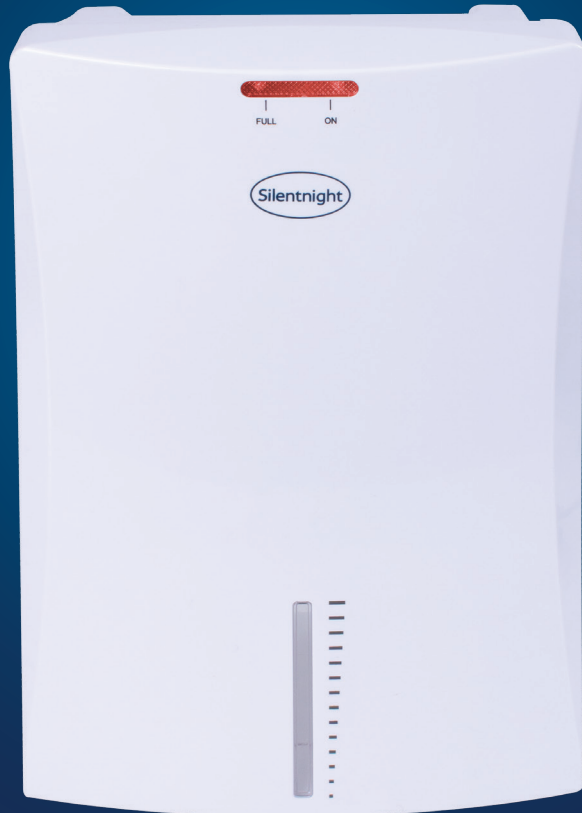

Model: 38040

Please read these instructions and retain for future reference.

TECHNICAL SPECIFICATION

Rated voltage: 220~240V

Rated power: 70W

**OPERATING INSTRUCTIONS**

Read all instructions before using this appliance and keep them for future reference.

Warning: In order to avoid overheating, do not cover the Dehumidifier.

REMOVABLE WATER TANK

When the water tank is full with approximately 2000ml of water collected, the unit will automatically switch off and the "Red" LED will come on.

To remove the water tank, first switch off the dehumidifier, flick the "On/Off" switch to the "Off" position. Then, remove the water tank from the unit and pour the water down the sink and put the water tank back into the unit. To continue dehumidifying, flick the "On/Off" switch to the "On" position again.

CLEANING

Before cleaning the unit, turn off the dehumidifier and unplug the AC plug from the mains socket. Use a soft cloth to clean the surface of the unit with a soft bristled brush to remove dust from the air inlet and outlet grills.

CAUTIONS

When you have finished using the dehumidifier, you should switch the unit off by flicking the "On/Off" switch to the "Off" position.

Keep the front inlet grill and the top outlet grills clear at all times and do not cover.

Always keep the unit in an upright position to avoid water leakage.

FEATURES

Poor ventilation causes musty odours and mould in wardrobes, cupboards, cabinets or storage rooms. Perfect for small rooms, this light and quiet dehumidifier uses Peltier technology (no compressor) to help remove moisture from the air.

- To avoid electric shock, do not open the outer casing of the dehumidifier. There are no user serviceable parts inside.
- Specifications are subject to change for improvement without prior notice.

SPECIFICATIONS

Capacity: Approximately 600ml per day at 30°, 80% Relative Humidity

Cooling element: Thermo-electric Peltier module

Power consumption: 70W, Removable water tank: 2000ml

Water level detector: The LED light automatically changes from yellow to red when the water tank is full.

Product dimension: 245mm (W) x 365mm (H) x 137mm (D)

Working environment: Over 15°, over 40% Relative Humidity

CONNECTION

Plug the AC cable into the AC power socket, then connect the AC plug into the appropriate mains socket.

Flick the "On/Off" switch to the "On" position, and the dehumidifier will begin to operate and the yellow LED will turn on. Listen and feel for the air blowing from dry air outlet.

To switch off the unit, flick the "On/Off" button to the "Off" position and the dehumidifier will turn off.





GENERAL CARE AND SAFETY GUIDE

Read all instructions before using this appliance and keep them for future reference.

Warning: In order to avoid overheating, do not cover the Dehumidifier.

- Use only the voltage specified on the rating plate of the heater.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk.
- Keep all objects at least 0.5 meter from the front, sides and rear of the appliance.
- Do not block air inlets or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.
- Do not place appliance close to a radiant heat source.
- Do not insert foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage to the appliance.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair.
- This appliance is intended for household use only, not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning air vents and grilles.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- This appliance heats up slightly when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Switch off and use handles where provided when moving.
- Always operate on a flat horizontal surface.
- Do not operate with cord set coiled up as a build-up of heat is likely, which could be sufficient to become a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling flex - always grip plug.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from traffic areas so that it will not be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area.
- Do not store appliance while it is still hot.
- The appliance must not be located immediately below a socket - outlet.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
- Do not use this heater with programmer, timer or any other device that switches the heater on automatically since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not run the cord under carpeting or cover the cord with run runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- Important - This heater is intended for floor use only. Do not mount on ceiling or walls.
- The heater must not be located immediately below a socket - outlet. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Children should be supervised to ensure that they do not play with the appliance.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



After Sales Service

Your product is guaranteed for three years from the date of purchase.

Within this period, we undertake to repair or exchange this product free of charge provided it has been installed and operated in accordance to these instructions.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Should you require after sales service you should contact our customer services help desk on 0151-448 6974. It would assist us if you can quote the model number, series, date of purchase, and nature of the fault at the time of your call. The customer services help desk will also be able to advise you should you need to purchase any spares.

Please do not return a faulty product to us in the first instance as this may result in loss or damage and delay in providing you with a satisfactory service.

Please retain your receipt as proof of purchase.



©Silentnight Group Limited 2016
All rights reserved
Licensed by JELC

Exclusively manufactured for and distributed
by BML LIVERPOOL L24 9WD UK ©2016
All Rights Reserved.

Product may vary slightly from the image shown.
Specifications will however remain the same.