

INSTRUCTIONS FOR:

DESK/FLOOR FAN 3-SPEED 16" 230V

Model No: SFF16

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY



Refer to instruction manual

1.1. ELECTRICAL SAFETY

□ WARNING! It is the responsibility of the owner and the operator to read, understand and comply with the following:

You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (RCCB) should be incorporated in the main distribution board. We also recommend that a Residual Current Device (RCD) is used. It is particularly important to use an RCD with portable products that are plugged into a supply which is not protected by an RCCB. If in any doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer.

You must also read and understand the following instructions concerning electrical safety.

1.1.1. The **Electricity at Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.


- 1.1.2. The Health & Safety at Work Act 1974 makes owners of electrical appliances responsible for the safe condition of those appliances and the safety of the appliance operators. If in any doubt about electrical safety, contact a qualified electrician.
- 1.1.3. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.1.1. and 1.1.2. and use a Portable Appliance Tester.
- 1.1.4. Ensure that cables are always protected against short circuit and overload.
- 1.1.5. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none is loose.
- 1.1.6. **Important:** Ensure that the voltage marked on the appliance matches the power supply to be used and that the plug is fitted with the correct fuse see fuse rating at right.
- 1.1.7. **DO NOT** pull or carry the appliance by the power cable.
- 1.1.8. **DO NOT** pull the plug from the socket by the cable.
- 1.1.9. DO NOT use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician. When an ASTA/BS approved UK 3 pin plug is damaged, cut the cable just above the plug and dispose of the plug safely. Fit a new plug according to the following instructions (UK only).
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - d) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight.

Double insulated products, which are always marked with this symbol \Box , are fitted with live (brown) and neutral (blue) wires only. To rewire, connect the wires as indicated above - **DO NOT** connect either wire to the earth terminal.

- 1.1.10. Products which require more than 13 amps are supplied without a plug. In this case you must contact a qualified electrician to ensure that a suitably rated supply is available. We recommend that you discuss the installation of an industrial round pin plug and socket with your electrician.
- 1.1.11. If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable. If extension reel is to be used outdoors, ensure it is marked for outdoor use.

1.2. GENERAL SAFETY

- ✓ Disconnect the fan from the mains power when not in use and before servicing or performing any maintenance.
- ✓ Use the fan in dry areas only. **DO NOT** use in wet or areas with high condensation such as showers, pools etc.
- □ WARNING! If a fan falls into water or other liquid, immediately switch off and disconnect from the mains power supply. DO NOT touch the fan until the mains power supply has been disconnected.
- ✓ Always disconnect the fan from the power supply when moving it from one location to another and ensure fan is stood on a level surface.
- ✓ The fan air flow is powerful. Before use ensure that there is nothing nearby that will be damaged or displaced by the stream of air.
- ✓ Keep the fan clean and maintained in good condition. For motor service contact an authorised service agent.
- ✓ Use recommended parts only. Unapproved parts may be dangerous, and will invalidate your warranty.
- x DO NOT operate the fan where there are explosive or flammable gases, fumes or other hazardous substances.
- x DO NOT stand the fan on the power cable.
- x DO NOT insert any objects through the fan guard.
- X DO NOT cover the fan when in use.
- x DO NOT immerse the fan in water or any other liquid.

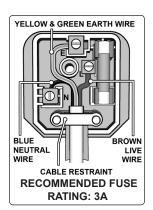

- x **DO NOT** allow children to operate the fan.
- DO NOT stand the fan where it may be knocked over or off a surface, or where the lead may cause a person to trip.
- x **DO NOT** use the fan outdoors.
- DO NOT modify speed control or attempt to fit any additional external speed control device to the fan.
- When not in use place the fan in its original box, or otherwise cover, to protect from dust and store in a safe, dry, childproof location.

NOTE: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. INTRODUCTION

Manufactured from durable composite material, ergonomically designed to pivot on a 180° axis, maximising the volume and direction of air flow. Can also be wall mounted. Features 3 speed settings, which can ideally be used for intense cooling power or as an air circulator for the whole room. Fitted with BS fully approved plug.

3. SPECIFICATION	
Model No:	SFF16
Fan ø:	400mm(16")
Speeds:	3
Power:	
Supply:	230V-50Hz
Height:	525mm

4. OPERATION

- The fan can be used either free standing or wall-mounted (fig.1).
- 4.2. **Wall Mounting**
- 4.2.1. Unclip both feet, install 2 x 4mm round head screws at 266mm centres in the required position but do not screw home fully.
- 4.2.2. Locate the keyhole slots in the fan base over the screw heads and slide the base down.
- 4.2.3. Tighten screws down over base, taking care not to over-tighten.
- 4.2.4. The fan head will lock in 10° increments to allow the most effective position to be selected.(fig.1).







- 4.3. The fan is supplied with a switch providing 'off' and 3 speed settings.(fig.2)
- 4.4 When the fan is being used free-standing, ensure that the switch is in the 'off' position before connecting to mains power.
- 4.5. Ensure that the flex between the mains plug and the fan is routed so as not to present a trip hazard.

5. MAINTENANCE

IMPORTANT: Turn the fan OFF and disconnect from power supply before cleaning.

- 5.1. Use only a soft, damp cloth to clean the fan.
- 5.2. DO NOT immmerse the fan in water and NEVER allow water to drip into the motor housing.
- DO NOT use solvents or other chemicals to clean the fan. 5.3.
- 5.4. To clean the fan blades, remove front guard by removing the 5 screws situated on the reverse side of the fan guard.
- 5.5. Wipe the blades and guards clean then reassemble front guard.
- 5.6. When not in use, place the fan in its original box or otherwise cover to protect from dust and store in a safe, dry childproof location

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to: www.sealey.co.uk, email: sales@sealey.co.uk or phone:01284 757500.

Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.



WEEE Regulations

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of this product. CE

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group, Bury St. Edmunds, Suffolk,



01284 757500



www.sealey.co.uk



sales@sealey.co.uk