



2.5kw DIGITAL MICA HEATER

Operating Instructions



Model:
38100 (2.5kw)

Please read these instructions
and retain for future reference.



CONTENTS

Read all instructions before using this appliance and keep them for future reference.

PG.2	ASSEMBLY
PG.3/4	HOW TO USE
PG.5	TROUBLESHOOTING
PG.6	CLEANING & STORAGE
PG.7/8/9	GENERAL CARE & SAFETY GUIDE
PG.10	AFTER SALES SERVICE



WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.



ASSEMBLY

 
Read all instructions before using this appliance and keep them for future reference.




WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.

ASSEMBLY INSTRUCTIONS

1. Position the heater carefully upside down.
2. **Attaching castors:**
Slide the castor set fully into the grooves at the front end of the heater (control end).
3. **Attaching stand:**
Slide the foot support fully into the grooves in the base of the heater nearest to the rear of the heater.
4. Turn the heater the right way up.

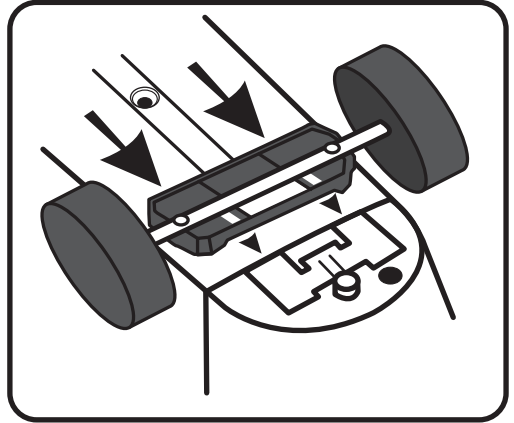

 Attaching the castors to the control side of the heater

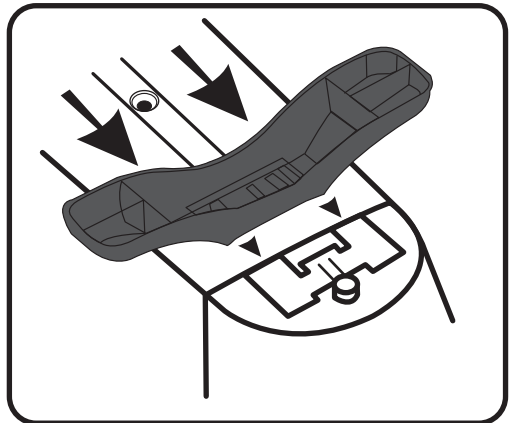

Attaching the stand to the rear side of the heater

HOW TO USE

Read all instructions before using this appliance and keep them for future reference.



WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.

NOTE: When switched on for the first time a slight odour may be emitted for a few minutes. This is harmless and occurs with most appliances as slight traces of dust or lubricants may have collected during manufacture.

- Place the heater on a level surface in a stable upright position.

POWER:

Turn the heater **ON** by pressing the **'POWER'** (⏻) button, the LED of the unit will display the current room temperature. Upon turning the heater ON the unit will be in the default **'HIGH HEAT'**.

 
HEATING POWER:

Pressing **'Low Heat / Down'** (⊖) button to select low heating power.
Pressing **'High Heat / Up'** (+) button to select high heating power.

TEMPERATURE SETTING

Press the **'TEMPERATURE SETTING'** (1°C) button, the **'SET TEMP'** will flash on.

- 3.1 Press the **'HIGH HEAT / UP'** (+) button to increase the desired temperature and the **'LOW HEAT / DOWN'** (⊖) button to decrease the desired temperature (Working temperature: 5-36°C). The LED will display the current room temperature about 5 seconds later after the setting.
- 3.2 When the air temperature reaches the **'SET TEMP'**, the heater will cut off.

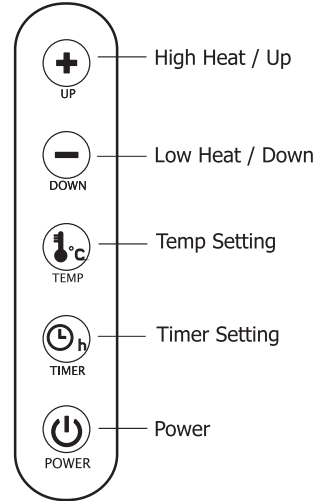

HOW TO USE

Read all instructions before using this appliance and keep them for future reference.

- 3.3 When the air temperature drops below the '**SET TEMP**', the heater will switch back on.
- 3.4 Note: It is normal for the heater to cycle **ON** and **OFF** as it maintains the '**SET TEMP**'.

 
TIMER SETTING

Press the '**TIMER SETTING**' (🕒) button, the '**TIMER**' will flash on.


- 4.1 Press the '**HIGH HEAT / UP**' (+) and the '**LOW HEAT / DOWN**' (-) button to increase or decrease the length of operation from 0.5 - 18 hours. The LED will display the current room temperature about 5 seconds later after the setting.
- 4.2 When the time reaches the preset '**TIMER**', the heater will cut off automatically.
- 5. To turn the heater OFF, press the '**POWER**' (🔌) button.

REMOTE CONTROL

- 1. All functions performed by the **REMOTE CONTROL** are identical to the Manual Controls Panel.
- 2. Battery replacement: Install one 3V Lithium battery.

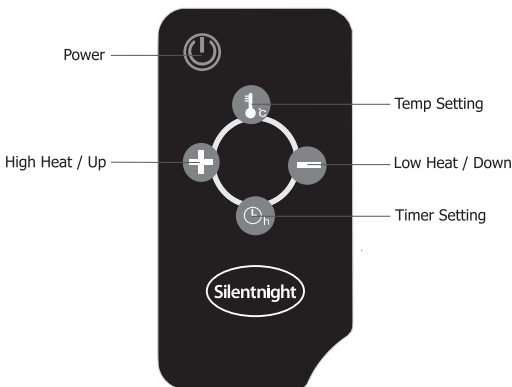

Changing the battery

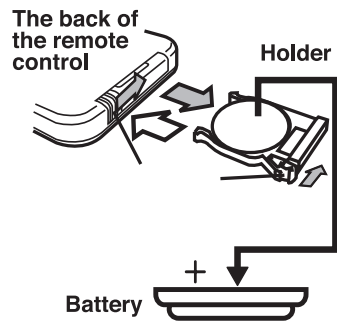 

TROUBLESHOOTING

Read all instructions before using this appliance and keep them for future reference.
If your heater fails to operate, please follow these procedures before contacting Customer service:

THE HEATER WILL NOT POWER ON.

The thermal cut-off has been activated.

Unplug and turn the heater off; allow it to cool for 30 minutes. Once the heater has cooled off, check to make sure that there are no objects on or adjacent to the unit. To resume operation, plug the unit back in.

Breaker/Fuse has been tripped.

Ensure unit is in OFF position. Plug in unit and attempt to turn on again.

Heater is not plugged into a 240V polarized outlet/receptacle.

Check your fuse box to confirm the breaker has not been blown. This may occur if the socket is shared between other high consumption appliances.

POWER LIGHT IS ON, BUT NO HEAT IS EMITTING FROM THE UNIT.

Room temperature has warmed up to thermostat setting.

To increase the room temperature follow instructions on page 3, point 3.

THE HEATER IS CREATING A BURNING SMELL.

This is normal when using for the first time, but if the burning smell persists then try the following...

Check & ensure there are no combustible materials 3' (0.9m) surrounding the heater.

Remove the combustible units adjacent to the heater.

The heater feet have not been properly installed on the unit.

Follow assembly instructions on how to attach front castors and hind legs to the unit.

CLEANING & STORAGE

Read all instructions before using this appliance and keep them for future reference.

CLEANING

- **IMPORTANT:** Turn off the heater. Switch off the power switch and disconnect the heater from the power socket. Wait for the heater to be completely cool before cleaning.
- Vacuum clean air vents and grilles to remove dust from these areas.
- To remove dust on external surfaces, wipe the heater with damp, (not wet) lint-free cloth rinsed in hot soapy water only. Do not use until completely dry.
- Do not use any harsh detergent or abrasive cleaners.
- Do not spray with liquids or submerge in liquids or water.
- Do not attempt to clean the interior of the heater.
- Do not attempt to open the heater casing at any time.

STORAGE

- Store the heater carefully in a dust-free area during the off season.
- It is ideal to store the heater in the carton it was supplied in. Neatly wind the cord of the heater to prevent damage to the cord.

Incorrect installation or commissioning.

- Incorrect electrical installation or fitment to an inappropriate supply. Any electrical installation (fitting and wiring of new wall sockets etc) must be performed by a qualified electrician.
- The warranty applies only to the goods supplied and does not cover any other damage incurred.

GENERAL CARE AND SAFETY GUIDE

Read all instructions before using this appliance and keep them for future reference.



WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.

- When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:
- Only use a socket of the same voltage as specified on the rating plate of this appliance.
- Do not cover or restrict airflow to the inlet or outlet grilles in any manner as the appliance may overheat and become a fire risk.
- Do not cover grilles, block entry or exits of airflow by placing the appliance against any surface. Keep all objects at least 1 metre from the front, side and rear of the appliance.
- Do not locate in areas of high foot traffic, ensure the power cord and heater are in view to avoid accidents.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- This appliance heats up when in use. To avoid burns, do not touch the front of the appliance or any of the grilles or vents.
- Before moving the appliance, switch off the appliance by unplugging it from the wall and allowing it to cool.
- Do not use the appliance to dry clothes.
- Do not insert or allow foreign objects or metal utensils into any ventilation or exhaust openings as this may cause an electric shock, fire or damage to the appliance.
- Do not operate in bathrooms, laundry areas or similar moist indoor locations. Never locate the appliance where it may fall into a bath or other water container.
- Do not immerse in liquid or use the appliance near water as this could create an electrical shock hazard.

GENERAL CARE AND SAFETY GUIDE

Read all instructions before using this appliance and keep them for future reference.

- If the appliance accidentally comes into contact with water switch off the power supply and do not touch the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrician for service or repair.
- Do not operate the appliance with wet hands.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- This appliance is not intended for outdoor use.
- Always operate upright, on a flat surface only.
- **CAUTION:** This product is NOT suitable to be used on long pile carpets.
- Unroll the cord before operating. Operating with a coiled cord may cause overheating and fire risk.
- The use of an extension cord with this appliance is not recommended.
- Do not remove the plug from the power socket until the appliance has been switched off.
- Always hold the plug when removing it from the wall, do not pull the cord.
- Always unplug the appliance when it is not in use.
- Do not allow the cord to come in to contact with the appliance surface during operation.
- Do not run the cord under carpeting, mats or rugs etc. Arrange the cord away from traffic areas so that it will not be tripped over.
- Do not twist, kink or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- This appliance is not intended for use by young children or infirm persons without supervision.

GENERAL CARE AND SAFETY GUIDE

Read all instructions before using this appliance and keep them for future reference.

- This appliance is intended for light domestic use and not for heavy duty commercial or industrial use.
- The appliance must not be located immediately below or in front of a socket outlet.
- Do not use this appliance with any type of external timer.
- Never remove the cover of the appliance - in case of a fault, contact a qualified Service person.
- Use this appliance only as described in this manual.
- Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the Hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

AFTER SALES SERVICE

Your product is guaranteed for three years from the date of purchase. Within this period, we undertake to repair or exchange this product free of charge provided it has been installed and operated in accordance to these instructions.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Should you require after sales service you should contact our **Customer Services help desk on 0151-448 6974**. It would assist us if you can quote the model number, series, date of purchase, and nature of the fault at the time of your call. The customer services help desk will also be able to advise you should you need to purchase any spares.

Please do not return a faulty product to us in the first instance as this may result in loss or damage and delay in providing you with a satisfactory service.

Please retain your receipt as proof of purchase.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.





©Silentnight Group Limited 2014
All rights reserved
Licensed by JELC

Exclusively manufactured for and distributed
by BML LIVERPOOL L24 9WD UK ©2014
All Rights Reserved.

Product may vary slightly from the image shown.
Specifications will however remain the same.