

# **Instruction Manual**


### PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.


! Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician

#### **Specifications**

Model	GL-HB01-100W50K-B	GL-HB01-150W50K-B	GL-HB01-200W50K-B	GL-HB01-250W50K-B
	GL-HB01-100W50K-W	GL-HB01-150W50K-W	GL-HB01-200W50K-W	GL-HB01-250W50K-W
Power:	100W	150W	200W	250W
Lumen:	15000LM	22500LM	30000LM	36000LM
Net Weight	6.0LBS	8.7LBS	9.9LBS	11.5LBS
Input Voltage	AC100-277V, 50/60Hz			
Operating Temperature	Not exceeding 45°C			
IP grade:	IP65, suitable for wet location			

#### **Dimensions**

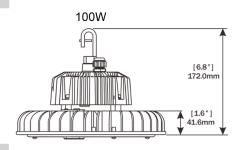

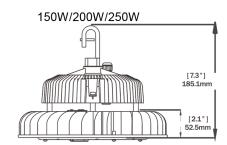

## Installation

- 1, The Installation must be carried out by professional electrician.
- 2. Ensure mains supply is switched off before commencing work.
- 3. Mark wall with appropriate fixing positions. Before drilling, ensure that the hole does not impinge on pipe work, cables or other building services.
- 4. The luminaire is supplied with professional cable. Using suitable IP rated enclosure terminate Brown or Black (Live), Blue or White (Neutral) and Green/ Yellow or Green (Ground) to switch supply.

Note: No "fixings screws or chain provided", please use appropriate fixings screws.

