

LED FLOOD LIGHT

Instruction Manual

EN

Thanks for purchasing STASUN products! Please read this manual carefully before operation and keep this manual for future reference.

SAFETY INSTRUCTIONS

Risk of electric shock!



- 1. Confirm the input voltage and frequency before use.
- 2. Turn off the power before installing or servicing.
- 3. Must have a qualified electrician install this light.
- 4. Keep out of the reach of children.
- 5. Do not touch or install the light with wet hands.
- 6. Do not install on flammable surfaces, such as plastics.
- 7. Do not cover the device. Keep it away from the heat source.
- 8. Never look directly at the lighted illuminant.
- Non-professionals are forbidden to disassemble, repair or modify this product.

Note: The light source of this light is not replaceable, the whole light shall be replaced when it reaches the end of life. The appropriate operating temperature of the fixture ranges from -20°C to 50°C.

 
PARAMETER

Wattage	Input Voltage	Frequency	Input Current	Lumious Flux	Color Temperature	Ingress Protection	Mounting Height
60W	110~130V AC	60Hz	0.60A	5,400LM	5000K±300K	IP66	≤5M/16FT
90W	110~130V AC	60Hz	0.82A	8,100LM	5000K±300K	IP66	≤6M/20FT
100W	110~130V AC	60Hz	0.90A	9,000LM	5000K±300K	IP66	≤6M/20FT
150W	110~130V AC	60Hz	1.40A	13,500LM	3000K±300K 5000K±300K	IP66	≤8M/26FT
200W	110~130V AC	60Hz	1.82A	18,000LM	5000K±300K	IP66	≤8M/26FT
300W	110~130V AC	60Hz	2.73A	27,000LM	3000K±300K 5000K±300K	IP66	≤10M/33FT
450W	110~130V AC	60Hz	4.10A	40,500LM	5000K±300K	IP66	≤10M/33FT
600W	110~130V AC	60Hz	4.10A	54,000LM	5000K±300K	IP66	≤12M/40FT


1

LIGHT STRUCTURE

Two-Head Light



Three-Head Light

 

MOUNTING ACCESSORIES



Tools Required (Not Included): Drill, Hammer, Wrench, Pen, Eye Protection, Stepladder


**Before installation, please make sure the light is in good condition and accessories are complete.

INSTALLATION INSTRUCTION


Connect the cable correspondingly.

L	LIVE	BLACK	*** IMPORTANT ***		
N	NEUTRAL	WHITE	Switch off the electricity at the fuse box/circuit breaker before		
±	EARTH	GREEN	proceeding with the installation.		

 
Step 1 Switch off the power.



 
Step 2 Mark the mount holes.



 
Step 3 Drill holes and insert the whole expansion bolts into the bolts, reput the spring the holes, then unscrew nuts and spring washers.



 
Step 4 Place the fixture over washers and nuts.



 Step 5 Screw the nuts tightly to expand the sleeves.



 Step 6 Adjust the light heads by provided wrenches. The installation is complete. Turn on the power.






^{**}Please lift the fixture by hold the bracket instead of pulling the cable.**

LIGHTING COVERAGE

Max. Lighting Area	
40-70m² / 430-753ft²	
55-90m² / 592-968ft²	
60-80m² / 645-861ft²	
110-140m² / 1184-1506ft²	
130-160m² / 1400-1722ft²	
150-190m² / 1614-2045ft²	
180-240m² / 1937-2583ft²	
230-300m²/ 2475-3228ft²	

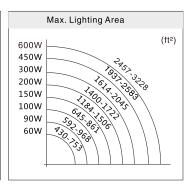

MAINTENANCE

- **Make sure the power is off before maintenance.
- Please periodically clean the surface of the light with a clean damp cloth.
- 2. Do not use any detergents or chemicals.

DISPOSAL

Please dispose of the light according to local regulations. For more information about electronic and electrical waste equipment disposal, recovery and collection points, please contact your local authority for details of recycling schemes in your area.

CONTACT

⊠: led@stasun.us

€: www.stasun.us

NOTE:

If you experience problems, please contact us through the above contact, STASUN qualified customer service will assist in resolving your query.