


# ELECTRIC INFRARED COOKER

**CLEARLINE**<sup>®</sup>  
APPLIANCES

LIFE MADE SMART

## INSTRUCTION MANUAL

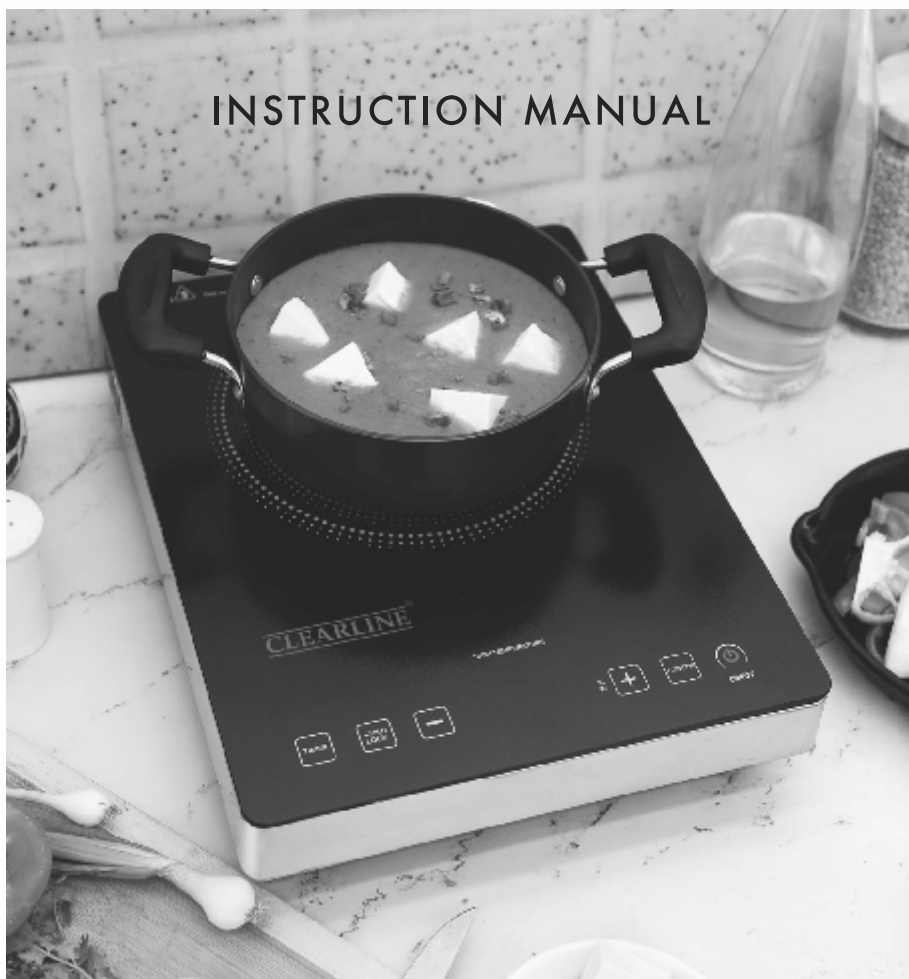

**IMPORTANT:** Read these instructions fully before using this Cooker.  
Retain these instructions for future reference.


## IMPORTANT SAFETY FUNCTIONS -

---

- Check that the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance and make sure the appliance is earthed.
- Do not use the appliance if the plug or the cord of the appliance is damaged.
- Children should be supervised to ensure that they don't play with the appliance.
- Do not cover the air vents while the cooker is in use.
- Do not touch the surface as it gets very hot during operation.
- Do not cover any part of the cooking plate.
- This appliance is only meant to be used in households.
- Place the appliance on a level surface and make sure that there is at least 10cm free space around it.

## KNOW YOUR CERAMIC COOKER -

---

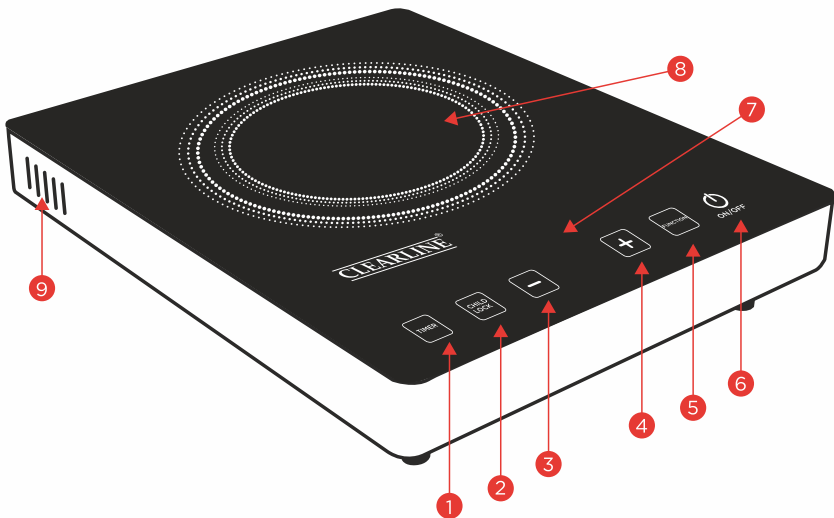

- |                             |                               |
|-----------------------------|-------------------------------|
| 1. Timer                    | 6. On/ Off                    |
| 2. Child Lock               | 7. High Temperature Indicator |
| 3. (-) Decrease Temperature | 8. Cooking Area               |
| 4. (+) Increase Temperature | 9. Air Vents                  |
| 5. Function                 |                               |

## USAGE -

---

- Insert the plug into the power socket, you will then hear a beep and all the lights will switch on for one second and then go off. Now just the power indicator will remain on.
- To enter standby mode, press the ON/OFF button. As you press the ON/OFF button, you will hear a beep and a sound and then the LED display will show - " \_\_\_\_ " .
- To start cooking on the infrared cooker, press the function button when the cooker is in standby mode.
- By default the cooker will start heating at its highest setting of 2000 Watts.
- To adjust the heat settings you can simply decrease/increase by pressing the (-)/(+) button respectively.
- The range of the heat setting is 200 Watts to 2000 Watts.
- The range of the temperature setting is 100°C to 600°C.
- If you wish, you can also adjust the heat setting according to the temperature. To do so, press the function button when the cooker is in operation and the LED display will start showing the default setting of 450°C centigrade. To adjust the heat settings you can simply decrease/increase by pressing the (-)/(+) button respectively.
- To switch off the cooker, press the ON/OFF button. The fan will still operate for around 10 minutes to enable the hot cooking surface to cool down faster.
- Once the surface temperature of the cooking area exceeds 80°C, the high temperature light switches on. This is normal after a few seconds of operation. Do not place your hand on or around the cooking area if the light is on.

## FOR CHILD LOCK FUNCTION -

---

While using the ceramic cooker press the child lock button on the ceramic cooker to enter child lock mode. The child lock button indicator light will glow indicating that the child lock function is on. To disable the child lock press and hold the lock button ( for 2/3 seconds) till you hear a beep and the child lock indicator light turns off. This indicates that the child lock is off.

## FOR TIMER FUNCTIONS -

---

- When the ceramic cooker is switched on; press the timer button on the cooker to set the timer for cooking. The timer can be put for a minimum of 1 minute and a maximum of 4 hours.
- Press the timer key once to start the timer. To cancel the timer function, press & hold the timer button for 2 seconds until you hear a beep and the display shows the power wattage instead of the time.

## WARRANTY

---

### Warranty is not valid if:-

- Appliance is not used in accordance with this user manual.
- Defects caused by improper and reckless use.
- Defects caused due to reason beyond control like abnormal voltage/unstable power supply, lightning, acts of god or damage during transportation after purchase.
- Repairs done by unauthorized personnel.
- Product used other than for domestic use.
- Normal wear and tear is not covered under warranty.

## CLEARLINE CUSTOMER SERVICE

---

This product carries a Warranty of 12 months from the date of purchase against defects caused by faulty workmanship and materials. The Warranty excludes defects caused by the product not being used in accordance with instructions, misuse, accidental damage and tampering with by unauthorized persons. In the event of any defect arising during Warranty Period, the same should be taken to your nearest dealer or wholesaler. It will then be taken care of as per the discretion of the company's representative. The warranty does not cover damage/defects caused by events beyond control like acts of god, lightning, abnormal power supply/voltage fluctuation.

### WARRANTY CARD

Serial No. \_\_\_\_\_

Bill No. \_\_\_\_\_

Model No. \_\_\_\_\_

Electric Infrared Cooker

Customer's Name : \_\_\_\_\_

Address : \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Dealer's Name & Stamp

Date of Purchase : \_\_\_\_\_

This warranty is valid only if your purchase is registered with us. Please ask your authorised dealer to fill up this attached "Mandatory Warranty Registration Form" and send it to us within one week of your purchase.

**CLEARLINE**<sup>®</sup>  
APPLIANCES

L I F E M A D E S M A R T

Marketed By:

**CLEARLINE APPLIANCES LIMITED**

177G, Industrial Area, Phase-I, Chandigarh - 160002

Incase of any complaints please contact: +91 172 4647707

or email us at [customercare@clearline.co.in](mailto:customercare@clearline.co.in)

or write to us at the above mentioned address

[www.clearline.co.in](http://www.clearline.co.in)

---