RICE COOKER

WITH KEEP WARM FUNCTION DRC 3.2L



LIFE MADE SMART



IMPORTANT: Read these instructions fully before using the Appliance.

Retain these instructions for future reference.









& STEAMING BASKET

WATER STORAGE

ONE TOUCH OPERATION, AUTOMATIC KEEP WARM FUNCTION & INNER POT WITH NON STICK COATING

- Can cook all kinds of rice Also for steaming idlis, vegetables, meat, fish, pasta etc.
 - Portable with handle Full metal outer body Steamer attachment to make idlis
- Condensed water droplet collector Anti drip concave shaped lid One year warranty

WHAT IS INSIDE THE BOX

Main Unit

Scoop

Measuring Cup

Inner Pot

Power Cord

Manual

Steamer Basket
















DESCRIPTION OF PARTS

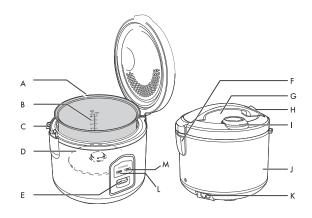

- A- Inner Pot
- B Water Level Indication
- C Scoop Holder
- D Heating Element
- E Control Lever
- F Dew Collector*
- G Outer Lid

- H Lid Release Button
- I Steam Vent
- J Outer Body
- K Power Socket
- L Cooking Indicator
- M Keep Warm Indicator

(*To Collect Condensed Steam/droplets)

SPECIFICATION

DRC 3.2L

Watts - 1200W :230V- 50Hz Rice Volume (cups) - 3.2L

IMPORTANT SAFEGUARDS

- Do not immerse the rice cooker in water, nor rinse it under the tap.
- · Check that the voltage indicated on the rice cooker is compatible with that of your electrical supply.
- Only connect the rice cooker to an Earthed power outlet. Make sure to insert the plug firmly into the power socket.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring or the main body is damaged.
- · Any repair must be carried out by an authorized service center.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not place cloth on the lid while the rice cooker is operational.
- This appliance is not for outdoor use.
- Keep the power cord out of the reach of the children. Do not let the power cord hang over the edge of the table or worktop on which the rice cooker stands.
- Make sure the heating element; the temperature sensor, and the outside of the inner lid are clean
 and dry before you put the plug in the power socket.
- Do not plug in the rice cooker or press the control lever with wet hands.

CAUTION

- Never use any accessory or parts from other manufacturers that Clearline does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Do not expose to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the rice cooker to direct sunlight.
- Place the rice cooker on a stable and level surface.
- Always put the inner pot in the rice cooker before you put the plug in the power socket & switch it
 on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot incase it is deformed.
- The accessible surfaces may become hot when the rice cooker is operating.
- Beware of hot steam coming out of the steam vent during cooking or out of the rice cooker when
 you open the lid.
- · Do not lift and move the rice cooker while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent over flow.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.

- . Only use the cooking utensils provided.
- To avoid scratches, it is not recommended to use ingredients with hard shells.
- Do not insert metallic objects or alien substances into the steam vent.
- · Do not place a magnetic substance on the lid.
- Do not use the rice cooker near a magnetic substance.
- . Always let the rice cooker cool down before you clean or move it.
- · Always clean the rice cooker after use.
- Do not clean the rice cooker in a dishwasher.
- · Always unplug the rice cooker if not used for a longer period.
- . This rice cooker is intended to be used in household only.

USING THE RICE COOKER (

Before first time use:-

- Take out all the accessories from the inner pot. Remove all packaging material.
- Clean the parts of the rice cooker thoroughly before using it for the first time.
 (See note on cleaning & maintenance)
- Make sure all parts are dry.

Preparation before use:-

- · Measure the rice using the measuring cup provided.
- Wash the rice thoroughly. Always wash the rice in a separate container to avoid damaging the non-stick coating of the pot.
- · Put the washed rice in the inner pot. Rotate the inner pot slightly
- Add rice and water in the ratio 1:2. Make sure that you do not exceed the maximum level
 indicated on the inner pot as this may cause the water to over flow.
- Press the lid release button to open the lid.
- Wipe the outside of the inner pot dry, put it in the rice cooker. Check that the inner pot is in proper contact with the heating element.
- . Close the lid of the rice cooker. Put the plug in the power socket.

NOTE- DO NOT EXCEED THE QUANTITY INDICATED ON THE INSIDE OF THE INNER POT YOU CAN ALWAYS CHANGE THE RATIO OF RICE AND WATER FOR DIFFERENT TYPES OF RICE AND YOUR OWN COOKING PREFERENCE.

For instance if you cook 8 cups of rice, add water up to the 8 cup level indicated on the scale

COOKING

- · Press down the control lever, the cooking indicator lights up.
- When cooking is finished the cooking indicator (COOK) will be off.
- The rice cooker switches to keep warm automatically and the keep warm indicator lights up.

STEAMING

- Measure a few cups of water with the measuring cup. The amount of water varies according
 to the quantity of the food being steamed.
- · Pour the water into the inner pot.
- Put the steam basket into the inner pot.
- · Put the food, which is to be steamed in the steam basket.
- Close the lid of the rice cooker, put the plug in the power socket.
- · Push down the control lever, the cooking (COOK) indicator lights up.
- When steaming is finished pull up the control lever.
- The rice cooker switches to keep warm mode (KEEP WARM) and the keep warm indicator lights up.

NOTE - 3 CUPS OF WATER WILL Boil. IN APPROX. 7 MINUTES.

NOTE - IF YOU USE A SEPARATE PLATE, PUT IT IN THE STEAMING BASKET.

NOTE - IF YOU COMBINE STEAMING AND RICE COOKING, MAKE SURE YOU MEASURE RICE
THAT LEAVES ENOUGH ROOM FOR THE STEAMING BASKET. THE STEAMED FOOD WILL BE
READY WHEN THE RICE COOKING IS FINISHED.

NOTE - USE A KITCHEN GLOVE OR CLOTH AS THE POT & STEAMING BASKET WILL BE VERY HOT. NOTE - MAKE SURE THE VOLUME INDICATOR IS NOT EXCEEDED AS THIS MAY CAUSE THE RICE COOKER TO OVERFLOW.

KEEPING WARM

- When the rice cooking process has finished, the rice cooker automatically switches to keep warm mode. The cook light goes out and the keep warm lights turns on.
- To preserve the taste of the rice, do not keep the rice warm for more than 6-8 hours.
- The cook light may go on occasionally to heat up the rice while on keep warm mode to keep the rice at the right temperature.
- To end the keep warm mode pull up the control lever and switch off the main socket.

CLEANING AND MAINTENANCE

Unplug the rice cooker before starting to clean it. Wait before the rice cooker has cooled down before cleaning it.

Inside the rice cooker:-

Wipe the inside of the outer lid and main body with a rung out damp cloth. Make sure all food residues stuck to the rice cooker are removed. Clean the heating element with a rung out damp cloth

Outside Surface:-

Wipe with a cloth soaked in soap water. Then use a dry cloth to wipe it.

Clean the control panel only with a dry cloth. The rice Spoon, inner pot, steaming basket, measuring cup can be cleaned by soaking in hot water and cleaning with a soft sponge.

WARRANTY

Warranty is not valid if:-

- · Appliance is not used in accordance with this user manual.
- · Defects caused by improper and reckless use.
- Defects caused due to reason beyond control like abnormal voltage / unstable power supply, lightning, acts of god or damage during transportation after purchase.
- Repairs done by unauthorized personnel.
- Product used other than for domestic use.
- Normal wear and tear and scratches / peeling of the non-stick coating is not covered under warranty.

CLEARLINE CUSTOMER SERVICE

This product carries a Warranty of 12 months from the date of purchase against defects caused by faulty workmanship and materials. The Warranty excludes defects caused by the product not being used in accordance with instructions, misuse, accidental damage and tampering with by unauthorized persons. In the event of any defect arising during Warrant period, the same should be taken to your nearest dealer or wholesaler. It will then be takecare of as per the discretion of the company's representative. The warranty does not cover damage/ defects caused by events beyond control like acts of god, lightening, abnormal power supply/ voltage fluctuation.

WARRANTY CARD	
Serial No.	Bill No.
Model No.	DRC 3.2L
Customer's Name :	
Address :	
	Dealer's Name & Stamp
Date of Purchase :	



Imported & Marketed By:

CLEARLINE APPLIANCES LIMITED

177G, Industrial Area, Phase-I, Chandigarh - 160002

Incase of any complaints please contact: +91 172 4647707 or email us at customercare@clearline.co.in or write to us at the above mentioned address www.clearline.co.in