

**CLEARLINE<sup>®</sup>**

## Instructions for Use

### **Auto Pop Toaster** with Electronic Browning Control



## CONTROLS

1. Bun Warmer Attachment Slide Switch
2. Pop Up Lever
3. Mid Cycle Cancel/Stop Button
4. Reheat Switch with LED 'on' Light Indicator
5. Variable Electronic Browning Control
6. Slide Out Crumb Tray
7. Cord Wrap
8. Plug
9. Bun Warmer Rack

## TECHNICAL SPECIFICATIONS

Voltage: 230 V AC, 50 Hz

Wattage: 950 W

Suitable for two slices of Bread

## OPERATING INSTRUCTIONS

For Toasting Bread

1. Place the Toaster on a flat surface.
2. Plug in the toaster to a standard 230 V AC earthed power outlet and Switch on the appliance.
3. If you are only toasting bread then slide then slide the Bun Warmer Attachment Slide Switch ① outwards so that Bun Warmer Rack is in lying position.
4. Put the required number of bread slices, one or two in the slot and Select the degree of browning by turning the Variable Electronic Browning Control ⑤ in clockwise direction i.e. from 1-7.



Browning Degrees

1-2 is used for light browning

3-5 is used for medium browning

6-7 is used for dark browning

The toaster can be adjusted to all the intermediate settings provided on the Browning Control ⑤

Now push the Pop Up Lever ② downwards until it locks in place. This will switch the appliance on and bread will start getting heated.

**NOTE :-** The Pop Up Lever ② will not stay in the 'On' position until electric current is passed into the appliance.

After the specified time the Pop Up Lever ② will automatically come up and the toasts will pop up. The heating element will automatically switch off. The time taken to toast the bread depends upon the Browning Control ⑤ setting.

You can interrupt the process of toasting by pressing the STOP Button ③ on the toaster.

If you are busy doing something and your toasts turn cold, don't worry! There is a REHEAT ④ button. Just insert your toasts again and pull down Pop Up Lever ② and then press the Reheat Switch 4. The LED 'On' light indicator can be seen lighted. (Recommendation-Reheat Should be used on 1-2 settings of Browning Control ⑤).

For Warming Buns

1. After plugging in the Toaster slide the Bun Warmer Attachment Side Switch ① inwards till it is fixed at one place so that the Bun Warmer Rack ⑨ is in standing position.
2. You can select the heating degree by turning Browning Control 5 Clockwise and adjusting it from 1-7.
3. Place the buns on top of the Bun Warmer Rack 9 and push down Pop Up Lever ② so that the heating element is switched on.
4. You can even heat garlic bread/buttered bread by placing it on the Bun Warmer Rack ⑨ but never try to put them in the toasting slots.
5. After using the Bun Warmer Rack ⑨ slide the Bun Warmer Attachment Slide Switch ① outwards so that the Bun Warmer Rack 9 is in lying position.

Note:- This Should Be Done To Avoid Anyone From Lifting The Toaster From The Rack And Save It From Falling Down.

### CLEANING INSTRUCTIONS

1. Switch off the toaster and remove the Plug ⑧ from the main socket.

2. Wait for the appliance to cool down.
3. Wipe the body of the toaster with damp cloth.
4. Pull out the Crumb Tray ⑥ and empty it gently and re-insert in its place.
5. Never shake the appliance up side down to remove the crumbs and never insert brushes or instruments for cleaning crumbs from the slots.
6. Do not immerse the appliance or its plug in water and never use Detergents or chemicals for cleaning the toaster.

### TOASTING TIPS (Our recommendation)

1. It may take you sometime to select your ideal browning position, depending upon how brown and crisp you like your toasts. So, you may start from setting ② of Browning Control ⑤ and then adjust the knob accordingly.
2. The Browning Control ⑤ may be adjusted in position 3-5 for fresh breads and 6-7 for frozen Breads.
3. Reheating of toasts may be done on settings 1-2 on Browning Control 5 so that the toasts do not char while re-heating. But this would depend on how much the bread is already toasted.
4. It is suggested that you use unbroken slices for toasting.

### PRECAUTIONS

1. Never pick up the toaster by holding it from the Bun Warmer Rack ⑨
2. Do not use any metal object for picking the bread slices from the Toaster even if the slice is stuck. It may result in damage to the heating element.

3. Do not touch the metal parts of the toaster while in use or Immediately after use.
4. Do not keep any inflammable objects over or close to the appliances.
5. Always keep the appliance on a flat surface
6. Do not use without inserting the crumb tray 6 in its place
7. Keep the Bun Warmer Rack ⑨ in downward position when toasting Bread.
8. Do not pull out the Crumb Tray ⑧ for cleaning when the toaster is in Use.
9. Never try to toast the bread with butter or any other topping. You may warm it on the Bun Warmer Rack ⑨ provided they are topped with a topping which does not drip when heated.
10. Never put water directly on the appliance while cleaning, always wipe It with a damp cloth.
11. Never lift the Pop Up Lever ② manually.
12. Wind the cord on the Cord wrap ⑦ when the appliance is not in use.

### CLEARLINE CUSTOMER SERVICE

This product carries a guarantee for 24 months from the date of purchase against defects caused by faulty workmanship and materials.

The guarantee excludes defects caused by the product not being used in Accordance with instructions, misuse, accidental damage and tampering with by unauthorized persons,

In the event of any defect arising during guarantee period, the same Should be taken to your nearest dealer or wholesaler. It will then be taken Care off as per discretion of the company's representative

## GUARANTEE CARD

PRODUCT .....

SERIAL NO.....

PURCHASER NAME AND ADDRESS.....

.....

DEALERS NAME AND ADDRESS .....

.....

CASH MEMO NO. ....

DATE OF PURCHASE .....

In case of any complaint Please Contact :

**Clearline Appliances Limited** 177G, Industrial Area Phase 1, Chandigarh. 160002,  
Telephone No. 09218404341 Email : [customercare@clearline.co.in](mailto:customercare@clearline.co.in)