HYGIENIC & HANDS-FREE DOUGH MAKER ATTA KNEADER



INSTRUCTION MANUAL



IMPORTANT: Read these instructions fully before using the Appliance.
Retain these instructions for future reference.

SAFETY INFORMATION

When using any electrical appliance, basic safety precautions should always be followed, including the following-

- Read the instructions carefully
- Do not use outdoors.
- Do not touch moving parts.
- The use of this appliance by young children and infirm persons without supervision is not recommended.

 Do not allow children to play with the appliance. Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or
 has been damaged in any manner. Call customer service for any information or examination, repair
 or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer is not recommended and may be hazardous.
- · To protect against electrical shock, do not immerse cord, plug or the unit in water or any other liquid.
- Do not let cord hang over edge of table or counter or touch hot surfaces including a stove.
- Do not place on or near a hot gas or electric burner, heated oven or any other heat source.
- Do not use the appliance for other than its intended use.
- Provide four to six inches of air space above, behind and on both sides for ventilation.

PRODUCT FOR HOUSEHOLD USE ONLY.

Do not operate another high wattage appliance on the same circuit with the dough maker, in order to avoid circuit over load.

ASSEMBLY INSTRUCTIONS:-

Usage Instructions:-

- 1. Make sure the switch is in "OFF" position.
- 2. Place the bowl on the housing correctly. (See fig.)
- 3. Fix the blade on the bowl shaft. (See next page)
- 4. Make sure the bowl is in place and stable before switching on.
- 5. Lock the lid after adding ingredients, then start the unit.








- 6. Max capacity (when kneading dough) is 4 cups (approx) or 500 grams of flour (atta) with the proportion of water 50% or more/less for required consistency.
- 7. The unit will auto shut off if over heated due to the safety thermal cut off. You can restart after switching off and after the motor cools down.
- 8. Continuous running time should not exceed 10 minutes when kneading dough, and not exceed 15 minutes when whipping egg whites.
- 9. Remove the bowl only when the unit stops running.

NOTE: Exceeding the maximum capacity will cause the ball of kneaded dough to put pressure on the lid and will result in breaking of the lid locks/hinge.

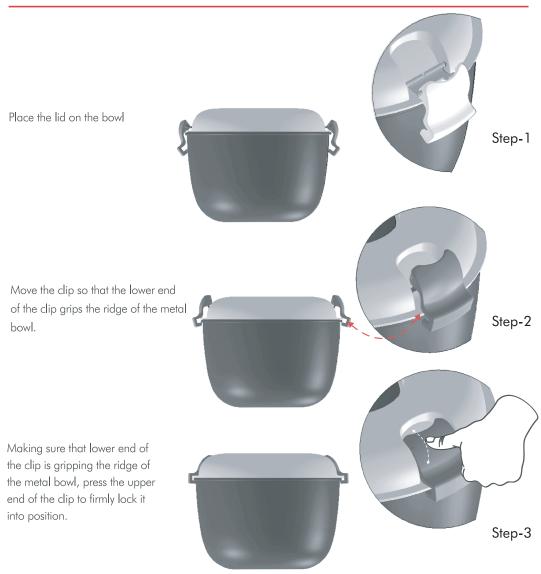

SWITCH/TIME CONTROL-

- 1. The On/Off Switch has a 15 minute timer control.
- 2. Make sure the switch is in "OFF" position before plug-in.
- 3. Set the time needed (0-15 minutes) by turning the knob clockwise and to start the unit.
- 4. To stop the unit, turn the knob anti clock-wise to "OFF" position.



HOW TO PLACE THE BLADE

- Make sure the switch is on "OFF" position before fixing the dough blade.
- Insert the blade onto the "D" shaped shaft in the mixing bowl.
- The dough blade will only perform if it is placed properly on D-shaped shaft in the mixing bowl.
- To remove the blade, switch off the unit and wait for the unit to stop running. Remove the cover and then remove the blade.



Depending on the type of atta and your preference, you can vary the amount of water to be added to the atta. Normally atta & water is to be added in the ratio 2:1.

WARRANTY

Warranty is not valid if:-

- Appliance is not used in accordance with this user manual.
- Defects caused by improper and reckless use.
- Defects caused due to reason beyond control like abnormal voltage/unstable power supply, lightning, acts of god or damage during transportation after purchase.
- Repairs done by unauthorized personnel.
- Product used other than for domestic use.
- Normal wear and tear and scratches/peeling of the non-stick coating is not covered under warranty. (valid for model with non stick bowl)

CLEARLINE CUSTOMER SERVICE

This product carries a Warranty of 12 months from the date of purchase against defects caused by faulty workmanship and materials. The Warranty excludes defects caused by the product not being used in accordance with instructions, misuse, accidental damage and tampering with by unauthorized persons. In the event of any defect arising during Warranty Period, the same should be taken to your nearest dealer or wholesaler. It will then be taken care of as per the discretion of the company's representative. The warranty does not cover damage/defects caused by events beyond control like acts of god, lightning, abnormal power supply/voltage fluctuation.

WARRANTY CARD		
Product : Dough Maker		
Serial No.	Bill No.	
Customer's Name :		
Address :		
		Dealer's Name & Stamp
Date of Purchase :		

PLEASE RETAIN ORIGINAL INVOICE. IT IS MANDATORY FOR WARRANTY PURPOSES.



Marketed By:

CLEARLINE APPLIANCES LIMITED
177G, Industrial Area, Phase-I, Chandigarh - 160002

Incase of any complaints please contact: +91 172 4647707 or email us at customercare@clearline.co.in or write to us at the above mentioned address www.clearline.co.in