

CLEARLINE[®]

Electric Infrared Halogen Cooker



INSTRUCTION MANUAL

Please read and retain these instructions for future reference


IMPORTANT SAFETY INSTRUCTIONS

- Check that the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket. Always make sure the plug is inserted firmly into the socket.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the supply cord is damaged, it must be replaced by authorized service center.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the mains cord out of the reach of children. Do not let the mains cord hang over the edge of the table or work top on which the appliance stands.
- Make sure the cooking plate is clean and dry before you switch on the appliance.
- Do not cover the air vent while the halogen cooker is operating.
- Do not plug in the appliance or operate the control panel with wet hands.
- Do not touch the cooking plate after cooking as the surface is very hot.
- Do not cover any part of the cooking plate.
- If the surface of the cooking plate is cracked, switch off the appliance and do not use it anymore to prevent the risk of electric shock, short circuiting or fire.
- Do not expose the appliance to hot gas, steam or damp heat. Do not place the appliance on or near an operating or still hot stove or cooker.
- Always switch off the appliance before you unplug it.
- This appliance is intended to be used in household and similar applications.
- Place the appliance on a stable, horizontal and level surface and make sure there is at least 10cm free space around it.
- Do not place anything between the cookware and the cooking plate.
- Do not lift and move the appliance while it is operating.
- Do not store flammable materials and liquids near or on the appliance.

Important

- Never immerse the appliance in water or rinse it under the tap.

Know your halogen cooker :

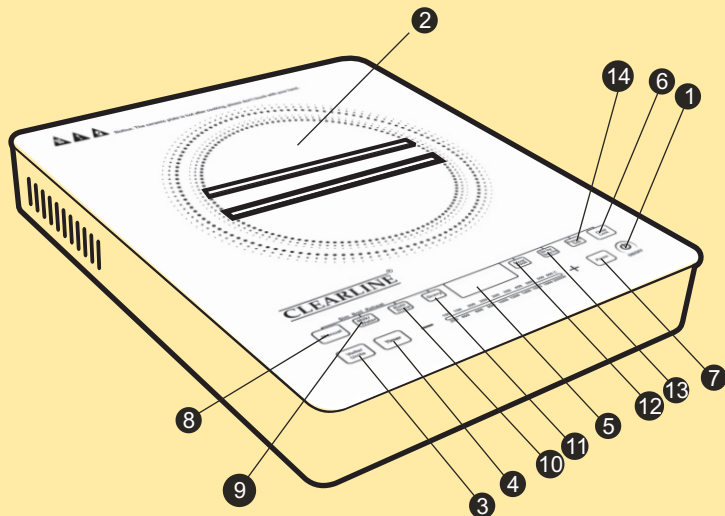

Description:

1. Power (on/off)
2. Cooking area
3. Volts/Units
4. Timer button
5. Led Display
6. Child Lock
7. Pause

Auto Cook Menu Options:

8. Manual
9. Milk/Water (Sim/Boil/Reheat)
10. Roti/Dosa
11. Gravy
12. Slow Cook
13. Stir fry/Deep fry
14. Pressure Cook

TECHNICAL SPECIFICATIONS

Voltage : 230V, AC, 50 Hz

Wattage : 2000W

Operating Instructions

Cooking mode		Usage
Manual Mode		With Power on, press manual once to enter Manual Mode. The default setting is cooking time of 2 hours, 300 degrees/ 1000 watts. (+)... (-) settings can vary the heat setting at any time from 200 watts to 2000 watts & timer setting can be varied from 1 minute to 3 hours.
Milk/Water	Sim Mode	Press the manual mode till the indicator comes on sim mode. The default setting is cooking time of 45 min, 200 degrees/ 600 watts. (+)...(-) setting can change the heat setting at any time from 200 watts to 800 watts & timer setting can be varied from 1 minute to 1 hour.
	Boil Mode	Press the manual mode till the indicator comes on boil mode. The default setting is cooking time of 45 min, 300 degrees/ 1000 watts. (+)... ..(-)setting can change the heat setting at any time from 200 watts to 1000 watts & timer settings can be varied from 1 minute to 3 hours.
	Reheat Mode	Press the manual mode till the indicator comes on reheat mode. The default setting is cooking time of 30 min, 100 degrees/ 200 watts & timer setting can be varied from 1 minute to 3 hours. We can't change the temperature setting in this setting.
Roti/Dosa - Mode		Press the manual mode till the indicator comes on roti/dosa mode. The default setting is cooking time of 60 minutes, 300 degrees/ 1000 watts. (+)... ..(-)setting can change the heat settings at any time from 200 watts to 1000 watts & timer setting can be varied from 1 minute to 3 hours.

Continued on the next page.....

Cooking mode	Usage
Gravy - Mode	Press the manual mode till the indicator comes on gravy mode. This setting can be used to make a gravy dish from the beginning to the end. The halogen cooker provides moderate heating of 600 watts for 5 minutes. You can prepare Tadka during that time. Then the halogen cooker switches to a higher power level of 1000 watts to roast vegetables, meat, and other ingredients for 13 minutes. After that it automatically switches to a lower power level of 200 watts for another 27 minutes. You may also increase/decrease the time setting as per your requirement.
Slow cook - Mode	Press the manual mode till the indicator comes on slow cook mode. The default setting is cooking time of 180 minutes, 200 degrees/ 600 watts. The heat setting can't be changed in this case. The timer settings can be varied from 1 minute to 3 hours.
Stir Fry/Deep Fry Mode	Press the manual mode till the indicator comes on stir fry/deep fry mode. The default setting is cooking time of 180 minutes, 400 degrees/ 1200 watts. (+)...(-) setting can change the heat setting at any time from 600 watts to 1200 watts & timer setting can be varied from 1 minute to 3 hours.
Pressure cook - Mode	Press the manual mode till the indicator comes on pressure cook mode. The default setting is cooking time of 30 minutes, 450 degrees/ 1400 watts. (+)...(-) settings can change the heat setting at any time from 200 watts to 1400 watts & timer setting can be varied from 1 minute to 45 minutes.

Important Note : It is advised to use utensils with flat base. The utensils having a curved base may shake & spill out liquids when heated. This may cause injury/ burns to user and may damage the appliance also.

Refer to below table for more details of different cooking modes.

Cooking mode	Default cooking time (minute)	Cooking temperature range	Adjustable Cooking time range (minute)
Manual Mode	120	Keep Warm - 300°C	1-180
Milk/Water - Sim Mode	45	Keep Warm - 200°C	1-60
Milk/Water - Boil Mode	45	Keep Warm - 300°C	1-180
Milk/Water - Reheat Mode	30	Keep Warm - 100°C	1-180
Roti/Dosa - Mode	60	Keep Warm - 300°C	1-180
Gravy - Mode	45	as per the preset	1-180
Slow cook - Mode	180	200°C	1-180
Stir Fry/Deep Fry - Mode	180		1-180
Pressure cook - Mode	30	Keep Warm - 450°C	1-45

Setting up the Child lock

When the halogen Cooker is working, keep the child lock button press till the indicator gets on.

To comeback normal mode, keep the child lock button press till the indicator goes off.

Timer Settings

Press timer button. The minutes portion of display will start to blink.

Use (+) and (-) to set the minutes accordingly. The minutes range can be adjusted from 0 to 59 minutes.

Press the timer button again, the hours portion of display will start to blink.

Press (+) and (-) to set hours accordingly. The hour range can be adjusted from 0 to 2 hours.

Maximum setting allowed is 2 hours & 59 minutes.

Settings will automatically set within a few seconds.

Cleaning and maintenance

- Never immerse the appliance in water nor rinse it under the tap.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not put vinegar on the ceramic cooking plate.
- Unplug the appliance and let it cool down.
- Clean the appliance with a damp cloth and if necessary, with some mild cleaning agent.
- Improper use can lead to scratches on the cooking plate. To avoid discolouring and scratches use the appliance according to the instructions in this user manual and always clean the appliance and cookware properly after use.

Storage

- Do not place heavy objects on the ceramic cooking plate as it is breakable.
- Do not store the appliance in a hot place, for example near a cooker. If you are not going to use the appliance for a long period of time, it is advisable you to store the appliance in a dry and safe place.

CLEARLINE CUSTOMER SERVICE

This product carries a Warranty of 12 months from the date of purchase against defects caused by faulty workmanship and materials. The warranty excludes defects caused by the product not being used in accordance with instructions, misuse, accidental damage and tampering with by unauthorized persons. In the event of any defect arising during the warranty period, the same should be taken to your nearest dealer or wholesaler. It will then be taken care of as per discretion of the company's representative.

Breakage of ceramic cooking plate being a glass item is not covered under warranty.

Halogen heating tubes also carry no warranty.

Warranty Card

SERIAL No. _____

PURCHASER'S NAME & ADDRESS _____

DEALER'S NAME & ADDRESS _____

DEALER'S SIGNATURE _____

BILL NO. _____ DATE OF PURCHASE _____

Marketed By

CLEARLINE APPLIANCES LIMITED

177-G, Industrial Area, Phase-I, Chandigarh - 160 002 (INDIA)

In case of any complaint please Contact Above or
call at 09218404341 or Email at : customercare@clearline.co.in