

CLEARLINE[®]

**Steam Iron
Jet Lite**



INSTRUCTION MANUAL

Please read and keep these instructions

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed including the following:-

1. Read all the instructions.
2. Use the iron only for its intended use.
3. To protect against the risk of electric shock do not put the appliance in water or in any other liquid.
4. Close supervision is necessary when any appliance is used near children.
NEVER ALLOW A CHILD TO USE THIS PRODUCT
5. The iron should always be put off by turning the temperature control dial to "MIN" before plugging or unplugging from the socket. Never yank the cord to disconnect from the socket, instead grasp plug and pull to disconnect.
6. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around the iron before storing.
7. Always disconnect the iron from the electrical socket when filling the water or emptying and when not in use.
8. Do not use outdoors.
9. Do not operate the iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron but contact customer care for advice. Incorrect reassembly can cause a risk of electric shock when the iron is used.
10. Do not leave the iron unattended whilst plugged in or on an ironing board. Never allow the mains lead to over-hang the work surface.
11. Burns can occur from touching hot metal part, hot water or steam. Use caution when you turn the steam iron upside down there may be hot water in the water tank.

Special instructions

1. If iron does not work, check the following points;
Has the temperature been set to the required temperature? Is the plug in its socket? Is the plug itself or the socket faulty? (Check by plugging in another appliance)
2. Warning: when not in use, your iron should never be placed flat and left on the ironing board.
3. To prevent damage to textile being ironed, follow the temperature guide carefully (test the inside of the hem of the garment)
4. When ironing is complete, remove the plug from the socket, empty any remaining water from the tank and allow to cool before storage.
5. If you drop or severely knock your iron this could cause internal damage even if the outside appear alright. Have it checked by authorised Service Centre.
6. It is recommended that you use up one beaker of water by operating your iron's steam and shot of steam functions before ironing any clothes as some dripping may occur while your iron steam system is activated.

Save these instructions

ELECTRICAL REQUIREMENTS

Check that the voltage on the plate of your appliance corresponds with your house electricity supply which must be A.C. (alternating Current)

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

 
IMPORTANT THE PLUG REMOVED FROM THE MAINS LEAD, IF SEVERED, MUST BE DESTROYED AS A PLUG WITH A BARED FLEXIBLE CORD IS HAZARDOUS.

Instructions for use

Temperature guide

Heat setting marking on the adjustable control dial of Clearline Jetlite irons those of the International Textile Care labelling code.

Symbol				
	(120°C Max) Cool	(160°C Max) Warm	(210°C Max) Hot	
Control knob Position	Do not iron at all	●	● ●	● ● ●
Fabric	Nylon acetates e.g. Acrilan, Polyester	wool, polyester mixtures e.g. polyester/ cotton	Cotton, Rayon, Rayon mixtures e.g. Rayon/ Linen	
Ironing	Iron on wrong side If moisture required Use damp cloth (Not Acetate)	Fabrics requiring this setting usually require steam pressing for heavy cotton denim etc.		
With water in tank ← Dry and spray → ← steam/spray/shot of steam →				
← Self clean →				
Without water in tank ← Dry ironing →				

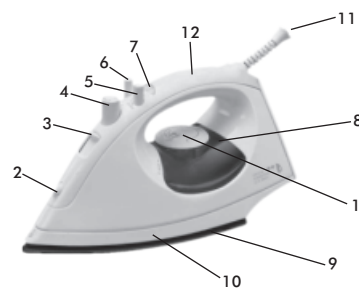

1. Temperature control dial
2. Spray nozzle
3. Lid
4. Steam dial
5. Spray button/Shot of Steam
6. Jet of Steam
7. Indication light
8. Water tank
9. Sole plate
10. Skirt
11. Power cord
12. Handle

Before Use

Note: - The Steam facility should only be used on garments which are suitable for ironing at 2 dot, 3 dot and "MAX" Setting.

Textiles and clothes are supposed to carry ironing instructions. If you are not sure which setting to use, you could follow the fabric guide on page 3. Otherwise test the temperature by ironing the hem of the garment or similar area first.

If you turn the temperature down from a hot setting to a cooler setting wait until the iron temperature has stabilized before you continue ironing.

Sort the laundry out first – Wool with wool, Cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature and progress to the higher ones because the iron heats up quicker than it cools down.

If the fabric consists of various kinds of fibres (e.g. Cotton with polyester) you must always select the lowest ironing temperature of the composition of those fibres

IRONING

Important:

Please read the section "Important Safeguards"

Special instructions

Choice of water

This iron can be used with normal tap Water.

If the water in your area is particularly hard, it is advisable to use distilled or demineralised water to prevent the scale forming on the critical point of the iron.

Do not use chemically de – scaled water.

Filling With Water

 
Ensure that the iron is disconnected from the power supply before filling.

Turn the steam dial (4) to dry position.

Open the lid (3) fill water

through the water filling aperture (Fig 3).

Close the lid.

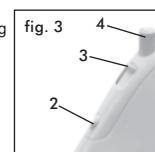

Note :

Do not fill higher than indication "max" of the water tank in order to avoid spilling out of water.

Do not fill with anything but water. If you have to refill while ironing, remove the mains plug from the wall socket before filling.

Pour out any remaining water after use.

Setting the temperature

 
Insert the plug in the wall socket and stand the iron upright

Set the temperature control dial (1) to the correct temperature as indicated in the ironing instruction or in the label.

The correct temperature will be reached when the indication light has gone. The indication light will be on and off from time to time indicating that the selected temperature is being maintained.

Spraying

At any temperature by pressing on the spray button (5) a couple of time, the laundry can be damped down

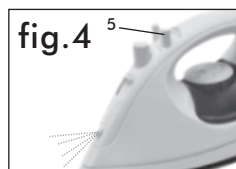

Ensure that there is enough water in the water tank.

Steam – Ironing

As indicated on the temperature control dial and the temperature table, steam ironing is only possible at higher ironing temperature.

*** or MAX for maximum steam.

Ensure that there is enough water in the water tank.

Stand the iron on its rear side.

Insert the plug into the wall socket.

Set the temperature control dial (1) at the required position with the higher ironing temperature range

*** or MAX

Wait a little while for the indication light (7) to go out and to come on again.

Set the steam control dial (4) to the required position. Then the steam will emerge from the vents in the soleplate.

Notice:

Water may leak from the soleplate if the temperature selected is too low, or if steam is used continuously for some time. This will then cause stains if it happens, set the temperature slide control to the advised position. Steaming will re-commence as soon as the appropriate temperature has been reached.

SHOT OF STEAM

Set the temperature control dial (1) to the "MAX" position.

By pressing the steam button (6) a Shot of Steam is emitted from the soleplate.

This can be very useful e.g when removing stubborn creases. The Shot of steam facility can be used only while ironing with high ironing temperature (positions *** or "MAX").

Dry ironing

Insert the main plug into the wall socket.

Ensure that steam dial (4) is in dry position

Select the setting on the temperature control dial (1) best suited for the fabric to be ironed.

When the indication light is gone, ironing may commence.

Self clean

(Auto clean system)

To prolong the life of your iron, we recommend that this be carried out at regular intervals (once or twice a month)

Set the steam dial (4) to dry position

Fill the water tank to the symbol "MAX"

Stand the iron on its rear side

Insert the mains plug into the wall socket

Set the temperature control dial (1) to "MAX"

Allow the iron to heat until the indication light (7) first goes out

Unplug the iron and keep it horizontally over a sink

Set the steam dial

(4) to self

clean symbol  and lift the dial



fig. 6

Impurities and scale

(if any) are washed away from the steam vents in the sole plate.

When the output of steam has diminished, put the steam dial back into the position and reset the steam dial (4) to dry position.

Insert the mains plug into the wall socket and let the iron heat up again.

Move the iron over an old piece of cloth in order to let the remaining water vaporize.

Remove the plug from the wall socket and wait for the soleplate to cool down completely.

Make sure that the soleplate is completely dry before storing it.

Care and cleaning

Before cleaning the iron, ensure it is disconnected from the power supply and has completely cooled down.

Deposits and other residues on the soleplate can be removed with a rough cloth soaked in a vinegar/water solution.

The casing may wipe with a damp cloth and then polished with dry one.

Do not use abrasives on soleplate.

Keep soleplate smooth avoid hard contact with metal objects.

STORAGE

Turn the temperature control dial (1) to "MIN" and set the steam dial (4) to dry position.

Disconnect the plug from the wall socket.

Pour any remaining water out of the water tank .Then cover the lid (3).

Stand the iron upright and let it cool down sufficiently.

The power cord can be wound around the iron.

Always store the iron in an upright position.

Safety protective cut-out

In the unlikely event of the thermostat failing the protection cut out will operate to prevent the iron overheating .The iron should then be taken to an authorized repair centre.

Technical Data

Power supply : 230v~50 Hz

Wattage : 1300W

CLEARLINE CUSTOMER SERVICE

This product carries a warranty for 12 months from the date of purchase against defects caused by faulty workmanship and materials.

The warranty excludes defects caused by the product not being used in Accordance with instructions, misuse, accidental damage and tampering with by unauthorized persons,

In the event of any defect arising during warranty period, the same Should be taken to your nearest dealer or wholesaler. It will then be taken Care off as per discretion of the company's representative

WARRANTY CARD

PRODUCT

SERIAL NO.....

PURCHASER NAME AND ADDRESS.....

.....

DEALERS NAME AND ADDRESS

.....

CASH MEMO NO.

.....

In case of any complaint Please Contact :
Clearline Appliances Limited
177G, Industrial Area Phase 1, Chandigarh. 160002,
Telephone No. 09218404341 Email : customercare@clearline.co.in