COFFEE MAKER

CLEARLINE
APPLIANCES
life made smart!

DELICIOUS CAPPUCCINO IN MINUTES!




IMPORTANT: Please read these instructions fully before using the appliance.

Kindly retain these instructions for future reference.

CONTENTS

- A. On-Off switch with indicator Light
- B. Water Tank Lid (Boiler Cover)
- C. Selector Knob
- D. Steam Tube with Nozzle
- E. Filter Holder
- F. Coffee Filter
- H. Imported, Heat resistant Glass Jug
- I. Jug Lid (with opening)
- J. Drip Grid
- K. Measuring Spoon
- L. Thermostat Indicator Light

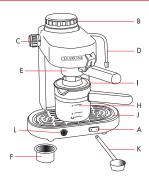

TO GET STARTED

- Put the On-Off switch (A) to Off position and connect the appliance to the mains.
- Unscrew the Water Tank Lid (B) by turning it anti clockwise.
- Pour desired amount of water. To make plain coffee pour water as per markings on the provided glass jug. Putting extra water will cause it to be released through the steam tube.
- Screw the Water Tank Lid (B) tightly.

THERMOSTAT INDICATOR

- When the element gets fully heated and the steam is ready, the light of the thermostat indicator will go off.
- The thermostat will cut off when the heating element reaches the desired temperature even if there is no water inside the coffee maker boiler.

TO MAKE CAPPUCCINO

- Make plain coffee as explained above.
- Froth plain cold milk in a separate jug by placing it under the steam nozzle and turning the selector knob (C) to the steam position. (Frothing procedure is explained in the instructions for making Indian Espresso).
- Top the plain coffee with frothed milk.

 
TO MAKE PLAIN COFFEE

- Place the coffee filter (F) in the Filter Holder (E).
- For your guidance the coffee filter has markings of 2 & 4. Add desired amount of coffee in it and do not press in the coffee tightly. Use only instant coffee which dissolves easily in water.
- Fix the Filter Holder by matching the markings (X) on the machine front and filter holder.

- Turn it to the right as far as it will go.
- Place glass jug with Lid fixed on it, below the Filter Holder. Ensure that the outlet of the Filter
- Holder is directly above the opening of the Jua Lid.
- Turn the Selector knob (C) in Coffee outlet position.
- Switch on the appliance by pressing the switch (A) in the on position. After nearly 2 minutes the water will begin to boil and pour through the Coffee into the Jug or Cups.

TO MAKE INDIAN ESPRESSO


- Pour cold milk in the jug/cup. Add Coffee and sugar to your taste.
- Place the cup/jua under the steam tube in such a way that the nozzle of the steam tube is just below the surface of milk. Turn the selector switch (C) to steam position.

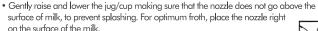

• When enough froth has been obtained, set the Selector knob to standby position. MAINTENANCE AND CLEANING

Always disconnect the appliance from the mains before cleaning it. Wipe the outside with a damp cloth. The accessories can be washed with soap and water.

 - DESCALING IS IMPORTANT which should be done every month as follows: Fill the tank with water and add 6 tablespoons of vinegar. Operate the coffee maker as you would for making plain coffee. After that, repeat the operation twice with plain water to remove all traces of vineaar.
- To clean the steam tube nozzle, unscrew the nozzle by using the hexagonal slot in the measuring spoon (Fig-A & B), if the nozzle is blocked, clean it by using a needle (Fig C). clean with water and replace it (Fig D).
- Before using the Espresso bar Coffee Maker for the first time, wash all accessories such as coffee Filter, Jug, Jug Lid, Measuring Spoon with soap and warm water.

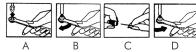

IMPORTANT

- Check that the voltage of your premises and that of the coffee maker coincides.
- Connect the 5 Amp. 3 pin moulded plug provided with the coffee maker to a socket which is properly earthed.
- Please do not cut the cord to suit your convenience to connect it to mains without a plug, or to fix a 2-pin plug to the cord.
- Do not use the coffee maker with a damaged cord or damaged plug.
- Never immerse the cord of the appliance in water or in any other liquid.
- Take special care when using the appliance, when there are children around.
- DO NOT use the coffee maker without water.
- Make sure that the water tank lid is properly closed before using the coffee maker.
- Do not leave the appliance near a heat source and make sure that the cord does not touch anything hot."

- Do not add milk, tea, coffee or sugar to the water in the water tank.
- The appliance must be used only for domestic purposes.
- The appliance is under high steam pressure during use. The Water Tank Lid (B) must be opened ONLY AFTER the steam pressure has been released through the steam tube and the On-Off switch (A) is in the Off position.

CLEARLINE CUSTOMER SERVICE

This product carries a warranty of 12 months from the date of purchase against defects caused by faulty workmanship and materials. The warranty excludes defects caused by the product not being used in accordance with instructions, mis-use, accidental damage and tampering with by un-authorised persons. In the event of any defect arising during warranty period, the same should be taken to your nearest dealer or wholesaler. It will then be taken care of as per the discretion of the company's representative. The warranty does not cover damage/defects caused by the events beyond control like acts of god, lightning, abnormal power supply, voltage fluctuations.

WARRANTY CARD	
Serial No.	Bill No.
Model No.	COFFEE MAKER
Customer's Name :	
Address :	
	Dealer's Name & Stamp
Date of Purchase :	

Marketed By:

CLEARLINE APPLIANCES LIMITED

177G, Industrial Area, Phase-I, Chandigarh - 160002 Incase of any complaints

please contact: +91 172 4647707, 4626036, 4626027 Whatsapp us at: 98882 27707

or email us at customercare@clearline.co.in or write to us at the above mentioned address www.clearline.co.in



