

## FEED MOTOR REPLACED (EDGE)

A. Turn off machine and put elevation knob in the lowest position



B. Lift carousel to remove it




C. Put your left hand into machine to hold feed motor while using your right hand to remove 4 screws



D. Take feed motor out



E. Disconnect red and white wire's connectors

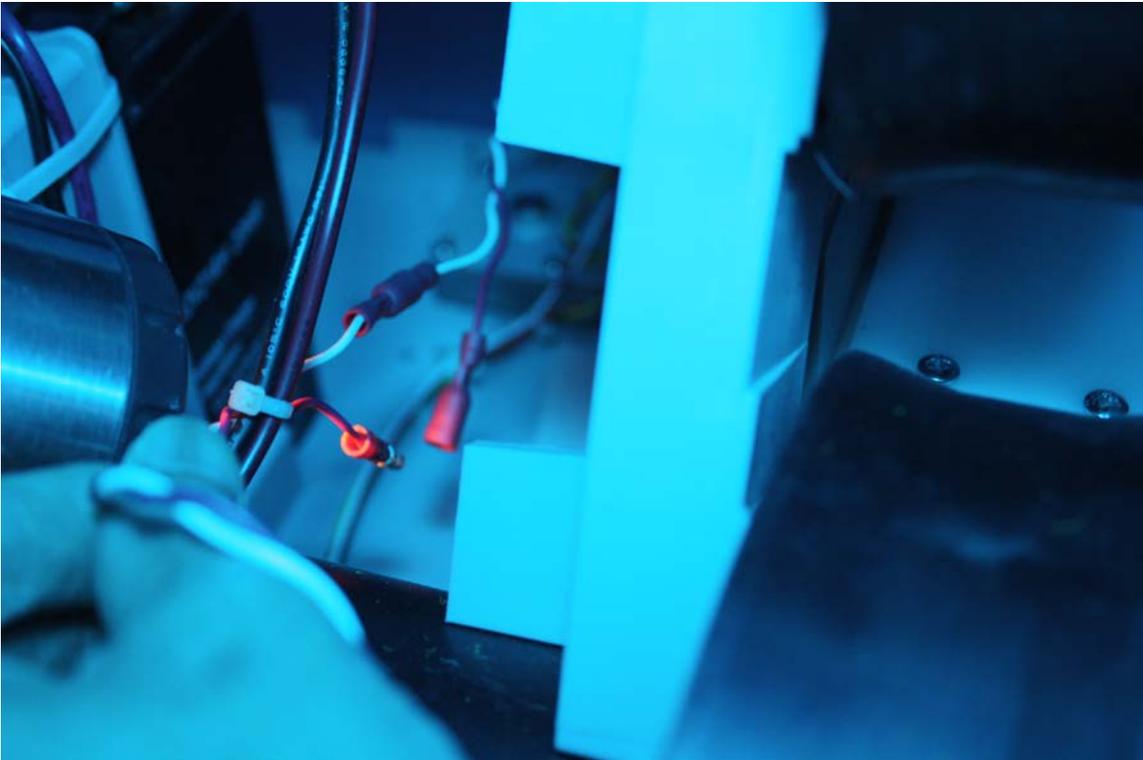

F. Retrace the preceding steps A to E to install