

A.TAKE DOWN ROLLING WHEELS & REMOVE 12 SCREWS




B.REMOVE THE SHELL FOR REPLACING MOTORS OR WHEELS



C.REMOVE THE NUT ON THE END OF MOTOR'S AXLE, THEN TAKE DOWN THE WHEEL



D.REMOVE 2 NUTS FOR FIXING MOTOR ON ARM,THEN TAKE MOTOR DOWN

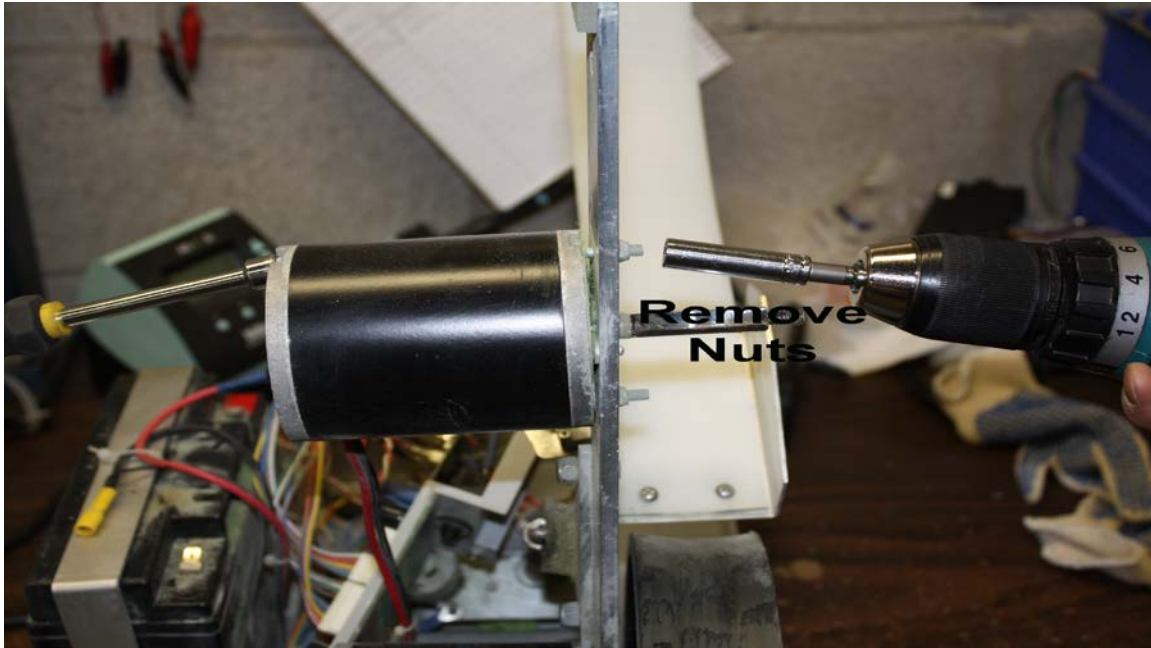

E.RETRACE THE PRECEDING STEPS TO INSTALL MOTOR & WHEEL