

SCOOP BATTERY REPLACED

A. Take off rolling wheels by pressing metal clips




B. Remove 12 screws around the base




C. Lift & turn the shell toward back




E. Lay shell down on the table

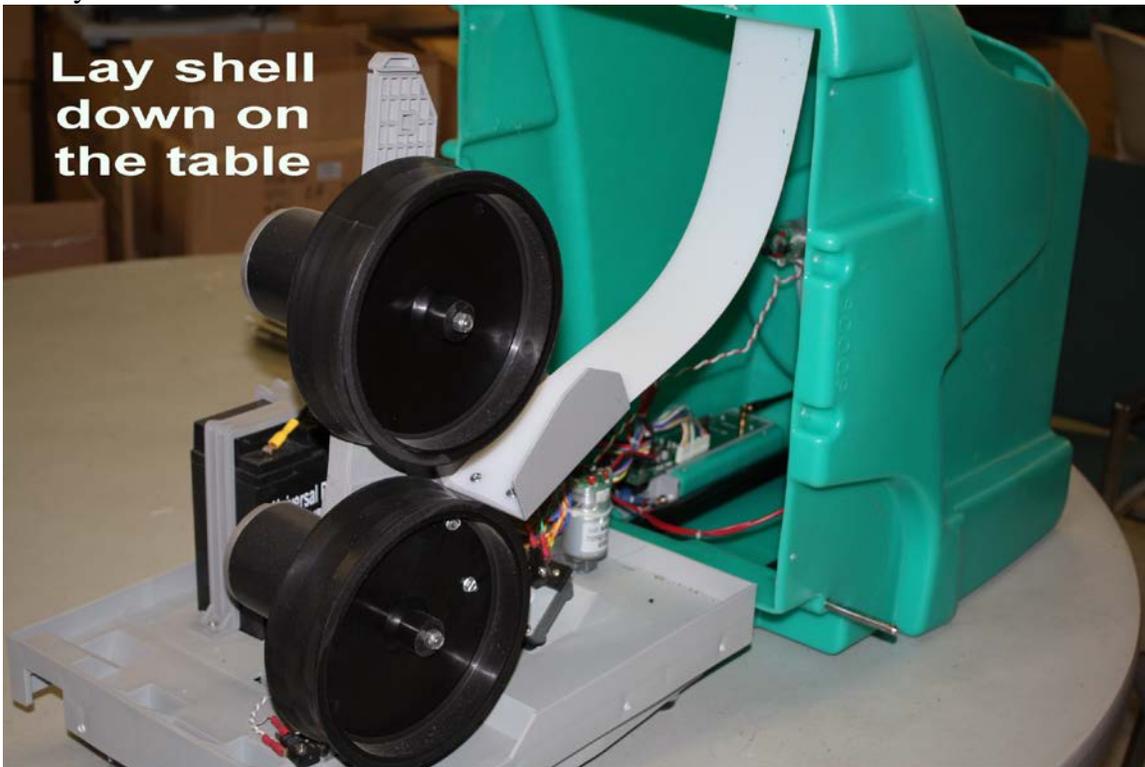

F. Disconnect feed motor's wires if it is too tighten

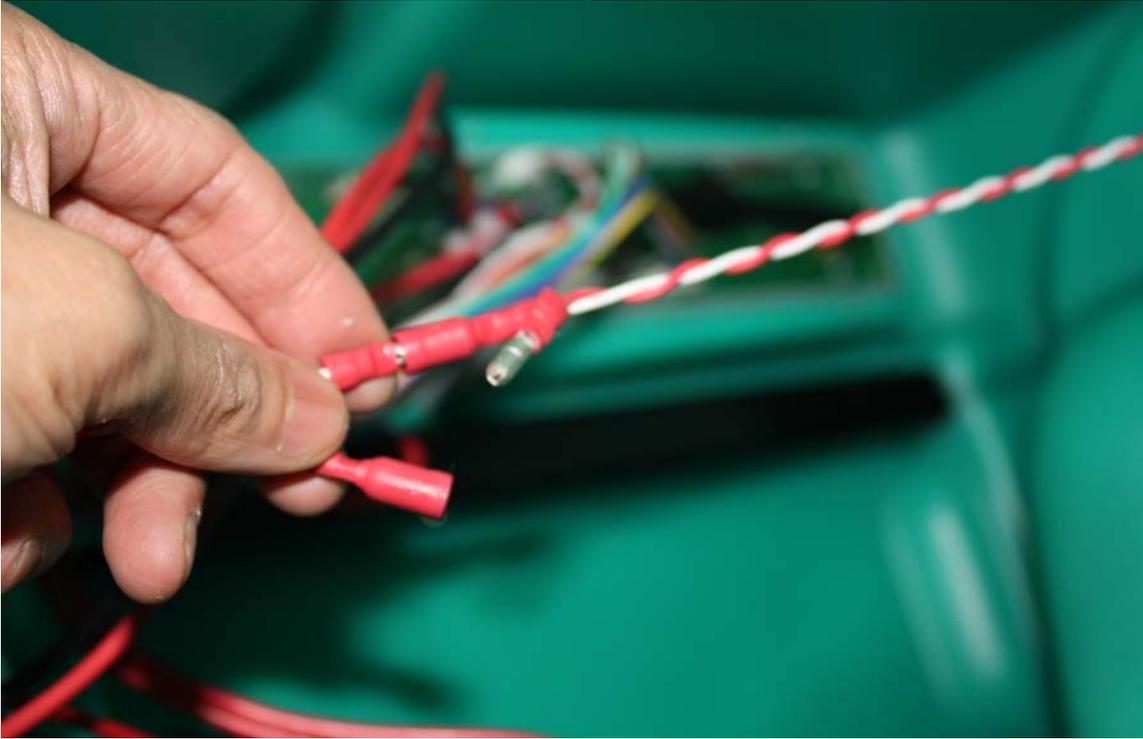


G. Disconnect wires (Red & Black)

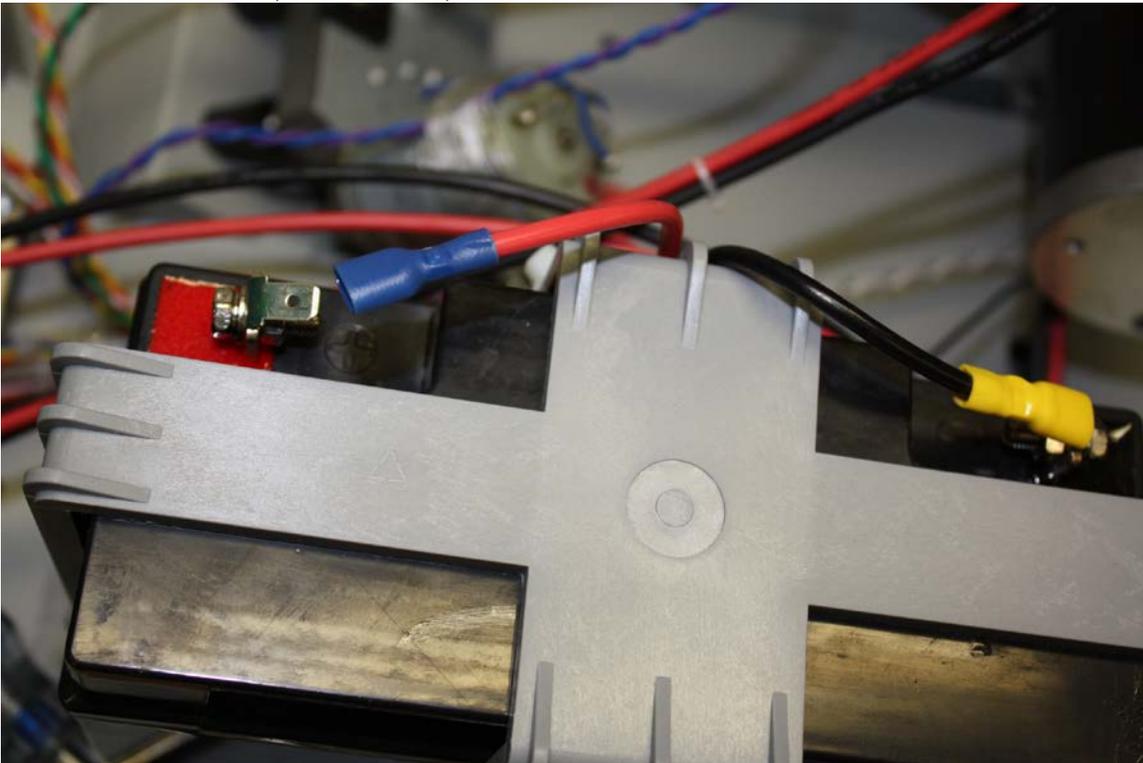

H. Lay down machine by wheels side



I. Remove 2 screws and nuts for fixing battery holder

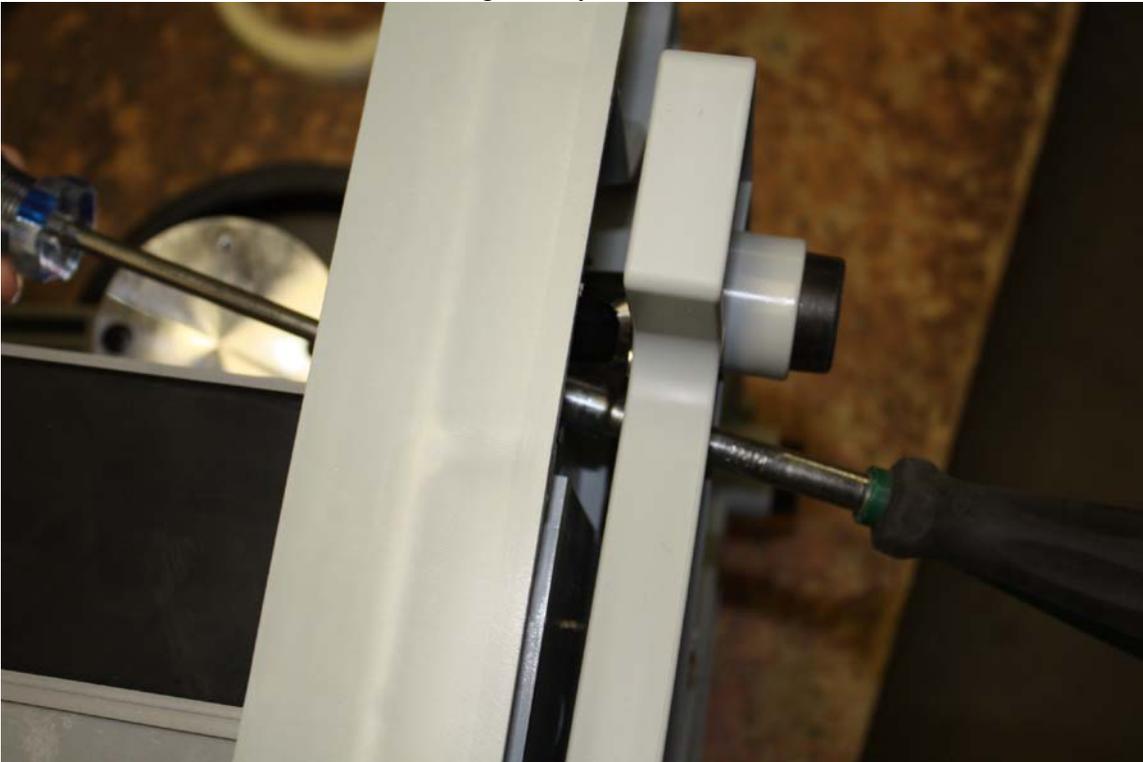

J. Remove 4 screws



K. Remove battery holder



L. Lift battery to take it off



M. Retrace the preceding steps to install.