

## HOW TO ADJUST THE “DR” PLAY OF SMART

### A. BASIC SET UP

1. Turn toggle switch off for 30 minutes then turn it on.
2. Turn on machine by using power button on panel or remote, set speed at 50 and feed speed at 3 or your chosen settings.
3. Select ball position in front row first and follow other positions, then save them;
4. Press top spin button **on remote** 7 times;
5. Press the DR button **on remote** 3 times. Wait until the arm doesn't move;
6. Turn on feed motor. Let machine shoot balls to know the ball placement.

### B. FURTHER ADJUSTMENT

There are differences between all machines. The key factor is the ARM'S BEGINNING POSITION. After finishing the basic set up, if the ball is shot out to high, you could try pressing DR button on remote 2 times to know how the machine works. Maybe you'll find the balls shot out to low, that means the better position of the arm is between them. In this situation, you could press HEIGHT button on remote one by one for 4 or 5 times before pressing DR button 2 times in step 5 mentioned above. Also different speed and spin makes balls shot out different. You could make it better by adjusting speed and spin.