

2016-2017 Polaris Axys Sidekick Installation Instructions





1. Remove hood and side panels.



2. Remove fasteners and slide console back.



3. Remove belt and driven clutch.



4. Remove clutch cover/ oil-tank and let rest in place as shown.



5. Remove screw, push pins, and factory ducting.



6. Unplug ECU and remove upper air-box assembly.

Revised 12/16/2016		Page 2 of 11
www.boondockers.com	.BoonDocker	877-522-7805



7. Un-Bolt coils, and TBAP sensor from air-box.



8. Remove wiring from air-box, loosen clamps, and remove air-box.



9. Remove muffler.



10. Remove exhaust snow deflector and muffler grommet.



11. Drill rivets and remove right foot kick-panel. Keep panel intact for future use



12. Hang rear of sled and remove 2 rear suspension cross shaft bolts.

Revised 12/16/2016		Page 3 of 11
www.boondockers.com	BoonDocker	877-522-7805



13. Remove front cross shaft bolt, and 4 belt drive case nuts.



14. Cut out template and mark exhaust outlet on tunnel.



15. drill 2 1/8" hole in bottom left corner. Use a saw to finish cutting outlined hole. MAKE SURE TRACK IS CLEAR WHEN CUTTING HOLE TO PREVENT DAMAGE.



16. Install exhaust outlet tunnel support and 2 spring tabs both facing up.



17. Reinstall rear suspension bolts.



18. Rivet muffler block off plate in.

Revised 12/16/2016		Page 4 of 11
www.boondockers.com	BoonDocker	877-522-7805



19. Unplug the stock oil line as pictured. Remove stock clamp and save for re-use in step 26 for installation of turbo oil feed line



21. Install stock muffler rubber mounts on to turbo bracket. Remove and re-use screws to mount solenoid on turbo bracket as shown (electrical connection facing toward turbo).



23. Mount solenoid to turbo bracket and install turbo assembly in place of stock muffler.



20. Cut the upper oil hose, install T and connect previously unplugged hose as pictured.



22. Connect oil feed hose to turbo.



24. Route water lines and oil line through chassis and secure with a zip-tie.

Revised 12/16/2016	Page 5 of 11
www.boondockers.com	BoonDocker



25. Using a syringe fill turbo oil feed line.



26. Re-use stock clamp from step 19 and attach turbo oil feed line to oil pump.



27. Remove coolant hose between coolant bottle and throttle bodies.



28. attach shorter turbo coolant hose to coolant bottle.



29. Route turbo coolant hoses and zip-tie as shown.



30. Route longer turbo coolant hose to throttle body as shown, cut to length and connect to throttle bodies.

Revised 12/16/2016		Page 6 of 11
www.boondockers.com	BoonDocker	877-522-7805



31. Using 3 of the provided short springs, Double spring tune pipe to Y pipe.



33. Use stock muffler spring to spring turbo assembly to cross bar.



35. Reinstall kick plate using supplied rivets



32. Install inlet with provided bolts and springs. NOTE Applying silicone to the exhaust donuts will prevent exhaust leaks.



34. Measure 1" from bottom. Use a strait edge to draw a line from measure point to bottom right corner of grate and cut as shown leaving 3 grated lines above the cut mark.



36. Slide exhaust outlet sleeve into exhaust outlet tunnel support.

Revised 12/16/2016		Page 7 of 11
www.boondockers.com	BoonDocker	877-522-7805



37. Install muffler using supplied springs.



38. Bend Throttle body lock rings slightly until ends overlap.



39. Snap lock rings onto throttle bodies. NOTE: {If installing SideKick X or GT Kit, Remove Air Box Support Bracket for injector clearance.



41. Set air box hose clamps loosely onto silicone.



40. Install silicone onto throttle bodies and tighten hose clamps. Make sure lock rings stay in place and that the silicone and clamps are positioned all the way forward.



42. Install air box and tighten clamps. Make sure the top tube on the air box has enough room for silicone and clamp to slide on without rubbing the sub frame.

Revised 12/16/2016		Page 8 of 11
www.boondockers.com	BoonDocker	877-522-7805



43. Install silicone 90 onto air box. Position Silicone to maintain clearance from steering.



44. Install charge tube.



45. Connect hose coming from boost solenoid to barb on back side of the charge tube and secure with zip-tie.



46. Install coils to coil bracket and install bracket as shown.



47. Replace clutch cover/oil-tank.



48. Install cold air intake tube.

Revised 12/16/2016		Page 9 of 11
www.boondockers.com	<i>BoonDocker</i>	877-522-7805



49. Measure down 2 3/4" from air box seam and align with stock hole as shown. Mark and drill 1/2" hole.



51. Install cold air box and connect plenum to tube using 90 degree silicone and tighten all clamps.



50. Place cold air intake plenum onto cold air box, mark hole as shown. Drill and fasten with push pins (1 supplied in kit, 2 used from stock intake plenum.). Clean out all plastic debris.



52. Insert TBAP sensor into 1/2" hole and rotate sensor to best fit. Re-use the coarse plastic screw included with the sensor and fasten sensor to air box (screw will self-tap).



53. Plug Boondocker Sidekick box into ECU, plug stock ECU connector into control box harness. Secure Side Kick Box to the ECU using Velcro. NOTE: Zip tie harness to over structure!

Revised 12/16/2016

Page 10 of 11877-522-7805



54. Connect Boondocker control box connector to pressure / temp sensor on air box.



55. NOTE: Check all wire routing zip tie wiring where needed to secure and prevent rubbing or moving parts interference...



56. Replace drive clutch spring and cam arms using supplied clutch items. Supplied components are used to achieve an optimal RPM range between 8400 to 8600.

Revised 12/16/2016		Page 11 of 11
www.boondockers.com	BoonDocker	877-522-7805

THIS PAGE LEFT BLANK

