


Control Box

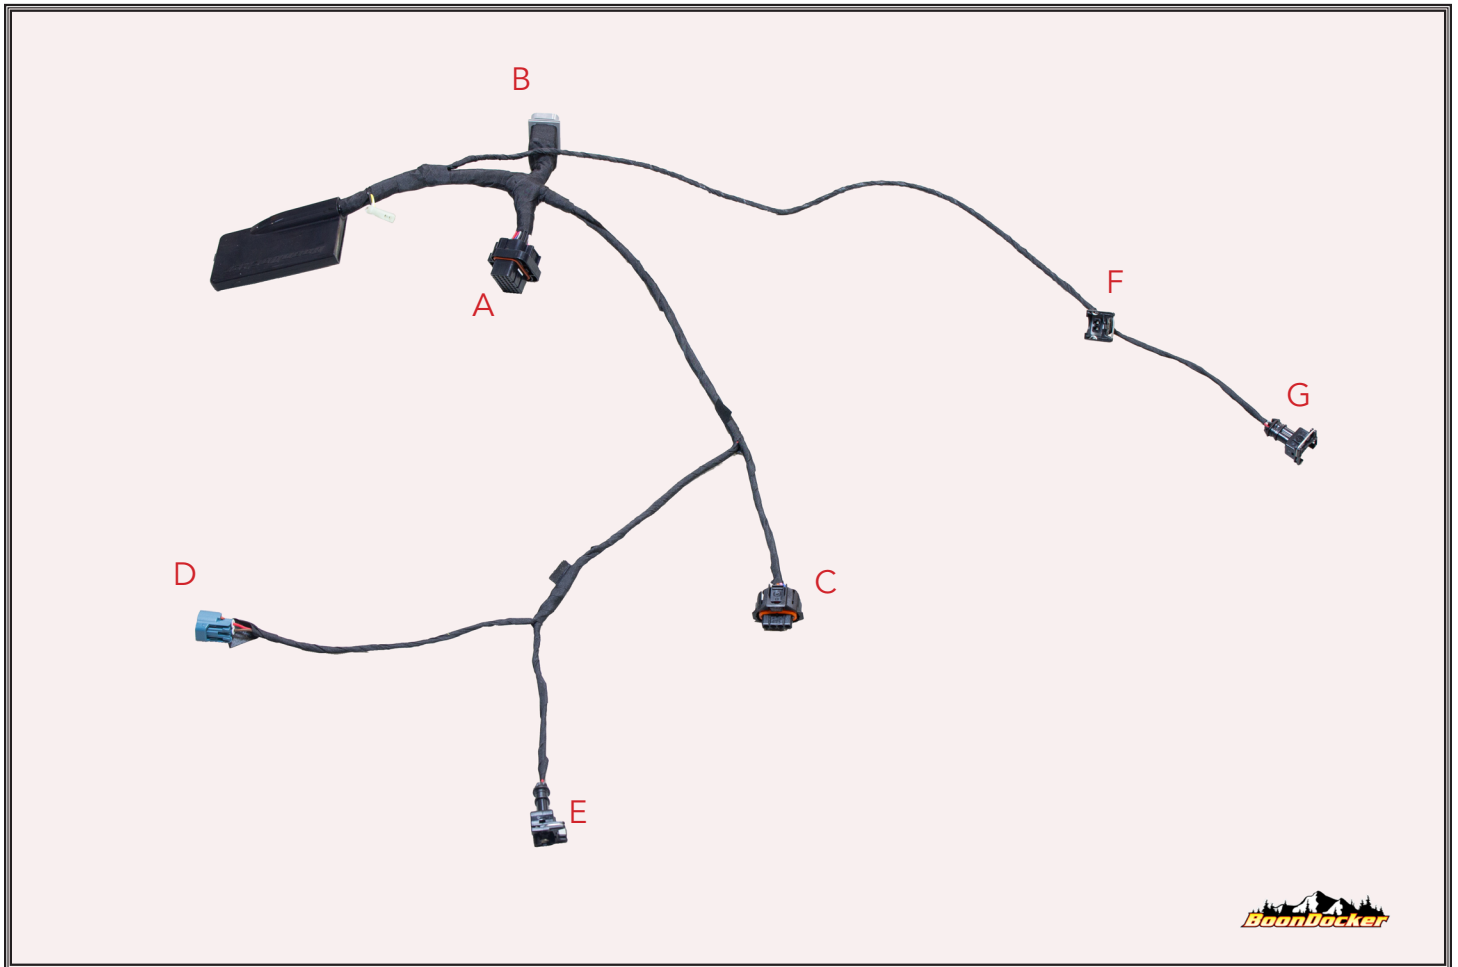

WIRING DIAGRAM:


- A) Factory ECU
- B) Factory ECU wire harness
- C) Boost sensor on airbox
- D) Oil pump on turb
- E) Boost solenoid on turbo
- F) PTO side auxillary injector
- G) MAG side auxillary injector

Control Box




Plug the BoonDocker Fuel Controller directly into the ECU and velcro controller to the ECU.

Control Box

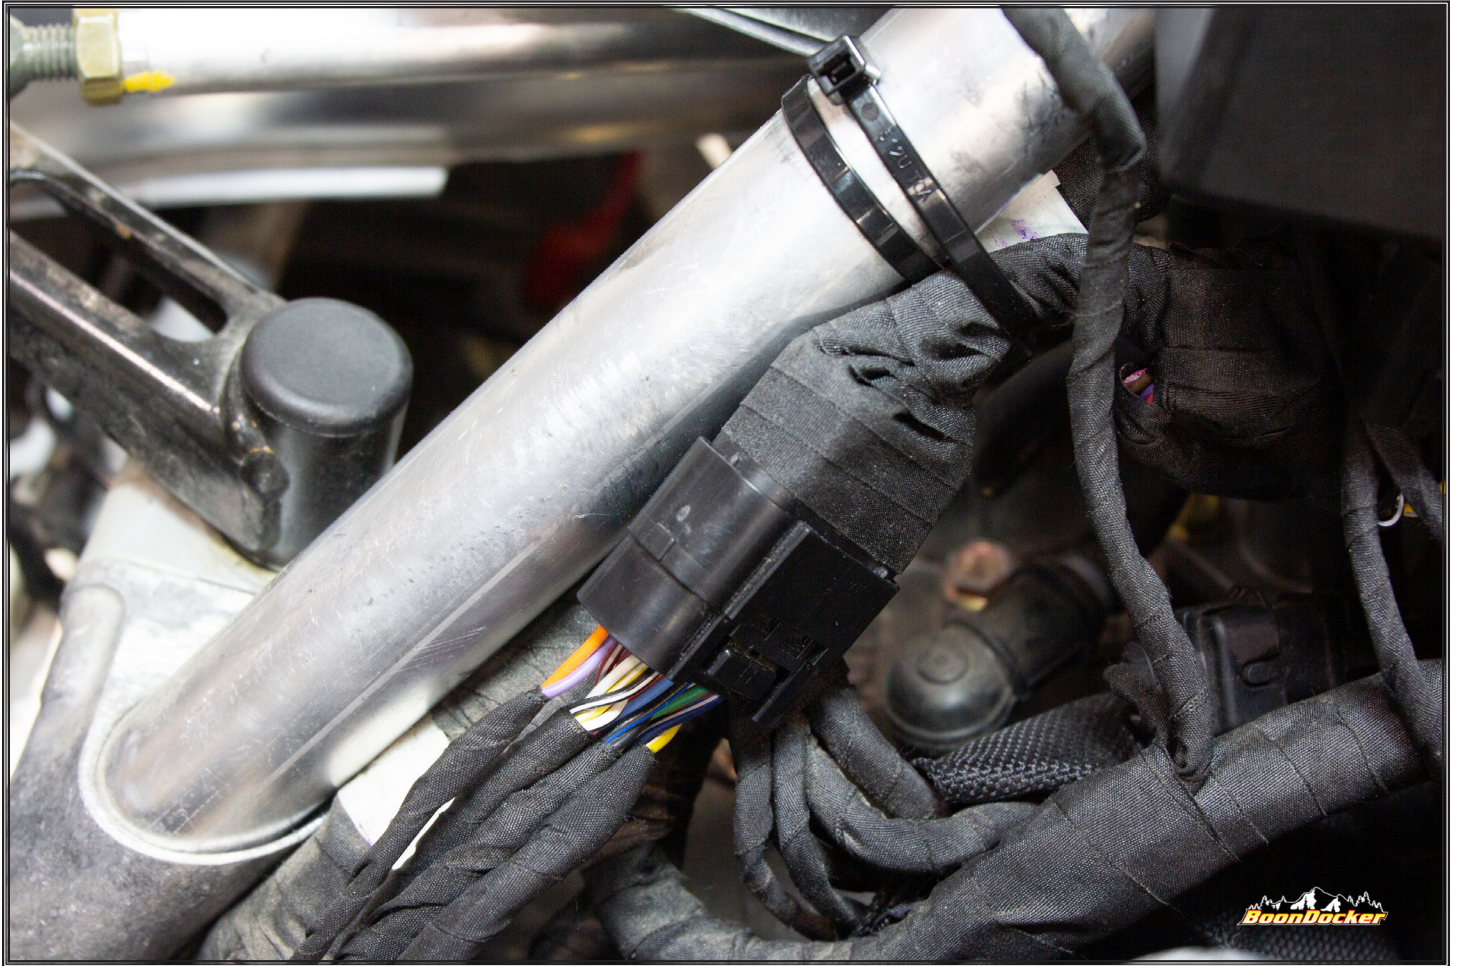

Connect the stock ECU plug into the fuel controller, and zip tie as shown.

Control Box

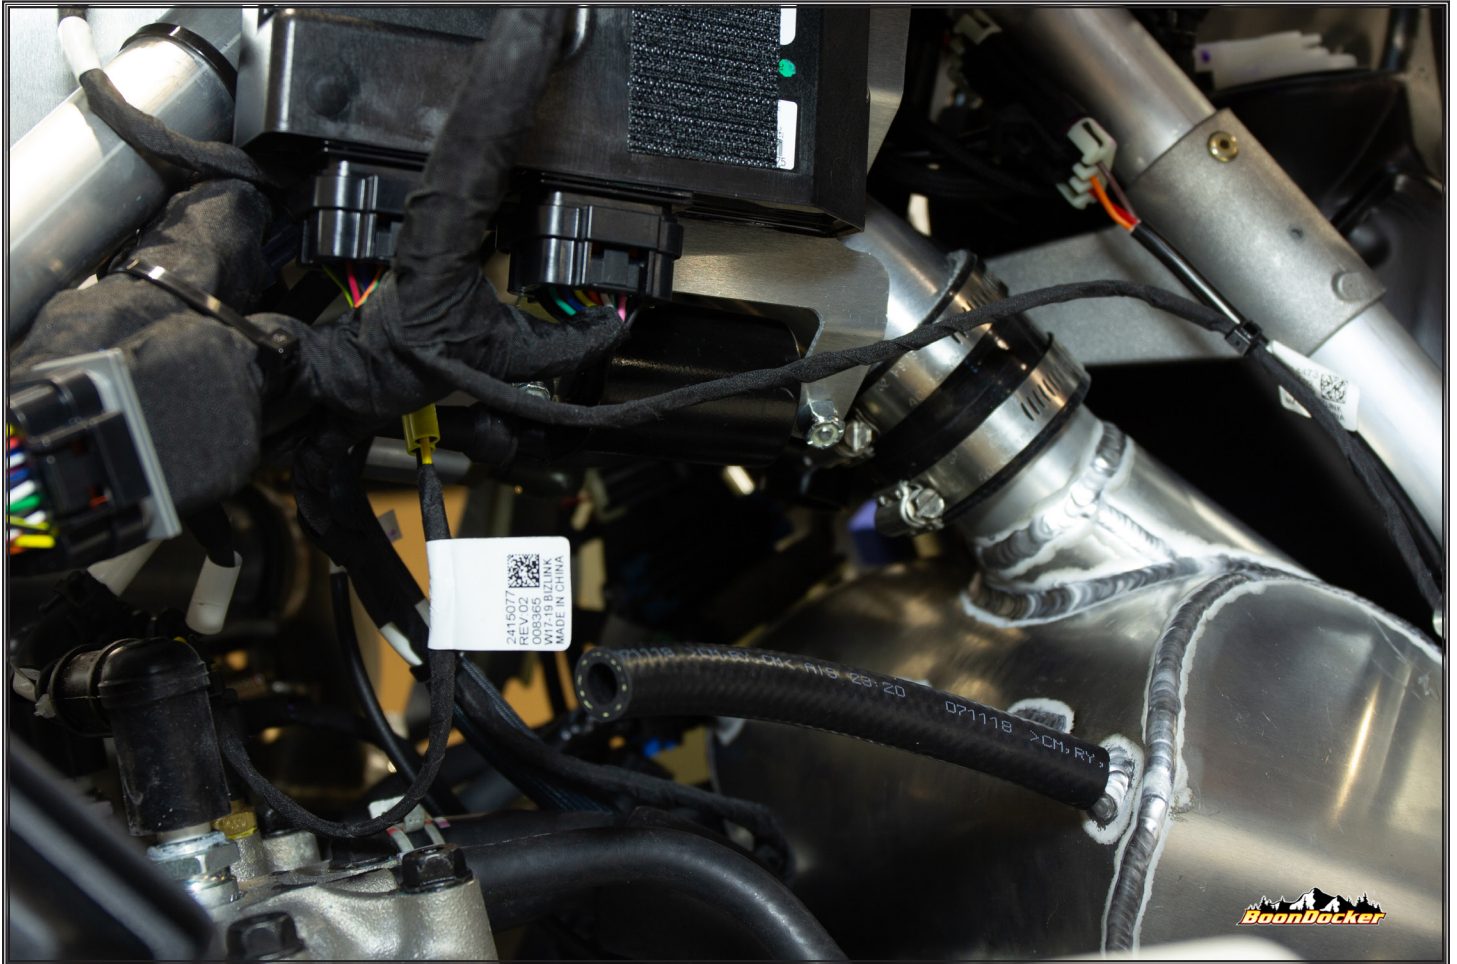

Route the auxillary fuel injector harness and zip tie as shown

Control Box



Plug auxillary fuel injector harness into fuel injectors and zip tie as shown.


Control Box



Route boost solenoid, boost sensor and oil pump wire harness and zip tie as shown.

PLug all connectors into their corresponding componenets.

Control Box

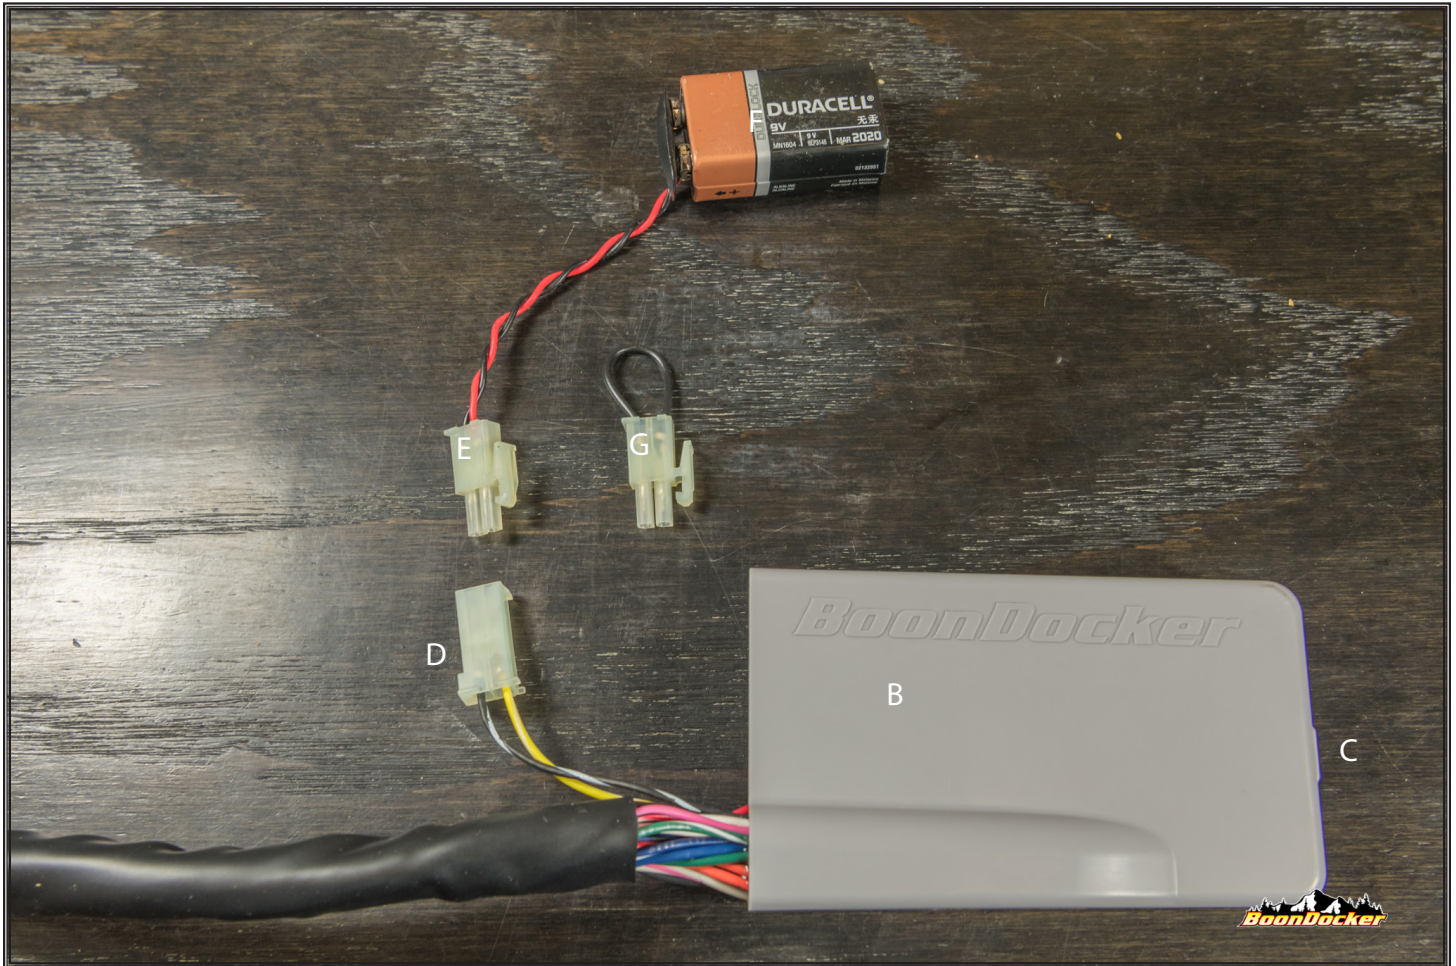

B Control Box

C USB "Update" Port (Micro-USB cable not included, required for update installation)

D Control Box "Jumper" port


E "Battery Power" Jumper (required for update installation)

F 9V Battery (not included, required for update installation)

G "Map" Jumper (leave unplugged, unless instructed by BoonDocker)

NOTE: During normal operation, nothing should be plugged into the D Jumper port, unless specifically requested by BoonDocker.

Control Box

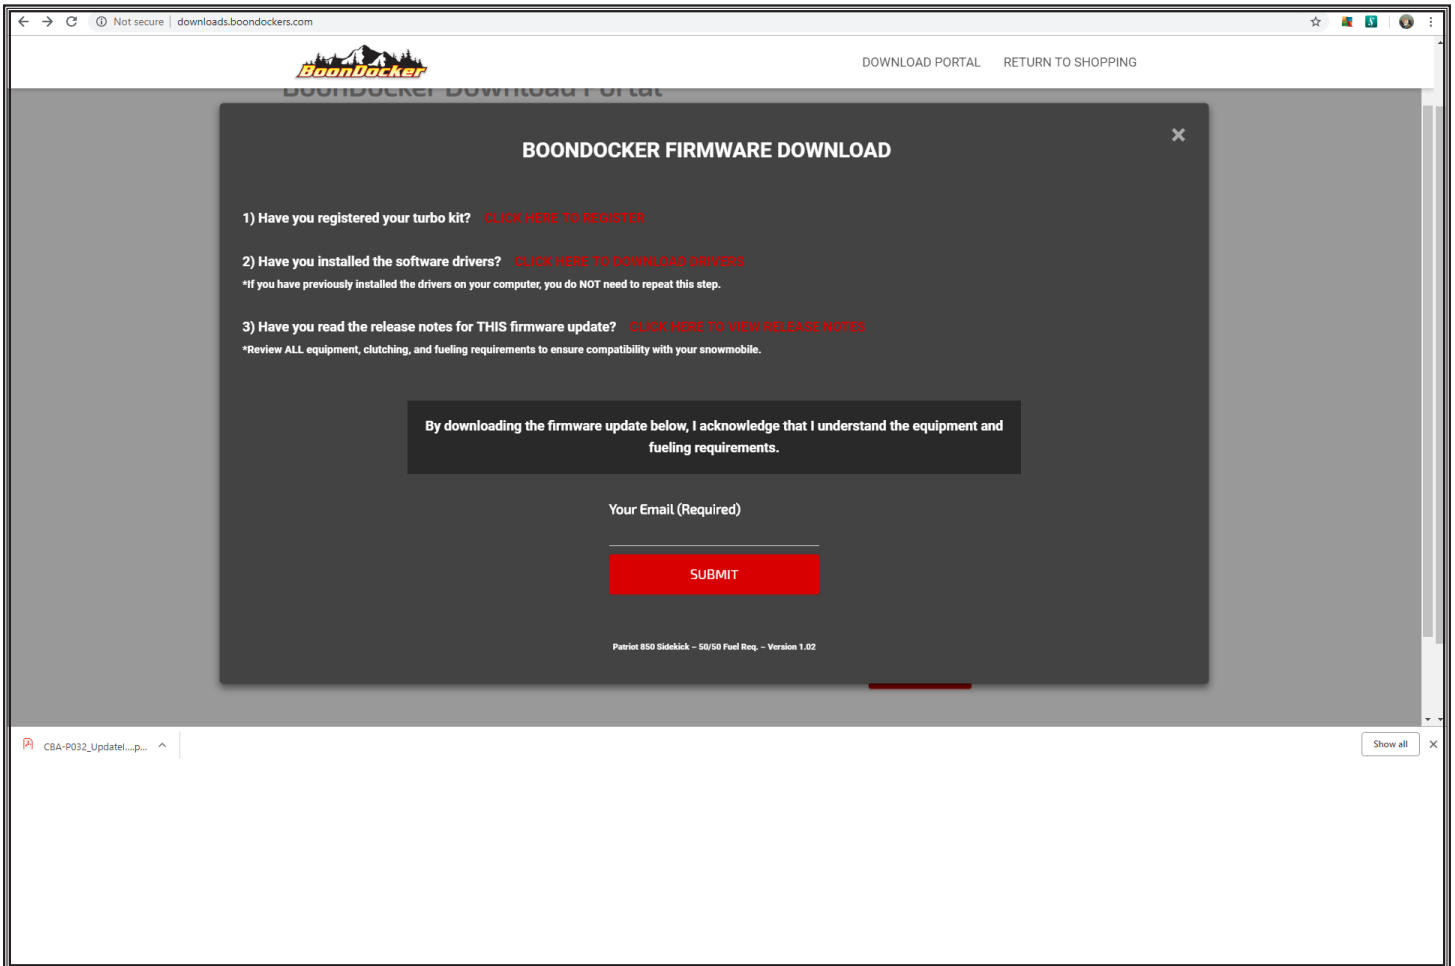

UPDATING your control box is required! DO NOT RUN your snowmobile without first updating your control box.

UPDATE YOUR CONTROL BOX: Please refer to Control Box Update Instructions, available at <http://downloads.boondockers.com/>