
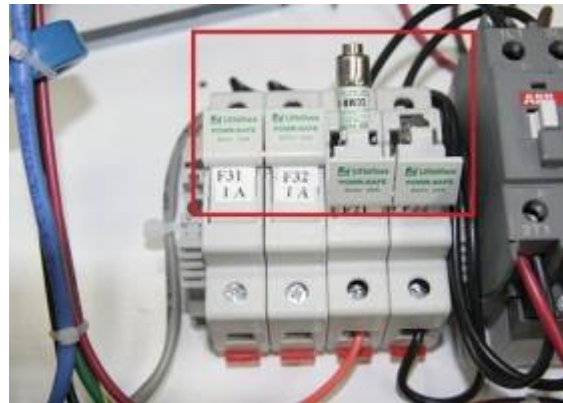


Common Fuse Locations


The fuses are located in the A2MC controller at the back end of the XYZ CNC machines.

WARNING! Be sure to replace fuses with the correct class of fuse. Fuses of the correct size and amperage are not sufficient to ensure proper operation.

CCMR Fuse Locations

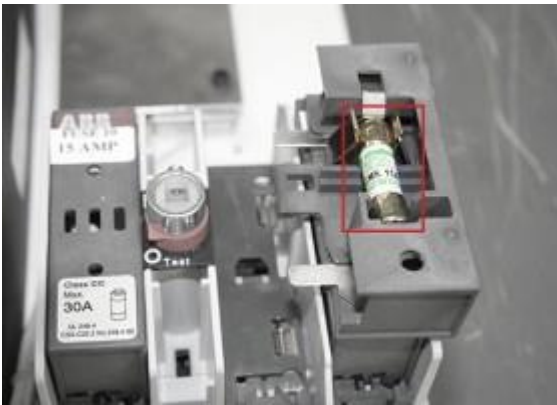

Glass Fuse Locations

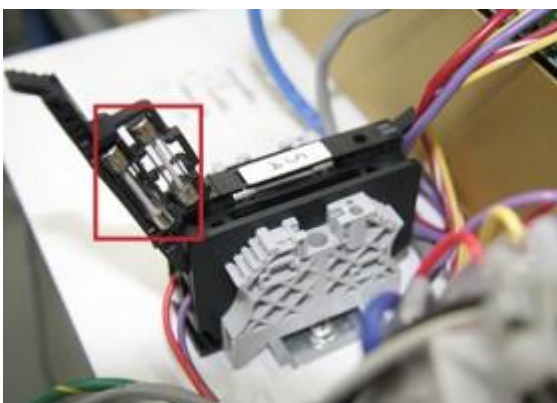

Ceramic Fuse Locations

