

Custom Color Menu Guide

Custom Color Menu Function

- A. The Custom Color Menu allows you to select and save any 2 color combo from the Custom Colors #1-#15 below. View your combo on Color Mode #14 (Custom).
- B. The Custom Color combo that you last saved, stays with the light even if it is turned OFF. Overwrite your previous save by creating a new combo.


Enter Custom Color Menu

- A. **Step 1:** To enter the Custom Color Menu, {From OFF} hold down the button for 1 second until the light flashes (Orange) and then release.
- B. **Step 2:** Confirm that you now see the 1st Custom Color #1 (Red), which means that you have successfully entered the Custom Color Menu.


Program Custom Color Menu

- A. **Step 1:** Click the button to cycle between the Custom Colors #1-#15, after the last Custom Color #15 (Pastel) the cycle starts over with Custom Color #1 (Red).
- B. **Step 2:** Find your 1st Custom Color to select, and hold down the button until the light flashes (Orange) and then release. This will save your 1st Custom Color and return you to the start of the Custom Color Menu with Custom Color #1 (Red).
- C. **Step 3:** Find your 2nd Custom Color to select, and hold down the button until the light flashes (Orange) and then release. This will save your 2nd Custom Color and automatically exit the Custom Color Menu to view Color Mode #14 (Custom).

Custom Colors #1-#15 Guide

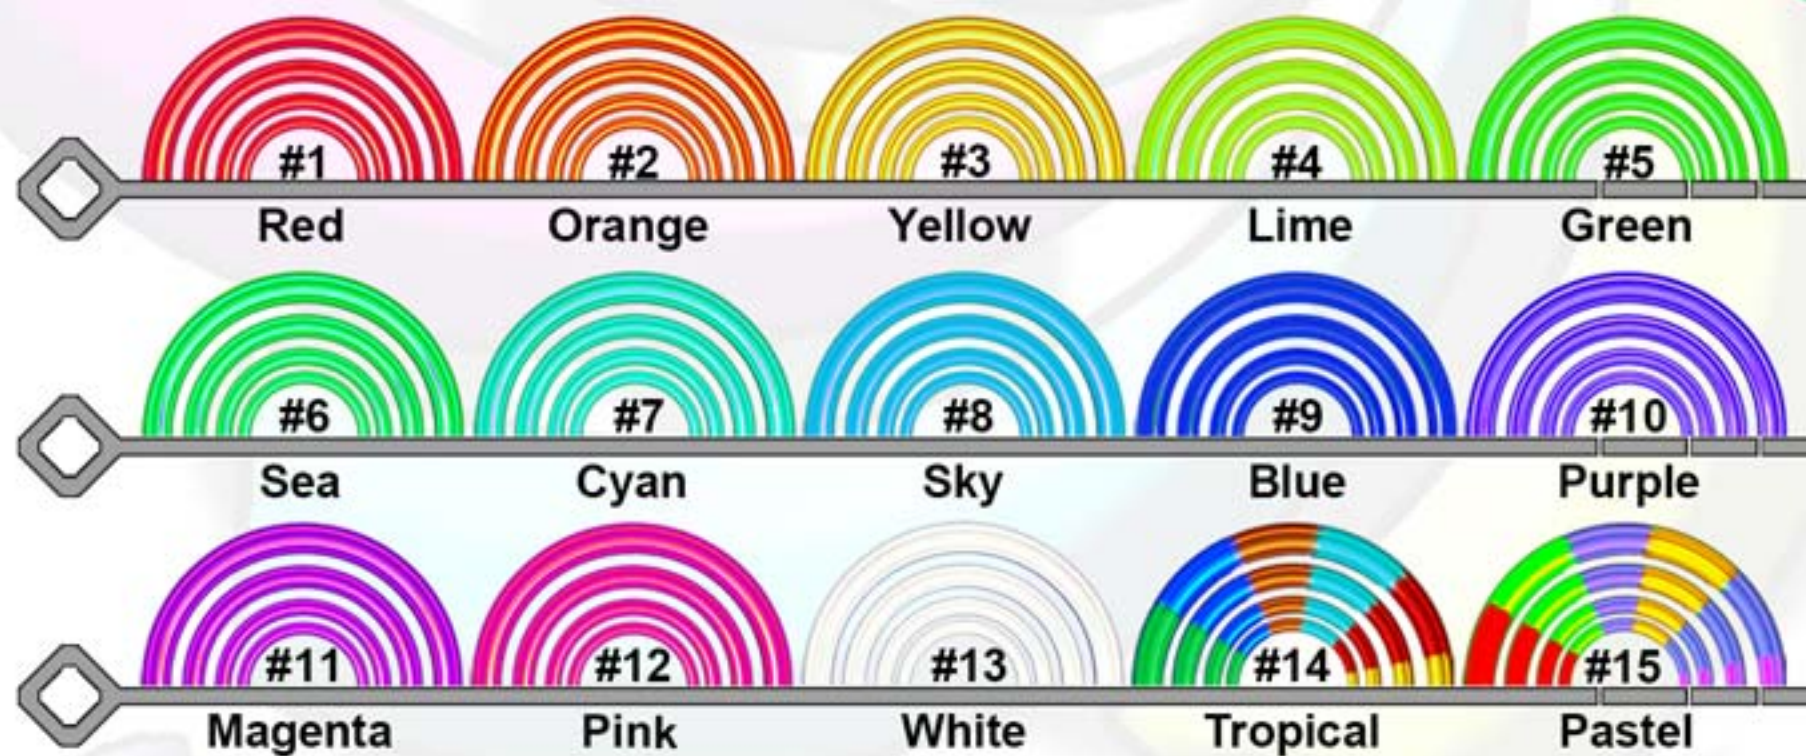

UltraLight Pro GlowStick Guide

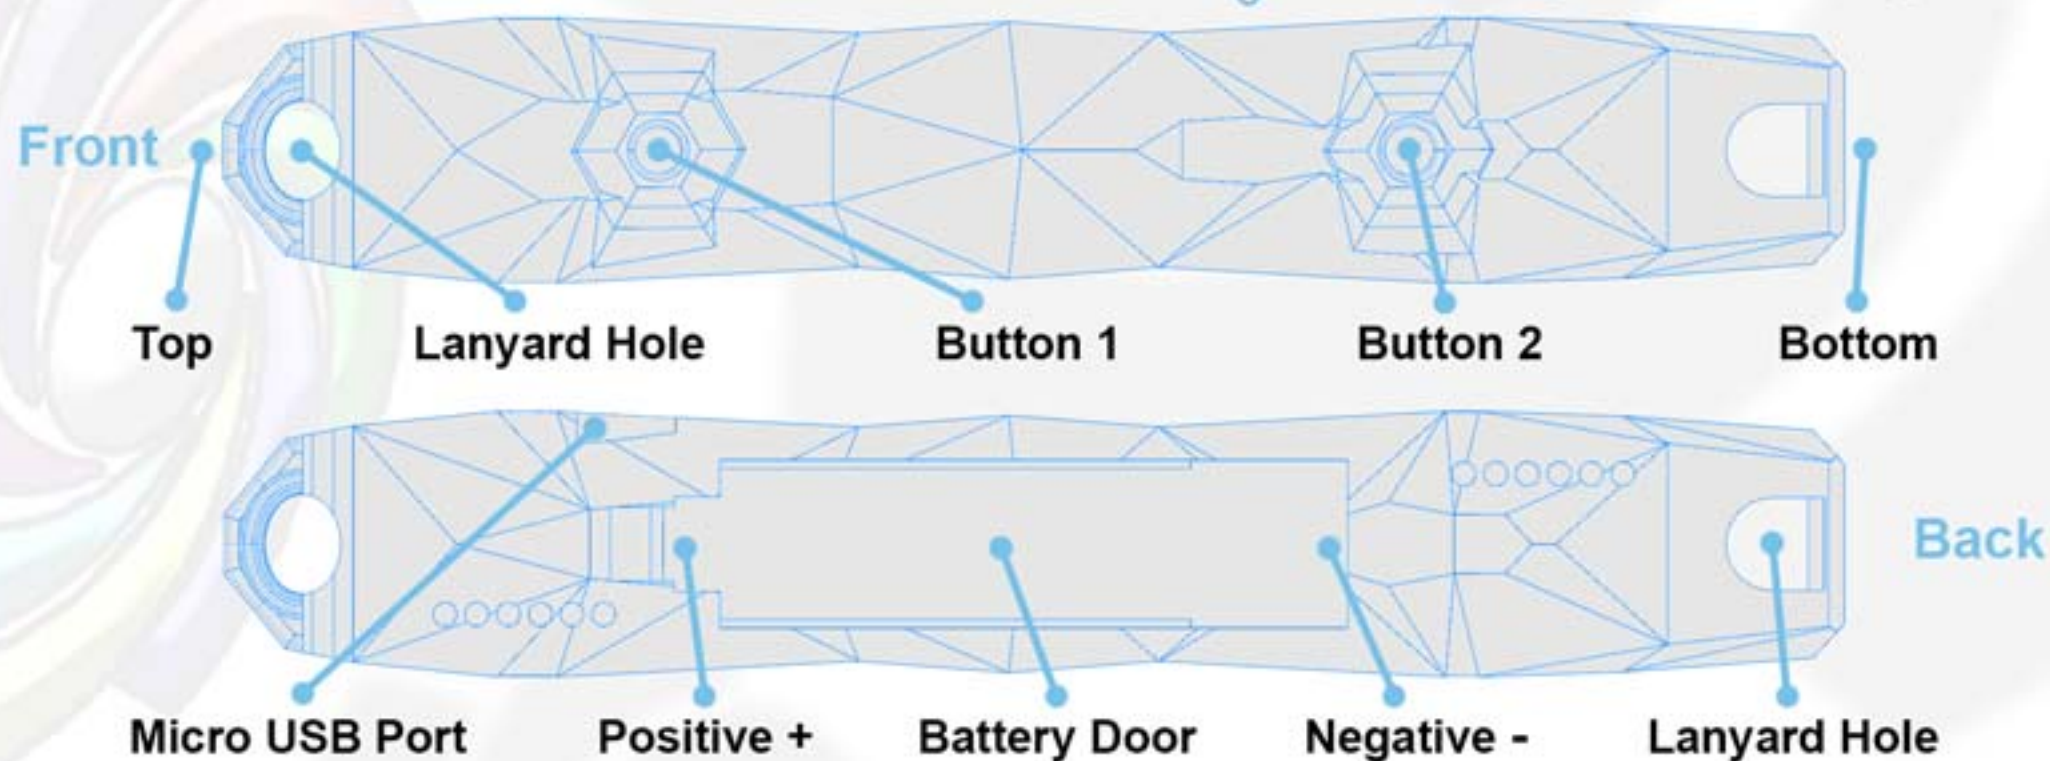

HELIX POI PRO by UltraPoi.com

Quick Start Guide

Tip 1: Charging Glow Stick battery

- A. Recharge glow stick using a Micro USB type cable by plugging power into USB charging port located left of top button. **Red = Charging / Green = Full**
- B. We recommend official **UltraPoi 3.7v Rechargeable Li-ion** type batteries.
- C. **If needed, replace 3.7v battery** by utilizing door in middle of glow stick.
- D. Using your finger or a small flat head tool, **pry the battery door open** from the top via the notch. **Install new battery** positive side facing up near USB port.

Tip 2: Glow Stick Quick Button Controls

- A. Each side of the Glow Stick is independently controllable with Button 1 & 2.
- B. **Turn Light ON:** Click Button 2 times to turn Light ON.
- C. **Turn Light OFF:** Hold Button for .5 sec until Light turns OFF, then Release.
- D. **Change Color Mode:** Click Button to cycle Color Modes #1 - #15 then OFF.
- E. **Change Flash Pattern:** From any Color Mode, Hold Button for 1 second until Light flashes Orange, then Release. Click Button to cycle Flash Patterns #1 - #3 in a Loop. To select a Flash Pattern, Click and Hold Button Down for 1 second, then Release to return to Color Modes. Selections will be saved to Color Mode.
- F. **Smart Button Lock:** If Light is ON and there is no Button activity for more than 3 seconds, Smart Button Lock will Activate. To Deactivate, Click Button 2 times in less than a 3 second period. This will prevent accidental button clicks.

Tip 3: Install Glow Stick into Helix Case

- A. Loosen the fabric loop near the opening of the soft Helix Case.
- B. Insert the **glow stick flat bottom first**, through the opening of the Helix Case.
- C. Rotate the glow stick correctly so the **buttons are aligned with the cutouts for the buttons and USB port** on the outside of the Helix Case.

Tip 4: Adjust the Cord Length

- A. Pull the desired amount of cord through the metal ring at the top of the leash near the handle, typically your poi length is shorter than full arm length.
- B. Cut off the excess cord using scissors and use a lighter to **melt the end of the cord** that is still attached to your leash.
- C. Flatten the melted cord end against a hard surface and make sure that the cord end is large enough, so it will **not slip back through the metal ring**.
- D. Once the melted cord end has cooled, **pull the cord tight** so that the cord end is flush against the metal ring.

Tip 5: Troubleshooting

- A. If your **light is not turning ON**, try to recharge using a Micro USB cable.
- B. If your **light is still not turning ON**, test with different charged 3.7v battery.
- C. If your **light is flickering**, first remove the battery. Using a small flat head tool gently bend both metal battery contacts toward the middle where the battery will be positioned. This will tighten your battery connection.
- D. To **Factory Reset** settings {From OFF} hold down the button for 5 seconds.
- E. For any **other issues please visit** www.ultrapoi.com/pages/support.

Please take a moment and **leave a product review**, we value your feedback. Also, if you enjoy our gear use [@UltraPoi](https://twitter.com/UltraPoi) / [#UltraPoi](https://www.instagram.com/UltraPoi) to share on social media!

Color Modes #1-#7: SINGLE COLOR MODES

Color Mode	Flash Pattern #1	Flash Pattern #2	Flash Pattern #3
Color Mode #1	RED STROBE	RED RIBBON	RED HYBRID
Color Mode #2	YELLOW STROBE	YELLOW RIBBON	YELLOW HYBRID
Color Mode #3	GREEN STROBE	GREEN RIBBON	GREEN HYBRID
Color Mode #4	AQUA STROBE	AQUA RIBBON	AQUA HYBRID
Color Mode #5	BLUE STROBE	BLUE RIBBON	BLUE HYBRID

Color Modes #8-#13: SPECIAL COLOR MODES

Color Mode	Flash Pattern #1	Flash Pattern #2	Flash Pattern #3
Color Mode #6	PINK STROBE	PINK RIBBON	PINK HYBRID
Color Mode #7	WHITE STROBE	WHITE RIBBON	WHITE HYBRID
Color Mode #8	REPEAT TIK TOK	REPEAT BOLD	REPEAT CHOPPER
Color Mode #9	FIRE CANDLE	FIRE FLAME	FIRE COMET
Color Mode #10	MORPH CHUNKY	MORPH TRACER	MORPH CANDY

Color Modes #14-#15: CUSTOM & DEMO COLOR MODES

Color Mode	Flash Pattern #1	Flash Pattern #2	Flash Pattern #3
Color Mode #11	RAINBOW DROPS	RAINBOW ROAD	RAINBOW PULSE
Color Mode #12	HYPER DASH DOT	HYPER TWIST	HYPER BLADE
Color Mode #13	TRI COLOR FUZION	TRI COLOR STREAK	TRI COLOR STRIBBON
Color Mode #14	CUSTOM STROBE	CUSTOM RIBBON	CUSTOM HYBRID
Color Mode #15	AUTO PLAYS COLOR MODES & FLASH PATTERNS #1-#14 DEMO PINK	AUTO PLAYS COLOR MODES & FLASH PATTERNS #1-#7 DEMO GREEN	AUTO PLAYS COLOR MODES & FLASH PATTERNS #8-#14 DEMO BLUE

Color Mode Function:
PRESET AND CUSTOM COLOR ARRANGEMENTS DISPLAYED BY THE LIGHT.

Flash Pattern Function:
STROBE DESIGN THAT AFFECTS THE COLOR MODES DISPLAYED BY THE LIGHT.

Color Modes #1 Red - #7 White:
EASY ACCESS TO SINGLE COLORS FOR A BOLD SHOW.

Color Mode #8 Repeat:
CYCLES A NEW INDIVIDUAL COLOR EVERY FEW SECONDS.

Color Mode #9 Fire:
INSPIRED BY FLAME COLORS LIKE RED, ORANGE & YELLOW.

Color Mode #10 Morph:
HUES FROM THE FULL COLOR SPECTRUM FADE SMOOTHLY.

Color Modes #11 Rainbow:
A CLASSIC COLLECTION OF INDIVIDUAL SHADES OF THE RAINBOW.

Color Mode #12 Hyper:
CYCLES A NEW INDIVIDUAL COLOR + WHITE EVERY FEW SECONDS.

Color Mode #13 TriColor:
OUR FAVORITE SETS OF 3 COLOR COMBOS ALTERNATE IN A LOOP.

Color Mode #14 Custom:
SELECT YOUR OWN 2 COLOR COMBOS. WHITE + TROPICAL IS DEFAULT.

Color Modes #15 Demo:
AUTO PLAY COLOR MODES AND FLASH PATTERNS IN VARIOUS ORDERS.