

Custom Color Menu Function

- A. The Custom Color Menu allows you to select and save any 2 color combo from the Custom Colors #1-#15 below. View your combo on Color Mode #14 (Custom).
- B. The Custom Color combo that you last saved, stays with the light even if it is turned OFF. Overwrite your previous save by creating a new combo.


Enter Custom Color Menu

- A. **Step 1:** To enter the Custom Color Menu, (From OFF) hold down the button for 1 second until the light flashes (Orange) and then release.
- B. **Step 2:** Confirm that you now see the 1st Custom Color #1 (Red), which means that you have successfully entered the Custom Color Menu.


Program Custom Color Menu

- A. **Step 1:** Click the button to cycle between the Custom Colors #1-#15, after the last Custom Color #15 (Pastel) the cycle starts over with Custom Color #1 (Red).
- B. **Step 2:** Find your 1st Custom Color to select, and hold down the button until the light flashes (Orange) and then release. This will save your 1st Custom Color and return you to the start of the Custom Color Menu with Custom Color #1 (Red).
- C. **Step 3:** Find your 2nd Custom Color to select, and hold down the button until the light flashes (Orange) and then release. This will save your 2nd Custom Color and automatically exit the Custom Color Menu to view Color Mode #14 (Custom).

Custom Colors #1-#15 Guide

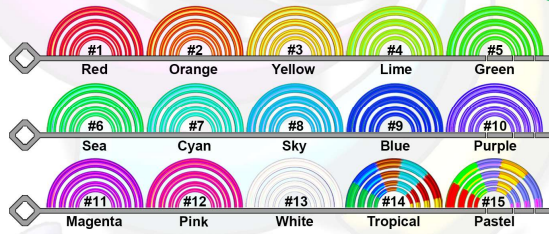

Orb Pro Shell Guide

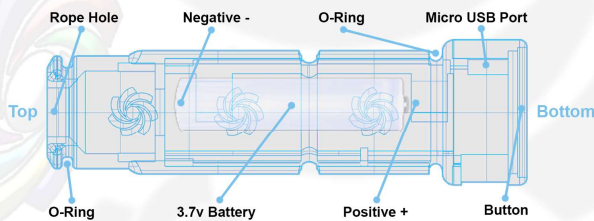

Tip 1: Charging Orb Poi Pro Battery

- A. Recharge the light by pushing downward on the top of the ball near the rope so that the **light slides out of the bottom exposing the Micro USB port**.
- B. **Plug in a Micro USB** type cable into the charging port located near the bottom of the light by the button. **Red = Charging / Green = Full**
- C. We recommend official **UltraPoi 3.7v Rechargeable Li-on** type batteries.
- D. **If needed, replace 3.7v battery** by removing the black O-rings on light.

Tip 2: Orb Poi Pro Quick Button Controls

- A. The light is controlled by a **button located on the bottom of the ball**.
- B. **Turn Light ON:** Click Button 2 times to turn Light ON.
- C. **Turn Light OFF:** Hold Button for .5 sec until Light turns OFF, then Release.
- D. **Change Color Mode:** Click Button to cycle Color Modes #1 - #15 then OFF.
- E. **Change Flash Pattern:** From any Color Mode, Hold Button for 1 second until Light flashes Orange, then Release. Click Button to cycle Flash Patterns #1 - #3 in a Loop. To select a Flash Pattern, Click and Hold Button Down for 1 second, then Release to return to Color Modes. Selections will be saved to Color Mode.
- F. **Smart Button Lock:** If Light is ON and there is no Button activity for more than 3 seconds, Smart Button Lock will Activate. To Deactivate, Click Button 2 times in less than a 3 second period. This will prevent accidental button clicks.

Tip 3: Install Dot XL Pro LED Chips in Handles

- A. **Pull the knob upward** along the cord to expose the clear plastic knob shell.
- B. **Remove the black O-ring** to open the knob shell and access the interior.
- C. Install the LED chip by **lining up the USB port cutout**, then close the knob shell around it, next replace the O-ring and finally slide the knob back down.

Tip 4: Adjust the Length Using Extra Rope

- A. **Expose the ball and knob shells** by pushing them out of the soft silicone.
- B. Remove all of the O-rings and **separate the shells from the rope**.
- C. **Find your desired length** and mark it by wrapping a piece of tape around.
- D. **Cut the rope with scissors**, the tape should prevent the rope from fraying.
- E. Using a lighter, **slowly melt the end of the rope** so that it forms a large cap.
- F. **Slide the metal rings** included with the extra rope down near the cap.
- G. Repeat the same process for your other rope and **reassemble the poi**.

Tip 5: Troubleshooting

- A. If your **light is not turning ON**, try to recharge using a Micro USB cable.
- B. If your **light is still not turning ON**, test with different charged 3.7v battery.
- C. If your **light is flickering**, first remove the battery. Using a small flat head tool gently bend both metal battery contacts toward the middle where the battery will be positioned. This will tighten your battery connection.
- D. To **Factory Reset** settings (From OFF) hold down the button for 5 seconds.
- E. For any **other issues** please visit www.ultrapoi.com/pages/support.

Please take a moment and **leave a product review**, we value your feedback. Also, if you enjoy our gear use [@UltraPoi](https://twitter.com/UltraPoi) / [#UltraPoi](https://www.instagram.com/UltraPoi) to share on social media!



Color Modes ■ Flash Patterns ■ Mode & Pattern Tips

Color Modes #1-#7: SINGLE COLOR MODES	Flash Pattern #1	Flash Pattern #2	Flash Pattern #3	Color Modes #8-#13: SPECIAL COLOR MODES	Flash Pattern #1	Flash Pattern #2	Flash Pattern #3	Color Modes #14-#15: CUSTOM & DEMO COLOR MODES	Flash Pattern #1	Flash Pattern #2	Flash Pattern #3
Color Mode #1	RED STROBE	RED RIBBON	RED HYBRID	Color Mode #6	PINK STROBE	PINK RIBBON	PINK HYBRID	Color Mode #11	RAINBOW DROPS	RAINBOW ROAD	RAINBOW PULSE
Color Mode #2	YELLOW STROBE	YELLOW RIBBON	YELLOW HYBRID	Color Mode #7	WHITE STROBE	WHITE RIBBON	WHITE HYBRID	Color Mode #12	HYPER DASH DOT	HYPER TWIST	HYPER BLADE
Color Mode #3	GREEN STROBE	GREEN RIBBON	GREEN HYBRID	Color Mode #8	REPEAT TIK TOK	REPEAT BOLD	REPEAT CHOPPER	Color Mode #13	TRI COLOR FUZION	TRI COLOR STREAK	TRI COLOR STRIBBON
Color Mode #4	AQUA STROBE	AQUA RIBBON	AQUA HYBRID	Color Mode #9	FIRE CANDLE	FIRE FLAME	FIRE COMET	Color Mode #14	CUSTOM STROBE	CUSTOM RIBBON	CUSTOM HYBRID
Color Mode #5	BLUE STROBE	BLUE RIBBON	BLUE HYBRID	Color Mode #10	MORPH CHUNKY	MORPH TRACER	MORPH CANDY	Color Mode #15	AUTO PLAYS COLOR MODES & FLASH PATTERNS #1-#14	AUTO PLAYS COLOR MODES & FLASH PATTERNS #1-#7	AUTO PLAYS COLOR MODES & FLASH PATTERNS #8-#14

- Color Mode #1-#7:** Function: PRESET AND CUSTOM COLOR ARRANGEMENTS DISPLAYED BY THE LIGHT.
- Flash Pattern #1-3:** Function: STROBE DESIGN THAT AFFECTS THE COLOR MODES DISPLAYED BY THE LIGHT.
- Color Modes #7 White:** #7 White: EASY ACCESS TO SINGLE COLORS FOR A BOLD SHOW.
- Color Mode #8 Repeat:** #8 Repeat: CYCLES A NEW INDIVIDUAL COLOR EVERY FEW SECONDS.
- Color Mode #9 Fire:** #9 Fire: INSPIRED BY FLAME COLORS LIKE RED, ORANGE & YELLOW.
- Color Mode #10 Morph:** #10 Morph: HUES FROM THE FULL COLOR SPECTRUM FADE SMOOTHLY.
- Color Modes #11 Rainbow:** #11 Rainbow: A CLASSIC COLLECTION OF INDIVIDUAL SHADES OF THE RAINBOW.
- Color Mode #12 Hyper:** #12 Hyper: CYCLES A NEW INDIVIDUAL COLOR + WHITE EVERY FEW SECONDS.
- Color Mode #13 TriColor:** #13 TriColor: OUR FAVORITE SETS OF 3 COLOR COMBOS ALTERNATE IN A LOOP.
- Color Mode #14 Custom:** #14 Custom: SELECT YOUR OWN 2 COLOR COMBOS. WHITE + TROPICAL IS DEFAULT.
- Color Modes #15 Demo:** #15 Demo: AUTO PLAY COLOR MODES AND FLASH PATTERNS IN VARIOUS ORDERS.