

Connecting to BT

- Please turn the Speaker on and put it on the "OPEN" Mode
On your smart device search for the BT device and you
- should see "MPD1223" as one of your devices
- Please select that on your smart device and you should be connected to BT.
- Now you should be ready to enjoy your tunes through this speaker

MMC Function

- Press "MODE" on remote or "Mode" on back panel to switch to MMC Mode or just insert a MMC card.
MMC mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

USB Function

- Press "MODE" on remote or "Mode" on back panel to switch to USB Mode or just insert a USB flash drive.
USB mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

FM Radio Function

- Press "MODE" on remote or "Mode" on back panel to switch to FM Mode. Radio will start automatically.
- Press "PLAY/PAUSE" to enter into automatic FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.




OPERATING MANUAL

MODEL:MPD1223




Carefully read User Guide to operate this unit properly.
Keep for future reference.

REMOTE CONTROL

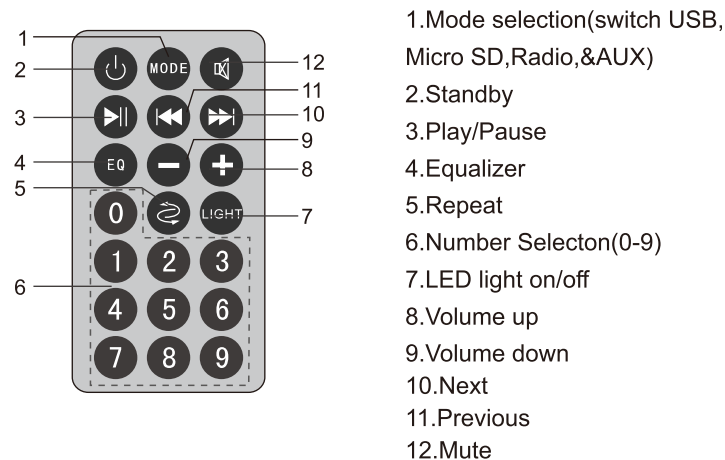

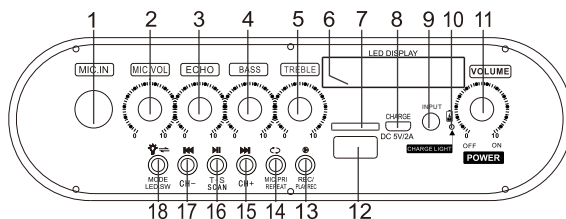

CONTROL PANEL FUNCTION DECLARATION



TWS FUNCTION (HOW TO PAIR TWO SPEAKERS TOGETHER)

1. Power on both the speakers of the same model
2. Make sure both the speakers are within 2 feet
3. Once you power on, both the speakers front display should be flashing "OPEN"
4. Pick any speaker and press play/pause for 3 seconds
5. The two speakers which were flashing open, one of the speakers will stop flashing open will read steady "OPEN" on the display
6. Now take your smart device, search for the BT MPD1223 and connect it
7. You should have stereo sound from both the speakers
8. To Disconnect both the speakers, please and hold Play/pause for 3 seconds.

Important Notes:  **CAUTION** 

1. Do not use the machine while charging. This may cause battery damage.
2. To save battery power, turn off speaker lights when not in-use.
3. Please keep machine away from water and moisture.
4. Do not open the machine or remove the back panel. This machine carries high voltage and could be very dangerous.
5. In case of service needed, please call a certified technician or our customer service department. Do not attempt to fix yourself.



1-866-661-8843
 Info@maxpowerus.com

Best Quality karaoke Machines BT Speakers Portable Speakers

Maxpower is the largest manufacturer of karaoke speakers, karaoke machines, portable BT speakers, BT speakers.

www.maxpowerus.com