

Instruction Manual

Pikler Triangle



Note

- We suggest 1 person to take charge of the assembly.
- Assembly takes 10 -15 minutes.
- Involve your child in the assembly as this will give them a sense of belonging and will warm the child towards the Pikler Triangle.
- Mildly secure the screws. Tighten after you complete the assembly.
- Don't over tighten

Step - 1

Place the triangular legs (Leg 1 & 2) parallel to each other and position the rods between the legs.



Step - 2

Use the smaller screws & mildly secure the rods below the triangular portion (leg 1&2) with the allen key.

Step - 3


Use the two long screws to secure the rods in triangular portion (leg1&2) with the allen key.



Step - 4

Place the rods on the legs without the triangles (leg 3&4)

Don't secure the top rod.

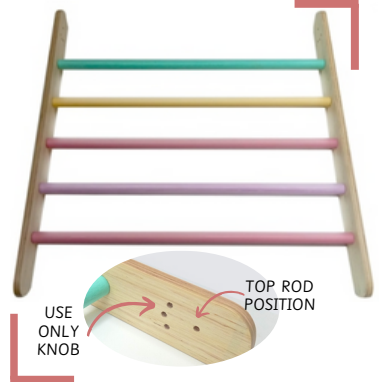

Step - 5

Use the smaller screws & mildly secure the rods (legs 3&4) with the allen key.


Step - 6

Slide in legs 3&4 with the other triangular legs 1&2.



Step - 7

Mildly secure the top rod with the legs 3&4 using the longer screw and allen key.

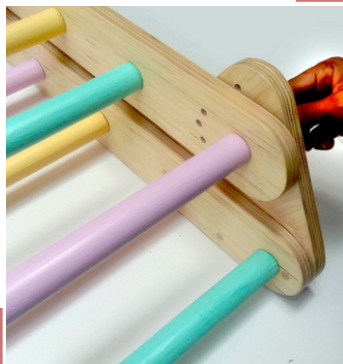

Step - 8

Spread the triangle in your desired angle & Secure the pikler with knobs given on both legs.



KNOBS

Secure the pikler with the knobs given on both legs.





Ensure all the rods are fastened firmly. If there is any wobble, loosen the screws, give a slight shake to the pikler - so that the screw, rod and legs align to fit. then tighten the screws with the allen key.

NOTE


Over tightening screw or twisting rod when tightening will cause the wood nuts to loosen.

STEP TO CHANGE THE POSITION OF THE PIKLER

- Loosen up the screw next to the knob
- Remove the knob and change to the desired position
- Secure the position on both legs with the knob
- Tighten the screw next to the knob with the allen key.



3 ADJUSTABLE POSITIONS

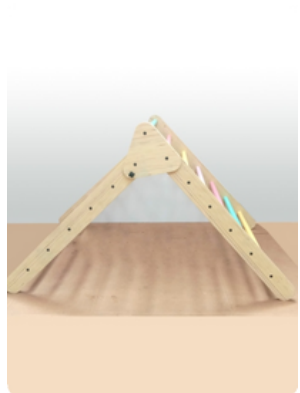

STEP TO FOLD & STORE THE PIKLER

- Loosen up the screw next to the knob
- Remove the knob fully
- Fold the pikler and store it

Make sure to keep the knobs in a safe place.

Make sure you follow step 7 - 9 when using the pikler again for your child's safety.



Your Pikler Triangle is ready for exploration.

Thank you for getting me home!



www.ariotoys.com

89399 92452/ help@ariotoys.com