


DAIWA BAITCASTING REEL

LX-TW300HL-P

*Please order by parts number, not key number.

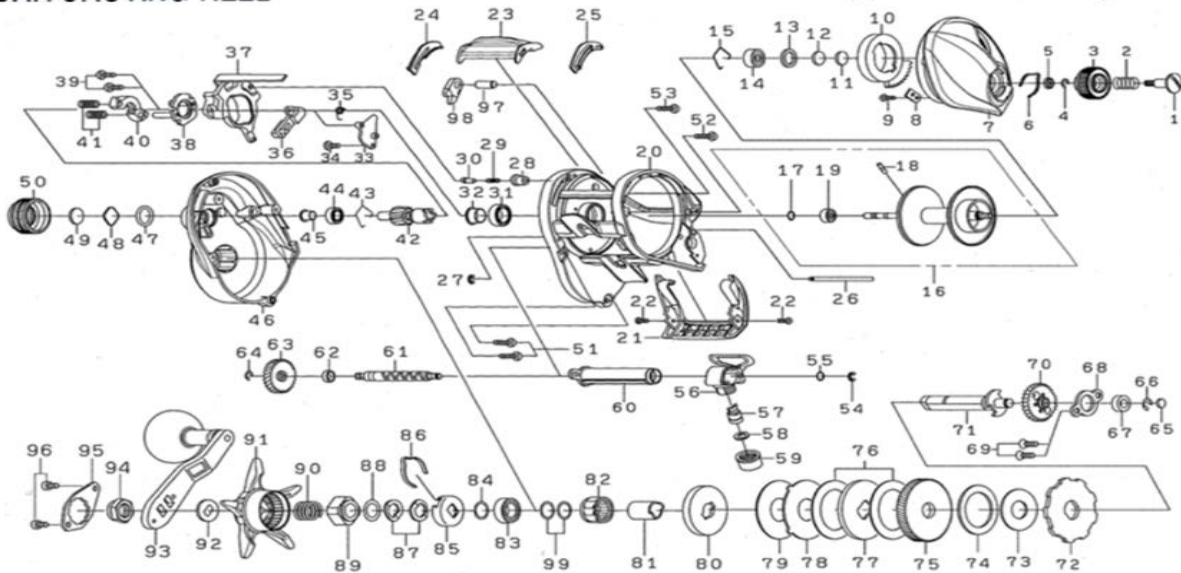

Key No	Part No	Description	Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW	52	G94-5819	RIGHT SIDE PLATE SCREW(B)
2	E16-7101	BRAKE DIAL SPRING	53	G04-0832	RIGHT SIDE PLATE SCREW(C)
3	J93-5802	BRAKE DIAL	54	320-5901	WORM SHAFT RETAINER(A)
4	B33-9801	BRAKE DIAL RETAINER(A)	55	B41-1702	WORM SHAFT WASHER(0.1MM)
5	F63-7701	BRAKE DIAL WASHER	56	J97-3801	LEVEL WIND
6	J93-5901	BRAKE CLICK SPRING	57	121-4212	PAWL
7	J99-0903	RIGHT SIDE PLATE	58	373-1303	PAWL WASHER
8	J94-6901	BRAKE DIAL RETAINER(B)	59	F40-2801	PAWL HOLDER NUT
9	G93-9301	BRAKE DIAL RETAINER(B) SCREW	60	J99-0601	WORM SHIELD
10	J97-4501	MAGNET HOLDER	61	J93-4101	WORM SHAFT
11	375-7404	RS BEARING WASHER (A)	62	G46-9001	WORM SHAFT BALL BEARING
12	375-7411	RS BEARING WASHER (B)	63	J93-4201	WORM SHAFT GEAR
13	375-7404	RS BEARING WASHER (C)	64	B33-9801	WORM SHAFT GEAR RETAINER
14	G51-1501	RS BALL BEARING	65	G09-9801	GEAR SHAFT WASHER(0.1MM)
15	F03-2201	RS BEARING RING	66	320-8002	GEAR SHAFT RETAINER
16	M16-7401	SPOOL ASSY (16 TO 19)	67	J93-3401	GEAR SHAFT COLLAR
20	M16-7201	FRAME	68	M04-0001	GEAR SHAFT PLATE
21	J93-5502	FRONT COVER	69	G80-3505	GEAR SHAFT PLATE SCREW
22	H53-1511	FRONT COVER SCREW	70	J93-3501	DRIVE SHAFT GEAR
23	J93-3101	CLUTCH LEVER	71	J93-3302	DRIVE SHAFT
24	J93-2601	CLUTCH LEVER PLATE (R)	72	J93-4401	RATCHET
25	J93-2501	CLUTCH LEVER PLATE (L)	73	H66-1101	DRIVE GEAR WASHER(A)
26	J93-5601	OSCILLATING POST	74	H35-9001	DRIVE GEAR WASHER(B)
27	H70-4101	OSCILLATING POST RETAINER	75	M12-4002	DRIVE GEAR
28	H91-0601	CLUTCH CAM PLATE PIN SPRING COLLAR	76	J93-4701	DRAG WASHER
29	H92-8801	CLUTCH CAM PLATE PIN SPRING	77	J93-4801	DRAG DISC WASHER
30	J05-5201	CLUTCH CAM PLATE PIN	78	J93-4901	DRAG LIP WASHER
31	G15-6803	CLUTCH CAM BALL BEARING	79	J97-4301	DRAG WASHER(B)
32	J94-6501	CLUTCH CAM BEARING COLLAR	80	J93-5001	DRAG DISC WASHER(B)
33	J93-3001	KICK LEVER PLATE (A)	81	J37-7801	CLUTCH RING
34	H29-4101	KICK LEVER PLATE (A) SCREW	82	G81-9801	ONEWAY CLUTCH
35	H47-3301	KICK LEVER SPRING	83	G43-1002	HANDLE BALL BEARING
36	J99-0301	KICK LEVER	84	B55-3801	HANDLE BALL BEARING WASHER
37	J98-9901	CLUTCH CAM	85	E70-9201	DRAG HOLDER
38	J93-2901	CLUTCH CAM PLATE	86	E71-5601	DRAG HOLDER LEAF SPRING
39	B03-2904	CLUTCH CAM SCREW	87	150-8901	DRAG SPRING WASHER
40	M10-6001	CLUTCH PLATE	88	H92-9501	STAR DRAG WASHER
41	J97-7701	CLUTCH SPRING	89	J93-5102	DRAG NUT
42	M18-4302	PINION GEAR	90	J01-1901	DRAG NUT SPRING
43	H16-0801	BEARING RETAINER(B)	91	J97-5002	STAR DRAG
44	G46-7101	PINION BALL BEARING	92	J10-1302	HANDLE WAHSER
45	J95-3001	PINION BEARING COLLAR	93	M16-7801	HANDLE ASSY
46	M16-6901	LEFT SIDE PLATE	94	J09-0312	HANDLE NUT
47	B05-5201	ZERO ADJUSTE KNOB RING	95	M09-6501	HANDLE LOCK PLATE
48	J69-2001	ZERO ADJUSTE WASHER (A)	96	H25-7004	HANDLE LOCK PLATE SCREW
49	B17-5503	ZERO ADJUSTE WASHER (B)	97	J94-6701	STOPPER PIN
50	J93-2303	ZERO ADJUSTE KNOB	98	H27-0401	STOPPER
51	G04-0830	RIGHT SIDE PLATE SCREW(A)	99	B55-3802	HANDLE BEARING WASHER