


# CONVENTIONAL REEL

## SAGLD50-2SPD

\*Please order by parts number, not key number.

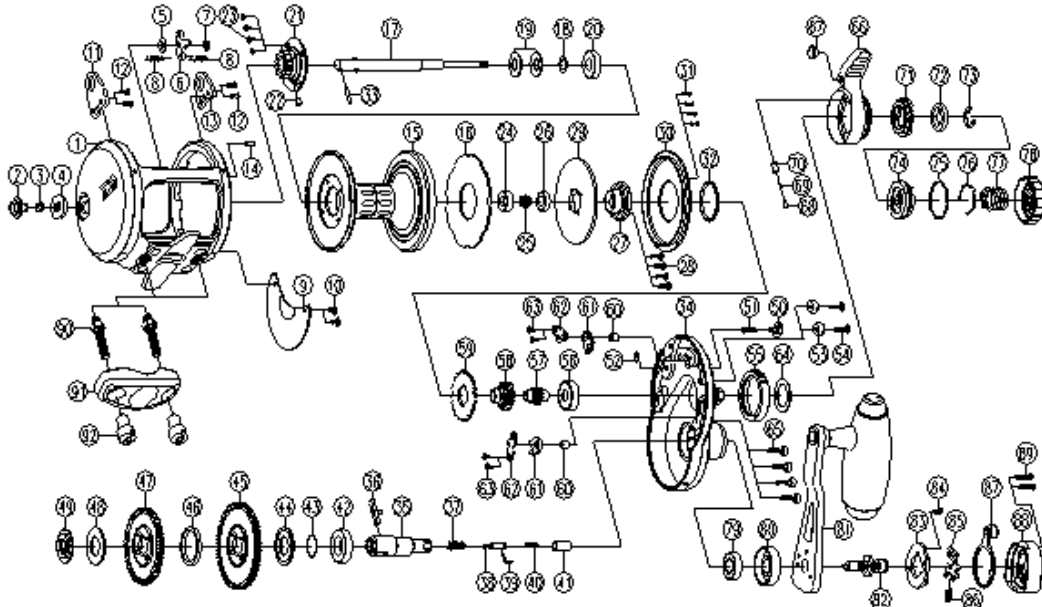

Key No	Part No	Description	Key No	Part No	Description
1	E73-0201	FRAME	47	E73-8501	DRIVE GEAR(B)
2	E76-0501	CLICK BUTTON	48	E73-8601	DRIVE GEAR COLLAR ( D )
3	E72-5301	CLICK COLLAR	49	E73-8701	DRIVE SHAFT NUT
4	E72-5201	CLICK PLATE	50	E75-9601	PUSH BUTTON
5	E61-7402	CLICK BUTTON WASHER	51	E68-6201	PUSH BUTTON SPRING
6	E67-9301	CLICK PAWL	52	B33-9801	PUSH BUTTON RETAINER
7	320-1402	CLICK PAWL RETAINER	53	E64-4301	DRAG LEVER STOPPER COLLAR
8	E73-2201	CLICK SPRING	54	E59-1601	DRAG LEVER STOPPER SCREW
9	E73-0804	FRAME PLATE	55	E75-8201	CLICK GEAR
10	F50-5703	FRAME PLATE SCREW	56	E68-5601	BALL BEARING(E)
11	E76-1201	HARNESS LUG(L)	57	E77-9001	PINION GEAR(A)
12	E76-0901	HARNESS LUG SCREW	58	E73-8901	PINION GEAR(B)
13	E76-1301	HARNESS LUG(R)	59	E73-1901	ANTI REVERSE RATCHET
14	E73-2501	PIN	60	E75-9001	ANTI REVERSE PAWL PIN
15	E76-1401	SPOOL	61	E75-9301	ANTI REVERSE PAWL
16	E76-1501	DRAG WASHER	62	E76-1101	ANTI REVERSE PAWL RETAINER
17	E73-2901	MAIN SHAFT	63	E64-3802	ANTI REVERSE PAWL SCREW
18	E73-1001	BEARING WASHER	64	E73-2101	DRAG LEVER WASHER
19	E73-1201	DRAG SPRING WASHER	65	E73-9101	SIDE PLATE SCREW
20	H42-8701	BALL BEARING(A)	66	E73-2401	DRAG LEVER
21	E73-3301	DRAG CLICK CAP	67	E75-9501	DRAG LEVER COLLAR
22	B35-2701	BRAKE COLLAR	68	E75-9401	CLICK PAWL
23	G29-7001	DRAG CLICK CAP SCREW	69	M16-3301	CLICK PAWL SPRING
24	G53-6001	BALL BEARING(B)	70	E72-8201	CLICK PAWL COLLAR
25	E73-6701	SPRING(A)	71	E76-2001	PRESET CAM(A)
26	F81-2104	BALL BEARING ( C )	72	E73-1101	BUSHING
27	E73-6901	DRAG METAL	73	E73-9801	BUSHING RETAINER
28	351-1008	DRAG METAL SCREW	74	E73-9001	PRESET CAM(B)
29	E73-7102	DRAG PLATE	75	E72-9001	O RING
30	E75-8901	DRAG WASHER COVER	76	E68-4801	CLICK LEAF SPRING
31	E73-7201	DRAG WASHER COVER SCREW	77	H48-4801	DRAG KNOB SPRING
32	E73-1601	PACKING	78	E74-0201	PRESET DRAG KNOB
33	E73-7301	MAIN SHAFT PIN	79	G52-2801	BALL BEARING(F)
34	E76-0602	RIGHT SIDE PLATE	80	E75-9701	HANDLE CAP(A)
35	E73-7401	DRIVE SHAFT	81	E76-5801	HANDLE ASSEMBLY
36	E73-7501	DRIVE SHAFT PIN(A)	82	E76-1601	HANDLE SCREW
37	E73-7601	DRIVE SHAFT SPRING(A)	83	H42-6101	HANDLE PLATE
38	E73-7701	DRIVE SHAFT SCREW	84	350-8912	HANDLE PLATE SCREW
39	E73-7801	DRIVE SHAFT PIN(B)	85	H42-6301	HANDLE LEVER PLATE
40	E73-8001	DRIVE SHAFT SPRING(B)	86	H42-6201	HANDLE LEVER PLATE SPRING
41	E73-7901	DRIVE SHAFT COLLAR	87	H42-6401	HANDLE LEVER
42	F64-1602	BALL BEARING(D)	88	H56-2103	HANDLE CAP(B)
43	E73-8101	DRIVE GEAR COLLAR(A)	89	G04-0815	HANDLE CAP SCREW
44	E73-8601	DRIVE GEAR COLLAR(B)	90	E74-2003	CLAMP BOLT
45	E77-8901	DRIVE GEAR(A)	91	J01-4404	ROD CLAMP
46	E73-8401	DRIVE GEAR COLLAR(C)	92	H60-0801	CLAMP NUT