



# ELECTRIC HOT WATER URN



*Owners Manual*

# FEATURES

---



## SPECIFICATIONS

Model #: EUR41  
Working Capacity: 40 cup

Supply Voltage: 120V  
Power Consumption: 60Hz/750W

# IMPORTANT SAFEGUARDS

---

This appliance is for **HOUSEHOLD USE ONLY**.

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
3. Do not touch the surface. The surface of the water urn gets very hot during use.
4. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Magic Mill may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner.
11. Always operate the appliance on a smooth, even and stable surface that is adequate to support the weight when full of water and keep it away from the edge of counter to avoid accident.
12. Do not use appliance for anything other than intended use.
13. Do not lift or move the urn when it contains hot water.
14. Do not remove the lid while boiling.
15. Do not switch on the cooker if the pan is empty.
16. Always ensure the voltage on the rating label corresponds to the voltage in your home.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Always unplug the appliance when not in use.
18. Always put water in the urn before switching on. Do not switch on the water urn, if the water tank is empty.
19. Do not overfill urn as there is a risk that boiling water will be ejected from around the lid.

**SAVE THESE INSTRUCTIONS**

# OPERATING INSTRUCTIONS

---

## READ ALL INSTRUCTIONS BEFORE USE

Before using for the first time:

1. Remove all tags and labels.
2. Fill urn with water and heat. Discard the water and repeat.

## DO NOT IMMERSE THE BASE UNIT IN WATER

### Heating Water

1. Place the appliance on a flat surface. Plug in.
2. Place the drip tray on the base underneath the tap
3. Twist lid counter-clockwise and lift. Fill the urn with the desired amount of water. Do not fill above the MAX capacity mark.
4. Always put water in the urn before switching on. Plug the unit into an outlet.
5. **Heating Mode:** To heat water switch both buttons on at the same time. The red light will turn on, the green light will remain off. The red indicator light will be illuminated when water is boiling.
6. Turn the thermostat to the desired setting. *NOTE: This urn is not intended to continuously boil water, due to the hazards of steam and water escaping from under the lid. After the water is boiled the urn will automatically switch to Keep Warm and the green light will illuminate showing that the urn is preserving heat. During the keep-warm mode, if you refill cold water into the urn, and the water temperature drops below 82° C, the drop in temperature will cause the urn to reheat the water back to to be 98° C. Then the urn will go back to auto keep-warm with the water temperature around 94° C.*
7. **Keep Warm Mode:** Turn off the first switch and keep the second switch turned on. The red light will turn off and the green light will illuminate, no matter what the water temperature is. The keep-warm temperature is 94° C. If the water becomes low, and you refill/add cold water to the Max line, the urn will slowly reheat in keep-warm mode. It will take around 4 hours to reheat back to 94° C. *NOTE: No matter if the first switch is on or off, once the second switch is off, the urn will turn off.*
8. Use the water faucet to dispense water. Open the tap by depressing the lever tap to the horizontal position; close the tap by returning the lever to the vertical position.
9. When about three cups of water are remaining in the urn, turn the appliance off and unplug it from the electric outlet.

## Boil-dry Protection

The urn is equipped with boil-dry protection. If the urn is operated with too little water the urn will beep continuously until you switch the urn to OFF or unplug the unit. Allow the unit to cool (about 30 seconds) then add water. Turn on the urn and heat the water. If beeping continues - turn off unit, unplug, and wait for the urn to fully cool down.

## Thermal Cut-Out

The urn is equipped with a thermal cut-out, which protects the urn from damage when there is continuous misuse of urn (boil dry, switched on without water or the appliance exterior has been exposed to water) the thermal cut-out will stop the appliance from working.

**NOTE:** Do not confuse thermal cut-out with boil-dry protection. Thermal cut-out in the appliance is a disposable part. Once the thermal cut-out is triggered, it will be impaired and cannot be used again; therefore the

# CLEANING & MAINTENANCE

---

*Always make sure the unit is unplugged and powered off before storing away or cleaning. Make sure the unit has cooled down completely before cleaning.*

1. Always rinse the water boiler immediately after each use.
2. Pour a small amount of hot water into the tank. Rinse with hot water until it runs clean.
3. Clean interior of unit and any scale or sediment from the element with a soft brush or sponge.
4. Rinse with hot water until the water runs clean.
5. Remove the lid and clean.
6. Clean the exterior with water and detergent. Do not use harsh abrasive cleaners to avoid scratches as this could damage the surface finish.
7. Use a soft cloth to wipe the urn body dry.
8. Always remember to empty and rinse the urn with hot water before using again.
9. When using tap water it is important to clean the bottom heating element and the sides of the unit once every two weeks.
10. To remove calcium deposits, boil water with vinegar or lemon juice.

**NOTE: any damage to the unit caused by calcium deposits is not covered under the warranty.**

**DO NOT SUBMERGE THE BASE UNIT OR CORD INTO WATER OR ANY OTHER LIQUID OR THIS MAY DAMAGE THE UNIT.**

## Storing Instructions

- Be sure all parts are clean and dry before storing.
- Store appliance in its box or in a clean , dry place.
- Never store unit while it is hot or wet.

## De-scaling:

In hard water areas scale will form on the element and interior. This will adversely affect the operation of the urn if allowed to accumulate. De-scale on a regular basis, using a suitable de-scaler recommended for stainless steel kettles. Follow the instructions provided with the de-scaling product.





2 Alpine ct. STE 102 • Chestnut Ridge • NY 10977

201.785.8840 | [sales@royaluxusa.com](mailto:sales@royaluxusa.com)