




HOT PLATE  
MHPE603 | MHPE703 | MHPE803



*Owner's Manual*

# FEATURES

---

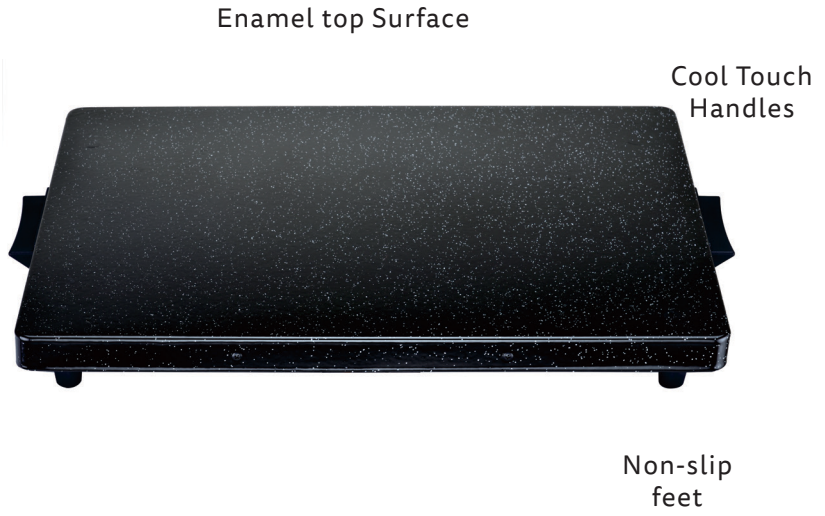

# SPECIFICATIONS

Model #:  
MHPE603 SMALL | MHPE703 LARGE | MHPE803 EXTRA LARGE

# IMPORTANT SAFEGUARDS

---

## HOUSEHOLD USE ONLY

1. READ ALL INSTRUCTIONS BEFORE USE.
2. WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:
  3. Never immerse this unit or power cord in water or any other liquid.
  4. Do not allow water to seep into the unit frame or allow heating elements to come into contact with water.
  5. To protect against electrical shock, do not immerse the power cord or power plug in water or in any other liquid.
  6. CAUTION: Unit gets HOT. Use handles and knobs provided.
  7. Do not touch warming tray surface. Always use hot pads or potholders until unit cools.
  8. CAUTION: Do not place non-heat resistant objects or containers on this warming tray. Some non-heat resistant objects include plastic containers.
  9. Some examples of heat-resistant cooking utensils that may be placed on the warming tray surface include stainless steel and aluminum pots and pans. Check with your cookware manufacturer to make sure your utensils are heat-resistant before placing any object on the unit.
10. Place the appliance on a hard, flat level surface and keep at least 8 inches of space between this unit and other objects to avoid interruption of airflow underneath the hot plate. Do not block airflow from under the unit.
11. Only place this unit on heat resistant surfaces.
12. DO NOT place this unit on non-heat resistant surfaces.
13. Some heat resistant surfaces include granite, stainless steel, quartz, marble, glass, soapstone, travertine, and limestone.
14. Do not use this unit on the following surface materials: butcher block, wood, recycled material, concrete, bamboo and plastic. This list is meant to be a guide only and is not exclusive to the materials mentioned above. We recommend that you check with your counter or table manufacturer to make sure the surface is heat-resistant before using this unit on the desired surface.
15. Do not place this unit on a wet surface or near any flammable objects CAUTION: DO NOT cover surface or side vents. Covering this unit can cause fire hazard. Covering this unit with aluminum foil can cause glass to shatter
16. Keep out of reach of children.
17. Close adult supervision is necessary when any appliance is used by or near children. This appliance should not be used by children.
18. Never leave unit unattended when children are present.
19. Unplug the appliance from the outlet when not in use and before cleaning. Allow appliance to cool before cleaning appliance.
20. Do not operate any electrical appliance with a damaged power cord or power plug or operate it after the appliance malfunctions, or has been dropped or damaged in any manner. Return this appliance to nearest authorized service facility for examination, repair or adjustment.
21. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury to persons.
22. Do not use outdoors or for commercial purposes.
23. Do not let cord hang over edge of table or counter, or allow it to come into contact with hot surfaces including stove.
24. Do not move this unit while in use.
25. Do not place appliance on or near a hot gas stove, or inside heated oven or microwave.

# IMPORTANT SAFEGUARDS CONT.

---

26. Do not use the appliance for other than its intended use.
27. Do not use any scouring agents or abrasive pads when cleaning this unit
28. Do not place unit in dishwasher.
29. Unplug appliance from outlet when not in use and before cleaning. Allow appliance to cool before cleaning this appliance.
30. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury to persons.
31. DO NOT USE PLASTIC DISHES OR PLASTIC WRAP ON TRAY.
32. Do not use for prolonged periods of time or leave unattended.

## SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.
3. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

## LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.
6. DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.
7. This appliance must be grounded while in use.
8. CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
9. IMPORTANT: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. DO NOT USE PLASTIC DISHES OR PLASTIC WARP ON WARMER TRAY.

# OPERATION INSTRUCTIONS

---

*NOTE: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.*

1. HOW TO USE YOUR WARMER TRAY
2. Plug unit in. The red power ON light will illuminate. Wait a few minutes for the hot plate to reach the warming temperature.
3. NOTE: Food placed on warming tray should be FULLY cooked and already hot. The warmer tray is designed to keep food warm only.
4. This product is not cooking appliance.
5. Be sure to use dishes that are heatproof and are suitable to work over hot surface.

# CLEANING AND MAINTENANCE

---

*DO NOT SUBMERGE THE WARMING TRAY BASE OR LET THE HEAT ELEMENTS COME IN CONTACT WITH WATER. DO NOT ALLOW WATER TO SPILL OR SEEP INTO FRAME.*

1. Do not use any scouring agents or abrasive pads. The best way to clean the this warming tray is with a mild detergent and a soft moist cloth.
2. To polish use a nonabrasive glass cleaner. Any food residue remaining can be wiped away with a soft sponge. Rinse and wipe dry.
3. DO NOT ALLOW WATER TO SPILL OR SEEP INTO FRAME.
4. In extreme circumstances you may use a little bit of steel wool to remove tough stains.

# 1 YEAR WARRANTY

---

## 1. WARRANTY TERMS AND CONDITIONS

2. Your product has a one-year warranty period from the date of purchase from and authorized retail.
3. In the event that the product is defective, please contact us to arrange for a replacement.
4. This warranty only cover defects in workmanship and materials.
5. The warranty does not include damage due to abuse or misuse, any commercial use or accidents. This warranty does not cover normal wear of parts of damage resulting from any of the following: negligent use or misuse of the product, improper voltage or current or use contrary to the operation instructions, repair or alternation by anyone other authorized service center approved by importer.
- 6.
7. MAGIC MILL SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF THE ABOVE INSTRUCTIONS.
8. CONDITIONS:
9. The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer.
10. The manufacture shall not be liable for incidental or consequential damages resulting from the use of this product.
11. USING YOUR WARMER TRAY FOR THE FIRST TIME
12. Before first use, clean the warming tray base with a mild detergent and a soft moist cloth.
13. DO NOT SUBMERGE THE WARMING BASE OR LET THE PLUG COME IN CONTACT WITH WATER OR ANY OTHER LIQUID.
14. DO NOT ALLOW WATER TO SPILL OR SEEP INTO THE FRAME.
15. Heat the warming tray for approximately 10 minutes.
16. NOTE: Temporary smoking might occur. This is normal during initial use.





2 Alpine Ct STE 102 • Chestnut Ridge • NY 10977  
201.785.8840 | [contact@magicmillusa.com](mailto:contact@magicmillusa.com)