

# LeChef

Serious Kitchen Tools

## ELECTRIC HOT WATER URN


LUR30 / LUR40 / LUR60 / LUR75



*Owner's Manual*

# FEATURES

---

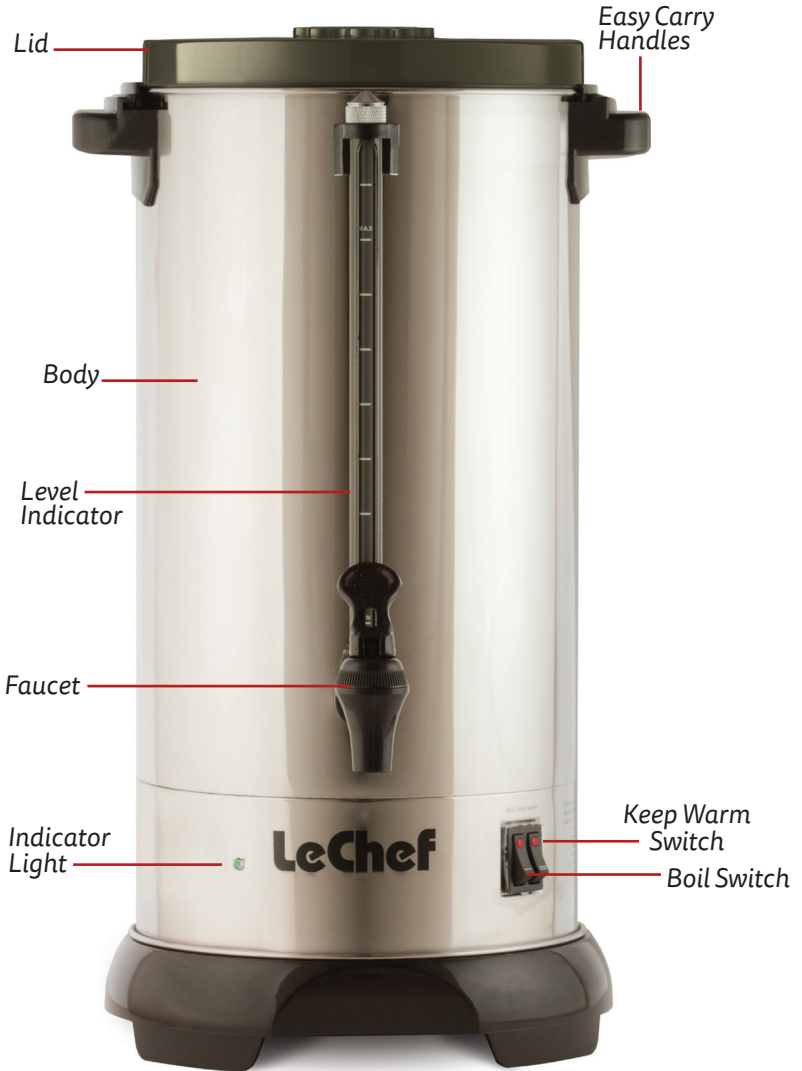

## SPECIFICATIONS

Model #: LUR30 / LUR40 / LUR60 / LUR75  
Power: 1205 W / 1215 W / 1225 W / 1250 W

# IMPORTANT SAFEGUARDS

---

This appliance is for **HOUSEHOLD USE ONLY**.

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**

2. Unplug from outlet when not in use and before cleaning or when assembling and disassembling the unit.
3. Lid must be locked before use.
4. **DO NOT** fill unit with water while urn is plugged into the power socket.
5. If tap water is used, calcium deposits will accumulate on the sides of the unit and/or the heating element. This build up can cause the urn to leak and an increase in energy consumption. To keep the unit in its best condition and prolong the life of the unit, we recommend de-scaling any calcium deposits found. We recommend using filtered water. (To de-scale the unit, see maintenance)
6. Before plugging in the unit, the unit must be filled with water. **DO NOT** fill unit with water past the maximum fill line.
7. Do not touch hot surfaces. Use handles or knobs. To protect against electrical shock do not immerse base, cord, or plug in water or other liquid.
8. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
9. Close supervision is necessary when any appliance is used by or near children.
10. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
11. The use of accessory attachments not recommended by LeChef may result in fire, electric shock or injury to persons.
12. Do not use outdoors.
13. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. Always operate the appliance on a smooth, even and stable surface.
16. Do not use appliance for anything other than intended use.
17. Do not move appliance containing hot liquids.
18. Always ensure the voltage on the rating label corresponds to the voltage in your home.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Always unplug the appliance when not in use.
20. Never immerse the machine in water. If the machine has been soaked, it must be dried and checked by a specialist before using it again.
21. User should stay in the vicinity of the machine while machine is in boiling state.
22. **DO NOT** add water on Shabbat.

## SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

---

## READ ALL INSTRUCTIONS BEFORE USE

*Before first use, fill unit with water, squeeze a fresh lemon (or 2 tbsp of lemon juice) into water, boil water and lemon juice, pour out boiled water and wash out urn in cold water.*

1. Fill the urn with at least  $\frac{1}{3}$  of the total capacity of the Unit with cold water.
2. Cover the unit with the Lid.
3. Plug the Power Cord into electric outlet properly.
4. **Boiling Mode** – Use switch marked "Boil". **Water must be boiled before Shabbat and Holidays.** To boil the water, put the switches marked "boil" and "keep warm" in ON position, both lights will illuminate activating the heating elements. Once the water has finished boiling, the boiling element will automatically shut off. If the water temperature drops and becomes cold, the re-boil will begin only if both "keep warm" and "boil" modes are on.
5. **Keep Warm Mode** - Use switch marked "Keep Warm". Before Shabbat and Holidays water must come to a full boil (as stated in section 1 above).

### Adding COLD Water on Yom Tov

#### **Water must be boiled before Shabbat and Holidays.**

Shabbat and Yom Tov laws:

1. Water needs to be boiled prior to Shabbat and is required to be filled with sufficient amount of water prior to Shabbat and Yom Tov (holidays).
2. After water has boiled, "boil" switch should be turned off and "keep warm" switch turned "on".
3. DO NOT add water on Shabbat.
4. DO NOT change switch modes on Shabbat or Yom Tov (Holidays).
5. Cold water can only be added to unit on Yom Tov (Holidays) when "boiling" switch is "off" and "keep warm" switch is on. To boil the water, put the switches marked "boil" and "keep warm" in ON position, both lights will go on thus activating the heating elements. Once the water has finished boiling (approximately 30 minutes), the "boil" switch should be turned off but "keep warm" switch should remain on.

## Over-Heat Protection / Safety Switch

This unit is equipped with a safety feature which shuts off the unit in case of over-heat or insufficient amount of water. If the unit shuts off, make sure switches are in OFF position and the unit is disconnected from the power supply. The unit should sit and cool for 60 minutes. After the unit has cooled it is ready to be reused. Fill the urn with water to the "Max" line. Plug the unit back in and switch on the "Boil" and "Keep Warm" switches. If the unit does not turn on properly; please contact our customer service hotline for more tips.

## CLEANING & MAINTENANCE

---

*Always make sure the unit is unplugged and powered off before storing away or cleaning. Make sure the unit has cooled down completely before cleaning.*

1. Always rinse the water boiler immediately after each use.
2. Pour a small amount of hot water into the tank. Rinse with hot water until it runs clean.
3. Clean interior of unit and any scale or sediment from the element with a soft brush or sponge.
4. Rinse with hot water until the water runs clean.
5. Remove the lid and clean.
6. Clean the exterior with water and detergent. Do not use harsh abrasive cleaners to avoid scratches as this could damage the surface finish.
7. Use a soft cloth to wipe the urn body dry.
8. Always remember to empty and rinse the urn with hot water before using again.
9. When using tap water it is important to clean the bottom heating element and the sides of the unit once every two weeks.
10. To remove calcium deposits, boil water with vinegar or lemon juice.

**NOTE: any damage to the unit caused by calcium deposits is not covered under the warranty.**

**DO NOT SUBMERGE THE BASE UNIT OR CORD INTO WATER OR ANY OTHER LIQUID OR THIS MAY DAMAGE THE UNIT.**

### De-scaling:

If tap water is used calcium deposits will accumulate on the sides of the unit and/or the heating element. This buildup can cause the unit to leak and will cause an increase in energy consumption. To keep unit in its best condition and prolong the life of the unit, we recommend de-scaling any calcium deposits found. To de-scale the unit follow the directions below:

1. Make sure the unit is unplugged and the switches are in the off position.
2. Put 2-4 tbsp of sour salt, lemon juice or vinegar.
3. Fill the unit until the calcium deposits are covered.
4. Plug the unit into the power socket and put the "boil" switch on for 2 hours.
5. After 2 hours, turn off boil and wait for the unit to cool down.
6. Pour out the water and rinse with fresh water.
7. The unit can now be used again.

### Storing Instructions

- Be sure all parts are clean and dry before storing.  
Store appliance in its box or in a clean , dry place.
- Never store unit while it is hot or wet.

### De-scaling:

In hard water areas scale will form on the element and interior. This will adversely affect the operation of the urn if allowed to accumulate. De-scale on a regular basis, using a suitable de-scaler recommended for stainless steel kettles. Follow the instructions provided with the de-scaling product.



2 Alpine Ct. STE 102 • Chestnut Ridge • NY 10977  
201.785.8840 | [sales@royaluxusa.com](mailto:sales@royaluxusa.com)