



# HOT WATER URN

MUR150, MUR200



Owner's Manual

# FEATURES

---



## SPECIFICATIONS

Model#: MUR150, MUR200  
Wattage: 1150W

Supply Voltage: 120V  
Temperature Range: 86-212° F

# IMPORTANT SAFEGUARDS

---

This appliance is for **HOUSEHOLD USE ONLY**.

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Unplug from outlet when not in use and before cleaning or when assembling and disassembling the unit
3. Do not touch hot surfaces. Use handles or knobs. To protect against electrical shock do not immerse base, cord, or plug in water or other liquid.
4. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Magic Mill may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always operate the appliance on a smooth, even and stable surface.
12. Do not use appliance for anything other than intended use.
13. Do not move appliance containing hot liquids.
14. Always ensure the voltage on the rating label corresponds to the voltage in your home.
15. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Always unplug the appliance when not in use.
16. Never immerse the machine in water. If the machine has been soaked, it must be dried and checked by a specialist before using it again.
17. User should stay in the vicinity of the machine while machine is in boiling state .
18. The minimum volume to operate must be up to 1/3 of the maximum capacity.

## SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

---

## **READ ALL INSTRUCTIONS BEFORE USE**

*Before first use, wash all attachments in warm soapy water and dry with a clean dry cloth.*

1. Make sure the Temperature Controller is set at "0" position.
2. Fill cool water into the Urn to at least half of total capacity
3. Cover the unit with the Lid.
4. Plug the Power Cord into electric outlet.
5. Turn the Power Switch "ON", and the Indicator Lamp will indicate the power is connected.
6. Turn Temperature Controller to the temperature that you prefer.
7. The Indicator Lamp will keep off and the water will start to heat up.
8. When the Indicator Lamp light up, the brewing process is completed. The urn of hot water is now ready to be served.
9. When the temperature cool down about 41-50° degrees F less than the number that you set, the system will re-start to heat up automatically and the Indicator Lamp will turn off again.
10. If user sets the Knob of Controller beyond (or very close) to the Number of 212° F, the machine will always be maintained in "Boiling State" AND WILL NOT STOP until user turn the Power Switch off or turns the Knob of Controller away from the rated of 212° F (or beyond 212).

**CAUTION: Do not touch the outside of the appliance during use! IT IS HOT!!!**

# CLEANING & MAINTENANCE

---

*Always make sure the unit is unplugged and powered off before storing away or cleaning. Make sure the unit has cooled down completely before cleaning.*

1. Always rinse the water boiler immediately after each use.
  2. Pour a small amount of hot water into the tank. Rinse with hot water until it runs clean.
  3. Clean interior of unit and any scale or sediment from the element with a soft brush or sponge.
  4. Rinse with hot water until the water runs clean.
  5. Remove the lid and clean.
  6. Clean the exterior with water and detergent. Do not use harsh abrasive cleaners to avoid scratches as this could damage the surface finish.
  7. Use a soft cloth to wipe the urn body dry.
  8. Always remember to empty and rinse the urn with hot water before using again.
  9. When using tap water it is important to clean the bottom heating element and the sides of the unit once every two weeks.
  10. To remove calcium deposits, boil water with vinegar or lemon juice.
- NOTE: any damage to the unit caused by calcium deposits is not covered under the warranty.**

**DO NOT SUBMERGE THE BASE UNIT OR CORD INTO WATER OR ANY OTHER LIQUID OR THIS MAY DAMAGE THE UNIT.**

## Storing Instructions

- Be sure all parts are clean and dry before storing.  
Store appliance in its box or in a clean, dry place.
- Never store unit while it is hot or wet.

## De-scaling:

In hard water areas scale will form on the element and interior. This will adversely affect the operation of the urn if allowed to accumulate. De-scale on a regular basis, using a suitable de-scaler recommended for stainless steel kettles. Follow the instructions provided with the de-scaling product.



2 Alpine Ct. STE 102 • Chestnut Ridge • NY 10977  
201.785.8840 | [contact@magicmillusa.com](mailto:contact@magicmillusa.com)