



HOT WATER URN

MUR25, MUR35



Owner's Manual

FEATURES



SPECIFICATIONS

Model#: MUR25, MUR35
Wattage: 1400W

Supply Voltage: 120V
Temperature Range: 86-212° F

IMPORTANT SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Unplug from outlet when not in use and before cleaning or when assembling and disassembling the unit
3. Do not touch hot surfaces. Use handles or knobs. To protect against electrical shock do not immerse base, cord, or plug in water or other liquid.
4. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Magic Mill may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always operate the appliance on a smooth, even and stable surface.
12. Do not use appliance for anything other than intended use.
13. Do not move appliance containing hot liquids.
14. Always ensure the voltage on the rating label corresponds to the voltage in your home.
15. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Always unplug the appliance when not in use.
16. Never immerse the machine in water. If the machine has been soaked, it must be dried and checked by a specialist before using it again.
17. User should stay in the vicinity of the machine while machine is in boiling state .
18. The minimum volume to operate must be up to $\frac{1}{3}$ of the maximum capacity.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

Before first use, wash all attachments in warm soapy water and dry with a clean dry cloth.

1. At least $\frac{1}{3}$ of the total capacity of the Urn should be filled with cool water.
2. Cover the unit with the Lid.
3. Plug the Power Cord into electric outlet properly.
4. Double Switch: Boiling Mode –Use switch marked "Boil" To boil the water, put the Double Switches marked "boil" and "keep warm" in ON position; both lights will go on thus activating the heating elements. Once the water has finished boiling (approximately 30 minutes), the boiling element will automatically shut off. The Indicator Light will light up. If the water is detected to be cool, the re-boil will begin only if both "keep warm" and "boil" modes are on.
5. Double Switch: Keep Warm Mode - Use switch marked "Keep Warm". To boil the water, put the Double Switches marked "boil" and "keep warm" in ON position; both lights will go on thus activating the heating elements. Once the water has finished boiling (approximately 30 minutes), the Indicator Light will light up. The "boil" switch should be turned off but "keep warm" switch should remain on.

CAUTION: Do not touch the outside of the appliance during use! IT IS HOT!!!

CLEANING & MAINTENANCE

Always make sure the unit is unplugged and powered off before storing away or cleaning. Make sure the unit has cooled down completely before cleaning.

1. Always rinse the water boiler immediately after each use.
2. Pour a small amount of hot water into the tank. Rinse with hot water until it runs clean.
3. Clean interior of unit and any scale or sediment from the element with a soft brush or sponge.
4. Rinse with hot water until the water runs clean.
5. Remove the lid and clean.
6. Clean the exterior with water and detergent. Do not use harsh abrasive cleaners to avoid scratches as this could damage the surface finish.
7. Use a soft cloth to wipe the urn body dry.
8. Always remember to empty and rinse the urn with hot water before using again.
9. When using tap water it is important to clean the bottom heating element and the sides of the unit once every two weeks.
10. To remove calcium deposits, boil water with vinegar or lemon juice.

NOTE: any damage to the unit caused by calcium deposits is not covered under the warranty.

DO NOT SUBMERGE THE BASE UNIT OR CORD INTO WATER OR ANY OTHER LIQUID OR THIS MAY DAMAGE THE UNIT.

Storing Instructions

- Be sure all parts are clean and dry before storing.
- Store appliance in its box or in a clean, dry place.
- Never store unit while it is hot or wet.

De-scaling:

In hard water areas scale will form on the element and interior. This will adversely affect the operation of the urn if allowed to accumulate. De-scale on a regular basis, using a suitable de-scaler recommended for stainless steel kettles. Follow the instructions provided with the de-scaling product.

1 YEAR WARRANTY REGISTRATION

WATER BOILER WARRANTY

NAME _____ PHONE _____

STREET ADDRESS _____

CITY _____ STATE _____ ZIP _____

MODEL NO. _____ DATE OF PURCHASE _____



Please cut the top portion of this page and mail to Magic Mill at the following address within 30 days of purchase.

**2 Alpine Court
Chestnut Ridge, NY 10977**

Magic Mill warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE (1) year. Magic Mill, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Magic Mill will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original USA retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on Magic Mill Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: warranty service does NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than Magic Mill or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Magic Mill shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your Magic Mill appliance should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our Customer Service Representatives; 201.785.8840, or send the defective product to Customer Service at the address listed above.



2 Alpine Ct. • Chestnut Ridge • NY 10977
201.785.8840 | contact@magicmillusa.com