

INTERACTIVE FUNBOARD™


3+
Item #: 88-26010

INSTRUCTION MANUAL



EXPLORE
ONE
Where Learning Meets Fun

Customer Service: 866.252.3811

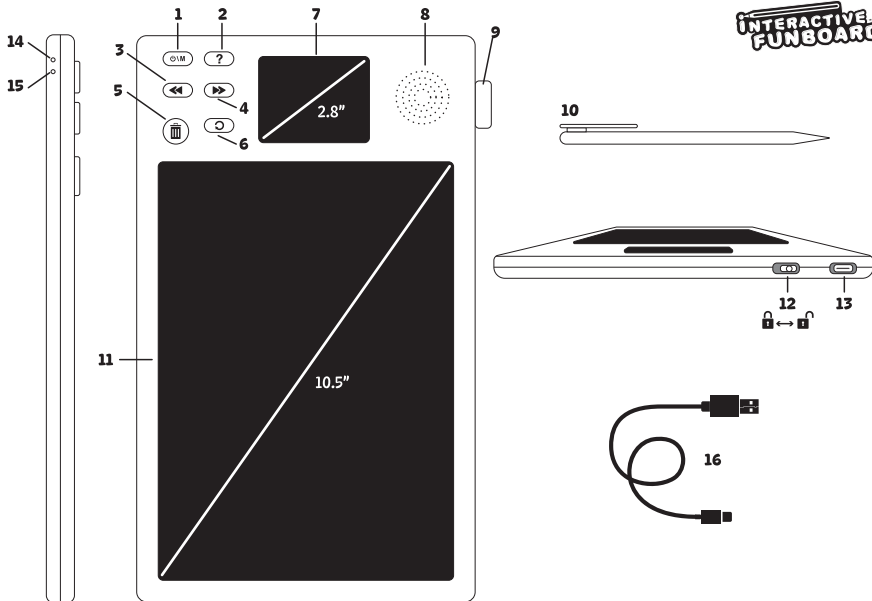

PARTS LIST

- | | | |
|---------------------------------------|------------------------|---------------------------|
| 1. POWER/SELECT BUTTON | 8. SPEAKER | 14. CHARGING STATUS LIGHT |
| 2. AUDIO BUTTON* * ON SOME CATEGORIES | 9. STYLUS HOLDER | 15. RESET BUTTON |
| 3. PAGE BACK/(HOLD)VOLUME DOWN | 10. STYLUS | 16. USB-A TO USB-C CABLE |
| 4. PAGE FORWARD/(HOLD)VOLUME UP | 11. DRAW & WRITE BOARD | |
| 5. ERASE BUTTON | 12. LOCK/UNLOCK SWITCH | |
| 6. RETURN BUTTON/(HOLD)ROTATE IMAGE | 13. USB-C CHARGE PORT | |
| 7. LCD SCREEN | | |



WARNING:

CHOKING HAZARD: Keep packaging material, like plastic bags and rubber bands, out of the reach of children, as these materials pose a choking hazard.

This product contains small parts that could be swallowed by children.

- To avoid damaging the drawing surface, do not apply extreme pressure or use any tool that is not the stylus.

- The Interactive Funboard does not connect to a computer and cannot save images.

- Do not submerge Interactive Funboard in water.

- Do not expose Interactive Funboard to prolonged sunlight.

IMPORTANT SAFETY INSTRUCTIONS

**INTERACTIVE
FUNBOARD**

- Clean only with dry cloth.
- The charging cord should always be readily accessible.
- While it is charging, keep the product and the power cord out of the reach of children to prevent accidental suffocation or electric shock.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent a fire.
- If the charging cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.
- Never bend, pinch or pull the power and connecting cables, extensions and adapters. Protect the cables from sharp edges and heat.
- Before operating, check the device, cables and connections for damage. Never use a damaged unit or a unit with damaged power cables. Damaged parts must be exchanged immediately by an authorized service center.
- Store the device in cool, dry and dust-proof places.
- Do not place or store the device near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not subject the device to temperatures exceeding 60 °C (140 °F).
- Do not disassemble this device. In the event of a defect, please contact your dealer. The dealer will contact the Customer Service Department and can send the device in to be repaired if necessary.

GETTING STARTED

1. PRESS THE POWER/SELECT BUTTON (#1) FOR TWO SECONDS TO TURN ON/OFF THE DEVICE. THE DEVICE'S LCD SCREEN WILL TURN OFF AUTOMATICALLY IF INACTIVE FOR 9 MINUTES.

2. USE THE ARROW BUTTONS (#3 & 4) TO SCROLL THROUGH THE CATEGORIES, THEN PRESS THE POWER/SELECT BUTTON (#1) TO SELECT.

3. PRESS THE AUDIO BUTTON (#2) TO LISTEN TO THE AUDIO. **NOTE: NOT ALL CATEGORIES WILL HAVE AUDIO.**

4. TO DECREASE THE VOLUME, PRESS AND HOLD THE PAGE BACK BUTTON (#3). TO INCREASE THE VOLUME, PRESS AND HOLD THE PAGE FORWARD BUTTON (#4).

5. TO ERASE THE DRAWINGS ON THE SURFACE, PRESS THE ERASE BUTTON (#5). THIS WILL ERASE EVERYTHING THAT IS ON THE DRAWING SURFACE.

TO AVOID ACCIDENTALLY DELETING A DRAWING, YOU CAN DISABLE THE ERASE BUTTON BY SWITCHING THE LOCK/UNLOCK SWITCH (#12) TO THE LOCK POSITION LOCATED ON THE TOP OF THE BOARD. YOU WILL BE ABLE TO CONTINUE TO DRAW ON THE SURFACE WHEN ON THE LOCK POSITION. TO ENABLE THE ERASE BUTTON (#5), SWITCH IT BACK TO THE UNLOCK POSITION.

6. TO GO BACK TO THE LAST MENU PAGE, USE THE RETURN/ROTATE IMAGE BUTTON (#6). PRESS AND HOLD THE RETURN/ROTATE IMAGE BUTTON TO ROTATE THE IMAGE ON THE LCD SCREEN.

CHARGING THE BOARD

1. THIS PRODUCT COMES WITH A RECHARGEABLE LITHIUM POLYMER BATTERY. TO ENSURE A BETTER BATTERY LIFE, PLEASE RECHARGE THE BATTERY FOR 4 HOURS AND ONLY RECHARGE WHEN BATTERY HAS DEPLETED.

2. CHARGE WITH USB TYPE-C CABLE. PLEASE MAKE SURE TO USE A STANDARD 5V 1A WALL CHARGER (NOT INCLUDED).

3. AN INDICATION LIGHT WILL TURN ON THE SIDE OF THE BOARD WHEN CHARGING. ONCE FULLY CHARGED, THE LIGHT WILL TURN OFF.

CHARGING



CHARGED





This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



- Disposal: Keep packaging materials, like plastic bags and rubber bands, away from children as they pose a risk of suffocation. Dispose of packaging materials as legally required. Consult the local authority on the matter if necessary and recycle materials when possible.



- The WEEE symbol if present indicates that this item contains electrical or electronic components which must be collected and disposed of separately.

- Never dispose of electrical or electronic waste in general municipal waste. Collect and dispose of such waste separately.

- Make use of the return and collection systems available to you, or your local recycling program. Contact your local authority or place of purchase to find out what schemes are available.

- Electrical and electronic equipment contains hazardous substance which, when disposed of incorrectly, may leak into the ground. This can contribute to soil and water pollution which is hazardous to human health, and endanger wildlife.

- It is essential that consumers look to re-use or recycle electrical or electronic waste to avoid it going to landfill sites or incineration without treatment.

**INTERACTIVE
FUNBOARD™**



Item #: 88-26010

© 2020 Explore Scientific, LLC.
1010 S 48th Street, Springdale, AR 72762
explorescientificusa.com | 866.252.3811
All rights reserved. Made in China.

**CONTENTS AND COLORS MAY VARY
CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963**