INSTRUCTION MANUAL



Discover The Details!

With its bright LED light and 3x magnifying power, the National Geographic LED Magnifying Glass is a great tool for scientific investigations. Take it on a hike and search rocks along streams and riverbeds for ancient fossils. Go out to your own backyard to identify insects by getting a closer look at their markings. Spend an afternoon studying the intricate details used to mark coins and other currency. The options are endless, so get ready to discover!

Using The LED Light:

The LED light requires three AAA batteries to operate. To install the batteries, remove the compartment door with a screwdriver. Insert 3 AAA batteries following the polarity (+)(-) inside the fitted battery compartment. Do not force a battery into place with the polarity reversed because this can damage the item. Replace the battery door and tighten the door with a screwdriver. Now that you have installed your batteries in your LED light, you may power the unit on by pressing the light switch.

Cleaning Instructions

To clean your magnifying glass, only use a soft, lint-free cloth like a microfiber cloth. Do not apply excess pressure to the cloth to avoid scratching the lens. To remove more stubborn dirt, moisten the cleaning cloth with an eyeglasscleaning solution and wipe the lenses gently being careful to avoid excess pressure. Protect this device from dust and moisture. When using in high humidity conditions, let the device acclimatize for a short period of time before storing in the included drawstring bag so that residual moisture can dissipate.

Notes			

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW THE INSTRUCTIONS BEFORE USE. KEEP THESE INSTRUCTIONS FOR LATER USE.



THE SUN - EVEN FOR A MOMENT - WILL CAUSE

INSTANT AND IRREVERSIBLE DAMAGE TO YOUR EYE OR EVEN WARNING TO THE OBSERVER THAT THE DAMAGE HAS OCCURRED UNTIL IT IS TOO LATE. DO NOT POINT THE DEVICE A OR NEAR THE SUN. DO NOT LOOK THROUGH THE DEVICE AS IT IS MOVING. CHILDREN SHOULD ALWAYS HAVE ADULT SUPERVISION WHILE OBSERVING.

 RESPECT PRIVACY: WHEN USING THIS DEVICE, RESPECT THE PRIVACY OF OTHER PEOPLE, FOR EXAMPLE, DO NOT USE IT TO LOOK INTO PEOPLE'S HOMES.



• CHOKING HAZARD: CHILDREN SHOULD ONLY USE DEVICE UNDER ADULT SUPERVISION. KEEP
PACKAGING MATERIALS LIKE PLASTIC BAGS PACKAGING MATERIALS LIKE PLASTIC BAGS AND RUBBER BANDS OUT OF THE REACH OF CHILDREN AS THESE MATERIALS POSE A CHOKING HAZARD.

• Z! BATTERY GUIDELINES: THIS DEVICE CONTAINS FLECTRONIC COMPONENTS THAT ARE POWERED BY BATTERIES, BATTERIES SHOULD BE KEPT OUT OF CHILDREN'S REACH. WHEN INSERTING BATTERIES, PLEASE ENSURE THE POLARITY IS CORRECT. INSERT THE BATTERIES ACCORDING TO THE DISPLAYED +/- INFORMATION, NEVER MIX OLD AND NEW BATTERIES, REPLACE ALL BATTERIES AT THE SAME TIME, NEVER MIX ALKALINE, STANDARD CARBON-ZINC AND RECHARGEABLE NICKEL-CADMIUM BATTERIES. NEVER SHORT CIRCUIT THE DEVICE OR BATTERIES OR THROW EITHER INTO A FIRE, LEAKING OR DAMAGED BATTERIES CAN CAUSE INJURY IF THEY COME INTO CONTACT WITH THE SKIN, IF YOU NEED TO HANDLE SUCH BATTERIES, PLEASE WEAR SUITABLE SAFETY EXTENDED STORAGE TO PREVENT LEAKING. DO NOT IMMERSE THE BATTERY COMPARTMENT IN WATER, NON-RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE CHARGED UNDER ADULT SUPERVISION, EXHAUSTED BATTERIE ARE TO BE REMOVED FROM TOY, THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED, PLEASE RECYCLE BATTERIES RESPONSIBLY.

- RISK OF BLINDNESS: NEVER USE THIS DEVICE TO LOOK DIRECTLY AT THE SUN OR IN THE DIRECT PROXIMITY OF THE SUN. DOING SO MAY RESULT IN A PERMANENT LOSS
- RISK OF FIRE: DO NOT PLACE DEVICE, PARTICULARLY THE LENSES. IN DIRECT SUNLIGHT, THE CONCENTRATION OF LIGHT RAYS COULD CAUSE A FIRE.
- DO NOT DISASSEMBLE THIS DEVICE: IN THE EVENT OF A DEFECT, PLEASE CONTACT YOUR DEALER, THE DEALER WILL CONTACT THE CUSTOMER SERVICE DEPARTMENT AND CAN SEND THE DEVICE IN TO BE REPAIRED IF NECESSARY.
- DO NOT SUBJECT THE DEVICE TO TEMPERATURES EXCEEDING 60 °C (140 °F).



CHILDREN AS THEY POSE A RISK OF SUFFOCATION DISPOSE OF PACKAGING MATERIALS AS LEGALLY REQUIRED CONSULT THE LOCAL AUTHORITY ON THE MATTER IF

NECESSARY AND RECYCLE MATERIALS WHEN POSSIBLE.



- THE WEEE SYMBOL IF PRESENT INDICATES THAT
 THIS ITEM CONTAINS ELECTRICAL COMPONENTS WHICH MUST BE COLLECTED AND DISPOSED OF SEPARATELY
- . NEVER DISPOSE OF ELECTRICAL OR ELECTRONIC WASTE IN GENERAL MUNICIPAL WASTE. COLLECT AND DISPOSE OF SUCH WASTE SEPARATELY.
- MAKE USE OF THE RETURN AND COLLECTION SYSTEMS AVAILABLE TO YOU, OR YOUR LOCAL RECYCLING PROGRAM. CONTACT YOUR LOCAL AUTHORITY OR PLACE OF PURCHASE TO FIND OUT WHAT SCHEMES ARE AVAILABLE.
- ELECTRICAL AND ELECTRONIC EQUIPMENT CONTAINS HAZARDOUS SUBSTANCES WHICH, WHEN DISPOSED OF INCORRECTLY, MAY LEAK INTO THE GROUND, THIS CAN CONTRIBUTE TO SOIL AND WATER POLLUTION WHICH IS HAZARDOUS TO HUMAN HEALTH, AND ENDANGER WILDLIFE
- IT IS ESSENTIAL THAT CONSUMERS LOOK TO RE-USE OR RECYCLE ELECTRICAL OR ELECTRONIC WASTE TO AVOID IT GOING TO LANDFILL SITES OR INCINERATION WITHOUT TREATMENT.

CONTENTS





©2019 National Geographic Partners LLC. All rights reserved.
NATIONAL GEOGRAPHIC and Yellow Border Design are trademarks of the
National Geographic Society, used under license.

©2019 Explore Scientific, LLC. 1010 S. 48th Street, Springdale AR 72762 All rights reserved. explorescientificusa.com | exploreone.com | 866.252.3811 Made in China

> CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963 CONTENTS, COLOURS AND SPECIFICATIONS MAY VARY.



AGES 6+

CONTENTS

80-29501 ΕN

INSTRUCTION MANUAL



01 LED Magnifier

02 Power Button

3X LED MAGNIFIER OUTDOOR EXPLORATION GEAR