



## How to use the MagnesiumWash bag

### 1.Features:

- **it can be used for a maximum of about 180 guaranteed washes with 45/60 minutes in water with temperatures from 30°/60°/90°.** The approximately 180 washes are guaranteed following the rules of use: the values of the Ph, of the bag in water, after approx. 20 minutes, they reach approx. 9-10.5 and the dirt, the grease begins to escape from the fabrics, cleaning deeply. So it is not necessary to take the washing time beyond 1 hour, saving water and energy, even without rinsing. The wear of magnesium is in the times in the water, the longer the time, the shorter they will be the washes. The recommended washing is at least 45 to 60 minutes with a temperature from 30° to 60°. In this equally good washing results are achieved. For garments with stubborn and particular stains, use the detergents you already use together with the MagnesiumWash bag that will make the fabrics clean from chemicals.
  - It can be used in the basket up to 8 kg of laundry or weighing more than 8 kg use 2 bags-suitable for all types of washing machines, works in soft water or any hardness, cold or hot- no more foam and there is no more need to rinse (both water and energy savings)
2. Before the first wash, perform a high temperature wash cycle with the MW bag so that the bacteria and the dirt from the washing machine are removed. If dirt is still visible on the washing machine drum, try it to use sodium percarbonate in a cold water cycle lasting at least 1 hour.

### 3.

1. Place the MagnesiumWash in the washing machine (DO NOT OPEN THE BAG) with the dirty clothes. It is not necessary to add more detergents! MagnesiumWash replaces an equal detergent.

#### **Important:**

- A. MagnesiumWash works like a normal washing detergent. If you need to wash one shirt with very dirty collar or particular or persistent stains, use a stain remover or laundry soap, before putting your clothes in the washing machine
- B. So if the clothes are very dirty, you can use the bag together with a traditional detergent, putting only half of the usual portion of detergent because MagnesiumWash increases the cleaning ability. See section A.
- Important:** Do not use chlorine or bleach detergents! If using a combination of washing and drying, remove the bag before the drying cycle. Note: MagnesiumWash will not be damaged, but it is highly recommended to remove it before the cycle dryer to ensure the long life of the nylon bag.
- After washing, put the bag to dry. If necessary to do more washes, it can be used without drying.

### 4.

How to use the bag for hand washing, even for your travels: 1. Leave the bag in water, with the laundry, for 45/60 minutes, at the end gently squeeze and spread 2. After the first 30 minutes, from time to time, shake the bag and squeeze the laundry several times, so that the hydrogen bubbles act as a detergent inside the mesh of the fabric, taking away dirt, sweat, grease and bacteria, leaving a fresh scent.