

#### Advantages

• It will provide optimal quality still images and video with both Canon Full Frame and APS-C image sensor cameras.

mirrorless cameras an adapter

is required.

- It's ultra-wide view, performance and image quality competes with the best in its class.
- UMC anti-reflective coatings, one ED, two high precision Aspherical, and four High Refractive Index elements combine to minimize aberrations and increase sharpness and contrast.


- The AF (autofocus) function is optimized for fast and precise focus detection with the latest Full Frame high pixel count Canon DSLR's.
- Its size, shape and grip have been ergonomically designed for enhanced stability and comfortable use.
- The refined all metal design combines a luxurious look with excellent durability and is weather sealed to help protect against dust and moisture.
- It maintains excellent distortion control and resolution from the center to the edges of the frame.

#### Cautions

To maintain your safety and prevent damage to the lens, please fully familiarize yourself with the following:

- Do not look directly at the sun through the lens as it may seriously impair your vision.
- Do not to apply excessive force when attaching the lens to the camera as it may cause damage to the lens or your camera.
- The lens is a precision optical product, so dropping or excessive impact may cause product failure.
- Attach or detach the lens only while the camrea is turned off.
- Be careful not to touch or contaminate the gold contacts on the mount as it can adversely affect communication with the camera.
- Protect the lens from water, high humidity and excessive heat.
- Always store the lens with the lens cap on in a dry and well ventilated location out of direct sunlight. Direct sunlight passing through the lens could become concentrated enough to cause a fire.

• Avoid subjecting the lens to drastic temperature changes such as moving from a very cold outdoors location to a warm indoors location. This can cause moisture in the air to condense inside or on the outside of the lens and lead to failure or mold production. Before taking the lens indoors from a cold outdoors location, put the lens in a plastic bag or sealed camera bag and remove it only when the lens has warmed up to room temperature.

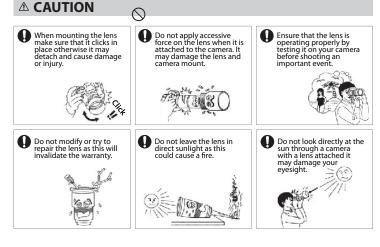

#### Cleaning

- It is extremely important before cleaning to dust off the lens surface using a lens blower or a soft brush to remove any foreign particles or grit that could scratch the lens.
- Using a clean microfiber lens cloth, gently wipe the lens in a circular motion from the center outwards towards the edges of the glass.

• If stubborn spots remain, put only one or two small drops of ethanol or reputable lens cleaner on the microfiber cloth and repeat the circular cleaning process. DO NOT USE AN ORGANIC SOLVENT SUCH AS PAINT THINNER, ALCOHOL, OR BENZENE.

## Included Components

Front lens cap

• Rear lens cap

Warranty Card

Soft lens pouch

Instruction manual

### Attaching the lens

- Remove the rear lens cap and the camera body cap.
- Align the index mark (white dot on the lens barrel/red dot on the lens mount) with the index mark (dot) on the lens mount of the camera.
- Do not press the lens release button on the camera when mounting the lens.
- Insert the lens into the camera mount and rotate it clockwise until it "clicks" and locks in place. Do not insert the lens at an angle.
- Remove the front lens cap when you are ready to shoot.

### Detaching the lens

- Attach the front lens cap.
- While holding down the lens release button on the camera body, rotate the lens counterclockwise until it stops and separate the lens from the body.
- Attach the rear lens cap.

**Parts** 



2 Manual focus ring

4 White index mark

6 Contacts

- 1) Built-In Hood
- 3 Lens mount
- ⑤ Red index mark
- 7 AF/ Manual switch

Focusing

Canon interchangeable lens cameras offer various methods of focusing. For detailed information regarding the available focus mode settings for your particular model, refer to the instruction manual of your camera.

- Set the AF/MF switch to "AF" for auto focus opertaion.
- For manual focus operation set the switch to "M". Manual Focus allows you instead of the camera to adjust the focus by rotating the manual focus ring on the lens. Manual focus is effective when auto focus does not work well.

# Product specifications

	Model name		IO14AF-C
	Aperture range		F2.8~22
	Angle of View	Full Frame	116.6°
		APS-C	92.8°
	Optical construction		15 elements in 10 groups (including 1 ED, 2 Aspherical and 4 HRI elements)
	Minimum focusing distance		7.9in (0.20m)
	Maximum shooting magnification		0.15x
	Filter size		n/a
	Number of aperture blades		7
	Maximum diameter X length		3.6" x 3.8" (90.5 x 95.6mm)
	Weight		17.1 oz (485 g)

- The minimum focus is the distance from the image sensor to the object.
- The product specifications and exterior are subject to change without notice.

#### Contact

Elite Brands Inc. Rokinon Division New York, NY 10005

Toll Free: 800.441.1100 Phone: 212.947.7100 support@rokinon.com

rokinon.com facebook.com/rokinonlenses

ROKINON® is owned and operated solely by Elite Brands Inc.

