



WARRANTY & WATCH CARE



WARRANTY & WATCH CARE

CONTENTS

WARRANTY & USER INSTRUCTIONS

| | |
|---|--------------------|
| International warranty | <i>Pages</i> 3-4 |
| Special recommendations | <i>Pages</i> 5-7 |
| Instructions Model - 1968 - 3 Hands | <i>Pages</i> 9-11 |
| Instructions Model - 1968 - Chronograph | <i>Pages</i> 13-17 |
| 1968 - Clip system strap | <i>Pages</i> 19-21 |

INTERNATIONAL WARRANTY

2-year limited warranty:

Your Bomberg watch is guaranteed for a period of 2 years under the terms and conditions of this warranty.

The international Bomberg warranty covers material and manufacturing defects existing at the time the purchased Bomberg Watch was delivered. The warranty only comes into force if the warranty certificate is dated, fully and correctly completed and stamped by an official Bomberg retailer.

During the warranty period, upon presentation of the valid warranty certificate, you will have the right to have any defect repaired free of charge.

This manufacturer's warranty does not cover:

- The life of the battery;
- Normal wear and tear and ageing (scratched crystal, alteration of the colour and/or material of nonmetallic straps and chains, such as leather, textile, rubber; peeling of the plating);

- Any damage to any part of the watch resulting from abnormal use/ misuse, lack of care, negligence, accidents (knocks, dents, crushing, broken crystal, etc.), incorrect use of the watch and failure to observe the instructions for use provided by Bomberg;
- The Bomberg watch handled by non-authorized persons (for battery replacement, servicing or repairs) or which has undergone alterations beyond the control of Bomberg.

SPECIAL RECOMMENDATIONS

How often should my watch be checked?

We recommend a yearly water resistance check (partial service with movement check).

How often should my watch be serviced?

Like any other precision instrument, a watch should be serviced regularly to ensure it remains in perfect working order. We do not issue strict instructions on how often you should have your watch serviced as this depends on the model, the climate where you live and how you look after the watch yourself. As a rule, a watch should be serviced every 4 or 5 years, depending on the conditions in which it is worn.

Where should I go to get my watch serviced or for a new battery?

We recommend that you go to an official Bomberg agent or retailer. They are the only people who have the necessary tools and devices to work on your watch and to carry out the necessary checks at the required specialist level.

Furthermore, only specialists can guarantee that their work meets the stringent quality standards set by Bomberg.

What can I do to ensure that my watch functions perfectly for many years?

Magnetic fields: avoid putting your watch on a loud-speaker or a refrigerator because these machines create magnetic fields that may damage it.

Salt-Water: always rinse your watch in fresh water after swimming in the sea.

Shocks: avoid subjecting your watch to shocks, including sudden changes in temperature.

Screwed crown: always make sure you have screwed the crown properly to avoid any moisture getting into the mechanism.

Cleaning: use a toothbrush and soapy water to clean the bracelet and water-resistant cases, then dry with a soft cloth. Special cleaning products must be used on the leather strap.

Chemical products: avoid all direct contact with solvents, detergents, perfume, cosmetics, etc., which may damage the bracelet or strap, the case, or the gaskets.

Temperatures: avoid exposing your watch to extreme temperatures (over 60°C or 140°F and under 0°C or 32°F) and to sudden fluctuations in temperature.

Water-resistance: All Bomberg watches are water-resistant. They can withstand a water pressure of at least 3 bar (depth of 30 metres). Water resistance is not a permanent condition. To ensure continuous water resistance, the watch should be checked once a year. To ensure conformance with the warranty regulations, these operations must be performed by an authorised Bomberg dealer or authorised Bomberg Service Centre.


Chronograph pushers: do not adjust the pushers under water as this could allow moisture into the mechanism.



BOMBERG

1968 - 3 HANDS

1968 - 3 Hands

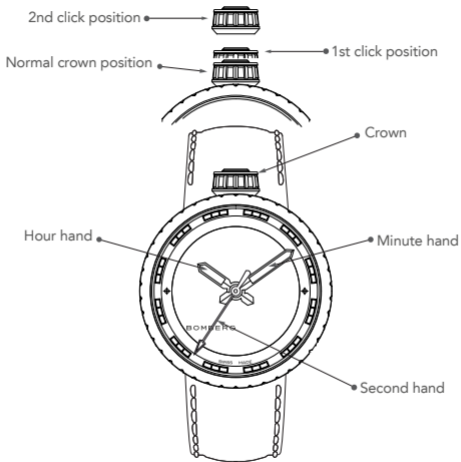

BOMBERG MODEL - 1968 - 3 Hands

Setting the time:


1. Unscrew and pull the crown out to the 2nd click position so that the second hand stops.
2. Turn the crown to set the hour and minute hands.
3. After the time has been set, push the crown back to the normal position; the small second hand begins to run again. Screw the crown back in.



BOMBERG

1968 - CHRONOGRAPH

1968 - Chronograph

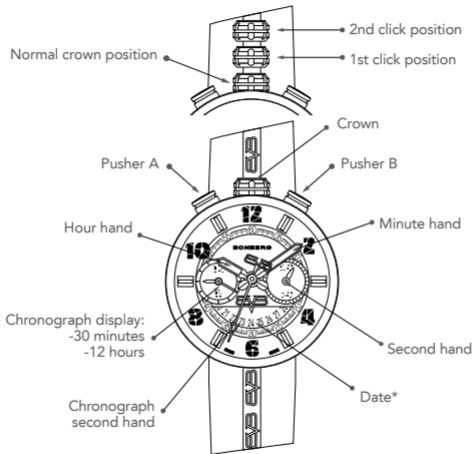

BOMBERG MODEL - 1968 - Chronograph

Setting the time:

1. Pull the crown out to the 2nd click position so that the second hand stops.
2. Turn the crown to set the hour and minute hands.
3. After the time has been set, push the crown back to the normal position; the small second hand will start running again.

Setting the date:

1. Pull the crown out to the 1st click position.
2. Turn the crown anti-clockwise to set the date.*
3. After the date has been set, push the crown back to the normal position.

**Important: It is not possible to adjust the date between 8.30 pm and 0.00 am.
It is necessary to adjust the date after each month with less than 31 days.*

BOMBERG MODEL - 1968 - Chronograph

Measuring time with the chronograph:

1. The chronograph can be started and stopped each time pusher "A" is pressed.
2. Pressing pusher "B" resets the chronograph to return the hands to the zero position.

Measuring intermediate time with the chronograph:

1. Press "A" to start the chronograph.
2. Press "B" to display an intermediate time. Timing continues in background.
3. Press "B" again to restart the chronograph. The 3 chronograph hands quickly skip to the ongoing measured time.
4. Press "A" to stop the chronograph.
5. When the chronograph is stopped, pressing "B" resets every function and the hands return to the zero position.

BOMBERG MODEL - 1968 - Chronograph

Chronograph reset (INCL. AFTER REPLACING BATTERY):

This procedure should be performed when the chronograph second hand does not return to the zero position after the chronograph has been reset, and including after the battery has been replaced.


1. Unscrew and pull the crown out to the 2nd click position.
2. Keep "A" and "B" pushed simultaneously for at least 2 seconds; the chronograph second hand rotates by 360° -> corrective mode activated.
3. Press "A" to set the chronograph hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing "A".
4. Press "B" to set the next chronograph hand and repeat step 3.
5. Once the hands have been zeroed, return the crown to the normal position and screw it in.




1968 - CLIP SYSTEM STRAP

Disassembly


Assembly

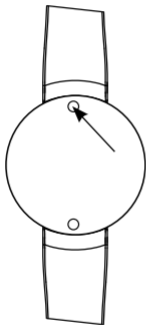

A

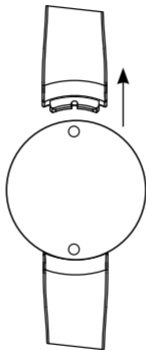 

B

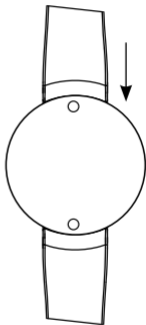 

C



bombergwatches.com
welcome@bomberg.ch


BOMBERG

bombergwatches.com
welcome@bomberg.ch