 


**WARRANTY & WATCH CARE** 





WARRANTY & WATCH CARE

# CONTENT

# WARRANTY & USER INSTRUCTIONS

International warranty	Pages	3-4
Special recommendation	Pages	5-7
Instructions Model - BB-68 - Chronograph	Pages	9-11

#### INTERNATIONAL WARRANTY

Limited 2 years warranty:

Your Bomberg watch is warranted for a 2 years period under the terms and conditions of this warranty.

The international Bomberg warranty covers material and manufacturing defects existing at the time of the delivery of the purchased Bomberg watch. The warranty only comes into force if the warranty certificate is dated, fully and correctly completed and stamped by an official Bomberg retailer.

During the warranty period and by presenting the valid warranty certificate, you will have the right to have any defect repaired free of charge.

This manufacturer's warranty does not cover:

- The life of the battery;
- Normal wear and tear and aging (scratched crystal, alteration of the colour and/or material of nonmetallic straps and chains, such as leather, textile, rubber; peeling of the plating);

- Any damage on any part of the watch resulting from abnormal / abusive use, lack of care, negligence accidents (knocks, dents, crushing, broken crystal, etc.), incorrect use of the watch and non-observance of the use directions provided by Bomberg;
- The Bomberg watch handled by non-authorized persons (for battery replacement, services or repairs) or which has been altered in this original conditions beyond Bomberg.

#### SPECIAL RECOMMENDATIONS

# How often should my watch be checked?

We recommend a yearly water resistancy check (partial service with movement check).

# How often should my watch be serviced?

Like any other precision instrument a watch should be serviced regularly to ensure perfect runwaring. We cannot say how often you should have unwards serviced as this depends on the model, the climate where you live and how you look after the watch yourself. As a rule, a watch should be serviced every 4 or 5 years, depending on the conditions in which it is worn.

# Where should I go to get my watch serviced or for a new battery?

We recommend that you go to an official Bomberg agent or retailer. They are the only people who have the necessary tools and devices to work on your watch and to carry out the necessary checks at specialized level.

Furthermore, only specialists can guarantee that their work meets the stringent quality standards set by Bomberg.

# What can I do to ensure that my watch functions perfectly for many years?

Magnetic fields: avoid putting your watch on a loud-speaker or a refrigerator because these machines create magnetic fields that may damage it.

Salt-Water: always rinse your watch in fresh water after swimming in the sea.

**Shocks:** avoid subjecting your watch to shocks, including sudden changes in temperatures.

**Screwed crown:** always make sure you have screwed the crown properly to avoid any humidity getting into the mechanism.

Cleaning: use a toothbrush and soapy water to clean bracelet and water resistancy cases and a soft cloth to dry off afterwards. For the leather strap, it's necessary to use special cleaning products.

Chemical products: avoid all direct contact with solvents detergents, perfume, cosmetics, etc. which may damage the bracelet or strap, the case or the gaskets.

**Temperatures:** avoid exposing your watch to extreme temperatures (over 60°C or 140°F and under 0°C or 32°F) and to sudden fluctuations in temperature.

Water-resistance: All Bomberg watches are water-resistant. They can withstand a water pressure of at least 3 bar (depth of 30 meters). Water resistance is not a permanent condition. To ensure permanent water resistance, the watch should be checked once a year. To ensure conformance with the warranty regulations, these operations must be performed by an authorized Bomberg dealer or authorized Bomberg Service Center.

**Chronograph pushers:** do not adjust the pushers under water as this could cause wetness in the mechanism.





# BB-68 - Chronograph



# BOMBERG MODEL - BB-68 - Chronograph

# Setting the time:

- 1. Pull the crown out to the 2nd click position so that the second hand stops.
- 2. Turn the crown to set the hour and minute hands.
- After the time has been set, push the crown back to the normal position and small second hand begins to run again.

# Setting the date:

- 1. Pull the crown out to the 1st click position.
- 2. Turn the crown anti-clockwise to set the date.\*
- 3. After the date has been set, push the crown back to the normal position.

\*Important: It is not possible to adjust the date between 8.30 pm and 0.00 am.

It is necessary to adjust the date after each month with less than 31 days.

# BB-68 - Chronograph

#### BOMBERG MODEL - BB-68 - Chronograph

# Measuring time with the chronograph:

- The chronograph can be started and stopped each time pusher "A" is pressed.
- Pressing pusher "B" resets the chronograph and the hands return to zero position.

# Measuring intermediate time with the chronograph:

- 1. Press the "A" to start the chronograph.
- Press the "B" to display an intermediate time. Timing continues in background.
- Press the "B" again to restart the chronograph. The 3 chronograph hands are quickly advanced to the ongoing measured time.
- 4. Press the "A" to stop the chronograph.
- 5. When the chronograph is stopped, pressing "B" resets every function and the hands return to zero position.

#### BOMBERG MODEL - BB-68 - Chronograph

### Chronograph reset (INCL. AFTER REPLACING BATTERY):

This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

 
- 1. Unscrew and pull the crown out to the 2nd click position.
- Keep "A" and "B" pushed simultaneously for at least 2 seconds; the chronograph second hand rotates by 360°->corrective mode activated.
- Press "A" to set the chronograph hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing "A".
- 4. Press "B" to set the next chronograph hand and repeat step 3.
- Once the hand have been zeroed, return the crown to the normal position and screw it in.





# **EX**B BOMBERG

bombergwatches.com welcome@bomberg.ch





bombergwatches.com welcome@bomberg.ch