




COOPERS BAY.  
OUTDOORS

# PyroStryke® Flat-Pack Rocket Stove CB-202003

Thank you for purchasing our portable rocket stove. We're confident it will provide you with years of reliable service. Please verify all of the components against the packing list on the back page and read through these assembly instructions. Over time you may find a slightly different procedure that is easier for you but the following is what we've found to work best for us. If you have any troubles please contact us at: [contact@coopersbayoutdoors.com](mailto:contact@coopersbayoutdoors.com)





Scan QR code to  
view assembly  
demonstration  
video on YouTube

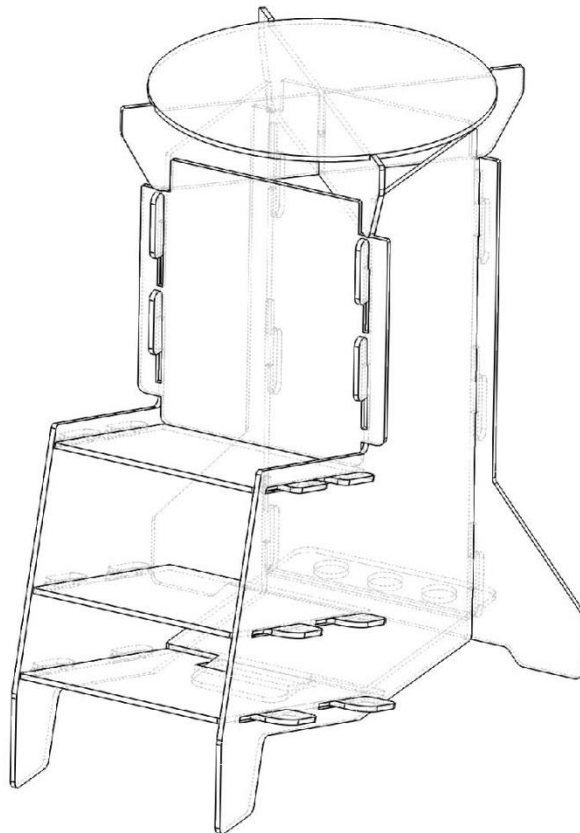

# Assembly Procedure



## Step 1

Attach the two Side Plates to the Back Plate by lining up the slots and slipping into place.

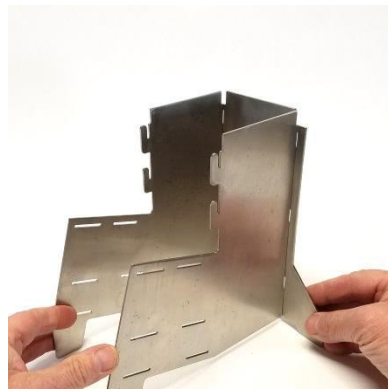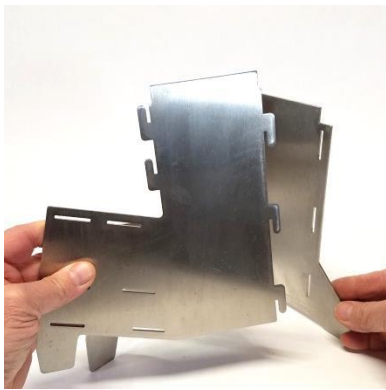



## Step 2

Orient the Floor Plate as shown and slip into the bottom slots of the side plate on the left. Be sure to position it so the smaller tabs are on the left as shown. (Do not engage with the right side plate yet).

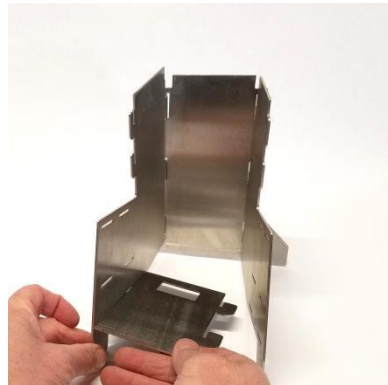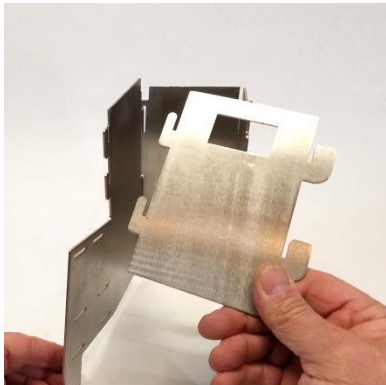



## Step 3

Orient the Mid plate as shown and slip into the middle slots of the side plate on the left. Be sure to position it so the smaller tabs are on the left as shown. (Do not engage with the right side plate yet).

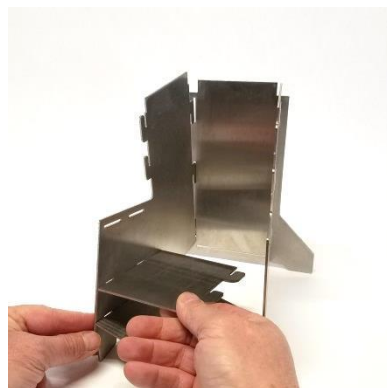
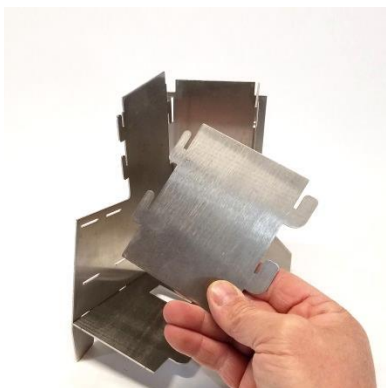


**Step 4**



Orient the Top plate as shown and slip into the upper slots of the side plate on the left. (Do not engage with the right side plate yet).

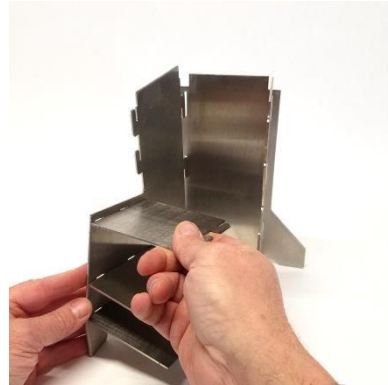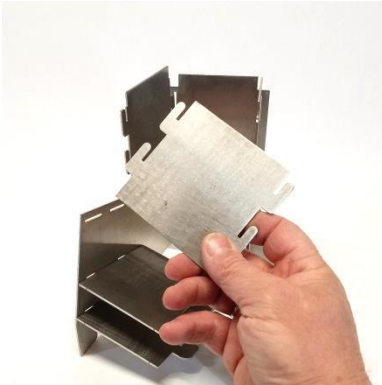**Step 5**

Engage the tab on the lower plate with the slot on the right side plate just enough to hold in position. Do the same with the middle plate. Engage with slots in right plate just enough to hold in position.

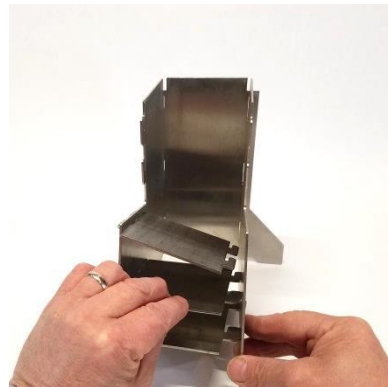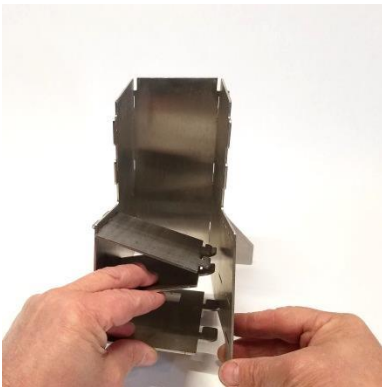
**Step 6**

Finally, line up the tabs of the top plate with the right side plate and fully engage all three plates with the right side plate.

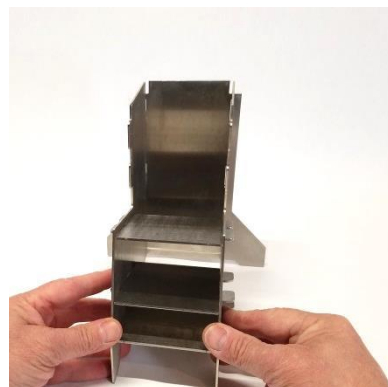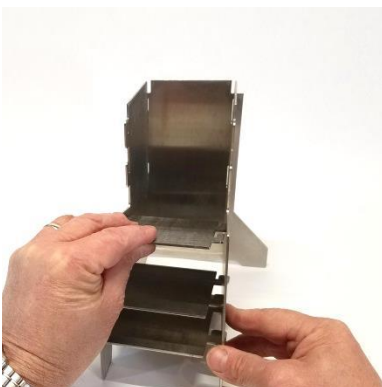


**Step 7**


Orient the front plate as shown, with the rounded corners at the bottom. Fully engage with the slots on each of the side plates.

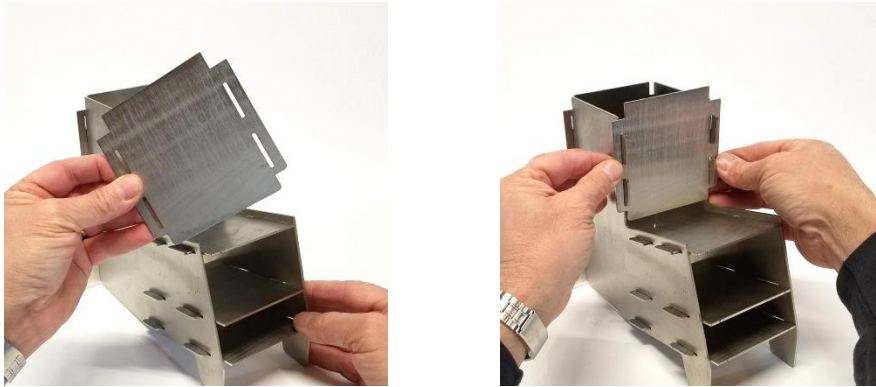**Step 8**

Engage the slots of the two gate plates to form an "X". Then drop the assembly down into the gaps at each corner of the chimney.


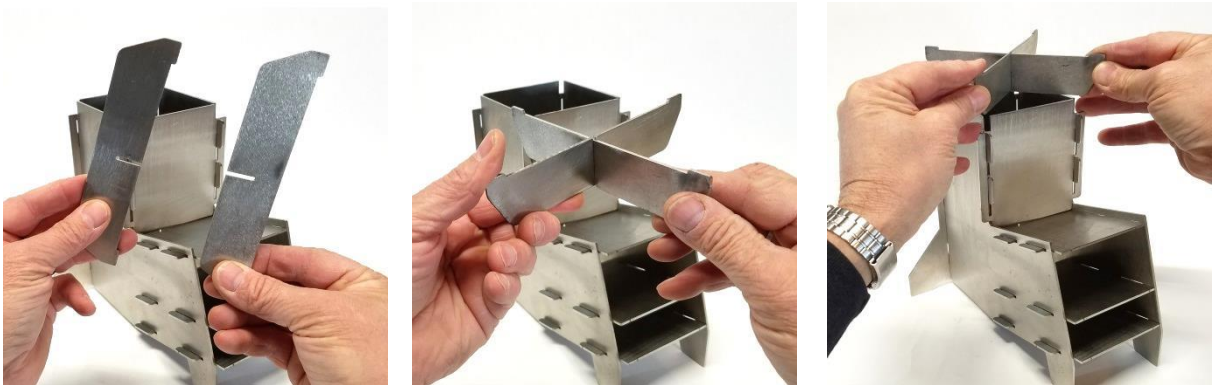
**Step 9**

Orient the Floor Plate as shown and insert into the slot on the lower portion of the back plate. Fully insert into the slot. Look down the chimney and make sure the tongue engages with the hole on the floor plate.

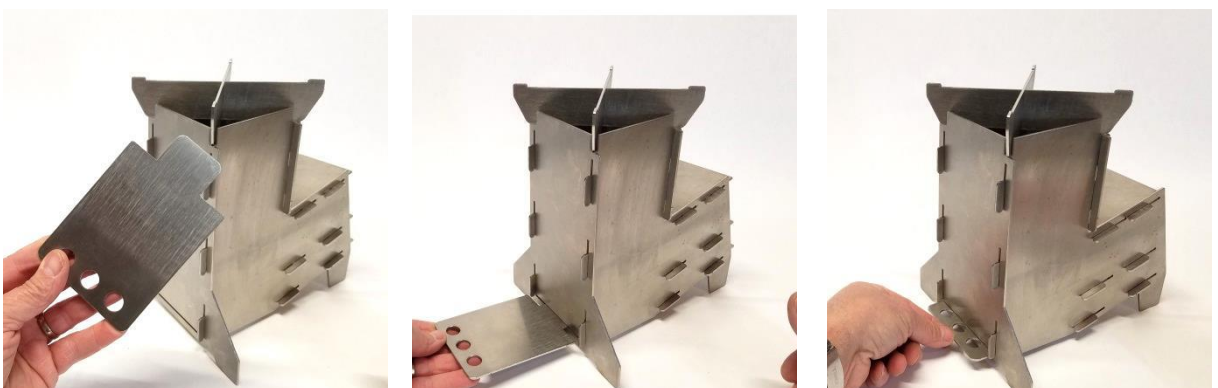

**Step 10 (Optional)**

If desired, the top cap can be installed on top of the grate. This can provide a more stable surface for smaller items, or act as a rain cap to shield the fire in wet conditions. Additionally, the disc can be a useful surface for the lighting the tinder bundle with the ferro rod striker

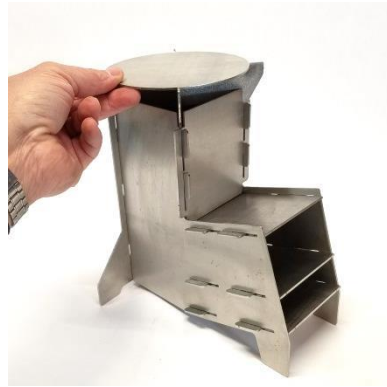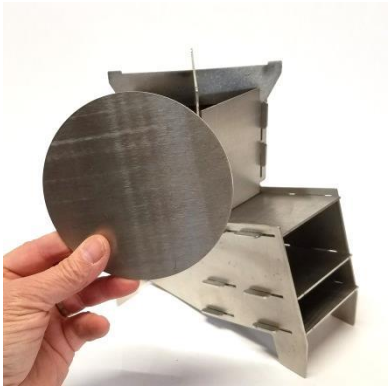

Description	Qty	Part #
Side plate(s)	2	RS01
Back Plate	1	RS02
Front Plate	1	RS03
Top Plate	1	RS04
Mid Plate	1	RS05
Lower Plate	1	RS06
Floor	1	RS07
Grate A	1	RS08
Grate B	1	RS09
Cap Plate	1	RS10
Storage Bag	1	RS12

