

**H4**  
Wireless Earphone  
User Manual

Thank you for choosing MOMAN product. Please read this manual carefully before use and follow all instructions mentioned herein.

 
### Caring For Your MOMAN Product

- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat source away from the product to prevent mechanics damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, impact of external force.
- Do not attempt to disassemble the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.


### Package List



User Manual x1




H4 wireless earphone x1

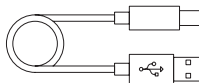

Micro-USB to USB  
Charging Cable x1


### Product Instruction

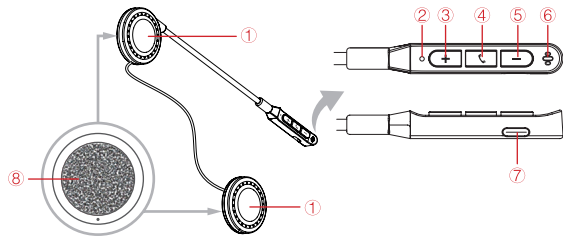

- |                 |            |              |                         |
|-----------------|------------|--------------|-------------------------|
| ① Speaker       | ③ Volume + | ⑤ Volume -   | ⑦ Micro USB Charge Port |
| ② LED Indicator | ④ Power    | ⑥ Microphone | ⑧ Magic Tape            |

### Installation

- (1) Take the speakers out of the box and put them onto the ear position of helmet via magic tape.
- (2) When you put on the helmet, you could adjust the speakers and microphone to make sure they are on the right place.

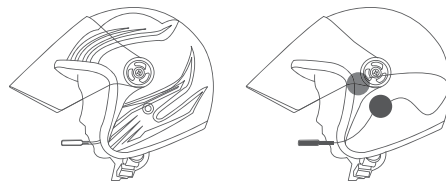

## Operation

### 1. Power On & Pairing

Long press the Power button for 3 seconds. The red and blue indicator flashes alternatively. You could search "MOMAN H4" on your smartphone and connect them.

※ Automatically repair- If your device is latest recently paired, it will be automatically re-paired with your device.

※ Automatically search- it will be automatically into pairing mode again once the paired device is off.

### 2. Power Off

Long press the Power button for 3-4 seconds.

※ Power Save Mode-The device will be off automatically after 5 minutes if no working device paired.

### 3. Play/Pause

Press the Phone button to pause song.

Press it again to continue to play.

### 4. Volume + -/Switch

Long press "+" to increase volume. Long press "-" to decrease volume. Press "+" or "-" once to switch songs.

### 5. Chinese/English Voice Switch

Quickly press "+" twice to switch Chinese/English voice prompt.

### 6. Call Answer

(1) The headset will be alarming while somebody is calling.

(2) Answer phone: press the Phone button one time to pick up.

(3) Hang-up: press the Phone button again to hang-up.

(4) Re-dial: press the Power button twice to redial the recent phone number directly.

### 7. Charging

Please fully charge the device via the Micro USB charge port and Micro-USB to USB charging cable.

※ The device stops playing music or call answering while it is charging.

### 8. Compatibility

Applicable to the following equipment:



## Specifications

Bluetooth Version	V5.0+EDR
Bluetooth Name	MOMAN H4
Frequency Range	2.4026GHz-2.480GHz
Transmission Distance	20-30M
Mic Distance	≤ 1m
Lithium Battery	3.7V/180mA
Charging Time	2H
Standby Time	160H
Continuous Working Time	5H

## Battery Warning

- The device prompts "power low", which means it needs to be charged.
- The red indicator is on when it is charging. When it is charged full, the red indicator is off.
- Do not throw the product into fire otherwise it may cause explosion or leakage.
- Do not replace inner rechargeable lithium battery without permission.

## Moman (UK) Limited

Unit 25 Basepoint Business Centre, Aviation Park, West Christchurch, United Kingdom  
BH23 6NX

www.momanx.com

@MomanGlobal

https://moman.co/youtube