SE 607 Installation, Maintenance and Operating Instructions

DESCRIPTION

Floor mounting EMERGENCY DELUGE SHOWER and AERATED EYE FACE WASH combination unit. Shower is supplied with a 25mm stay open full flow ball valve, activated by a triangle pull rod. Eye wash is supplied with a 15mm stay - open full flow ball valve, activated by a paddle handle or foot pedal. Manufactured to comply with AS 4775 - 2007.

SHOWER EYE FACE WASH

SHOWER HEAD: 200mm ABS Cycolac EYE FACE WASH: Aerated,

 
VALVE: 25mm Stainless Steel VALVE: 12mm Stainless Steel ACTIVATOR: 304 Stainless Steel ACTIVATOR: 304 Stainless Steel BASE PLATE: 304 Stainless Steel FOOT PEDAL ASSEM: 304 Stainless Steel

INSTALLATION

 
After unpacking carton, make sure all components are present. Mark out the floor and mount the bottom stanchion section using suitable anchors. Then assemble top section (Use pipe sealant on all joints). Assemble pull rod and shower head, attach paddle handle and foot pedal. Once the unit is completely assembled connect water supply to 25mm top inlet nipple. Failure to use potable can result in emergency units producing impure or contaminated water causing possible further injury. Test unit

OPERATION

The shower is activated by pulling the triangle pull rod. Once the valve is activated the head will continue to discharge water until the valve is manually closed, this is done by pushing the pull rod to the off position. The eye face wash is activated by pushing the paddle handle bac 90 degrees. The unit will operate until the paddle handle is manually pulled back to the off position.








OFF Position

ON Position

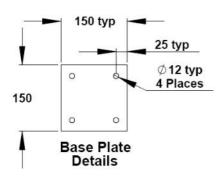

FLOW DATA


EYE FACE WASH FLOW RATE (LPM): 46

SHOWER

FLOW RATE (LPM): 76

WARNING:

Use only genuine Speakman parts when replacing or repairing components. When ordering quote correct part numbers listed below.

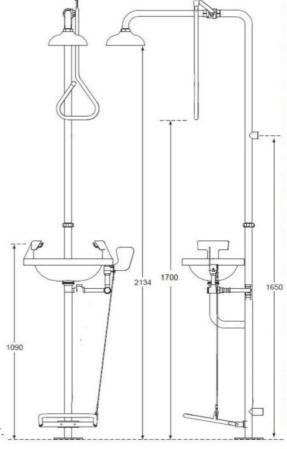



BIG Safety PO Box 448 Beecroft NSW 2119 12A/10 Pioneer Ave, Thornleigh NSW 2120 P:- 1300 73 22 74 E:- sales@bigsafety.com.au www.bigsafety.com.au



SPEAKMAN° SAFETY PRODUCTS

SE 607 ombination Deluge Shower



Installation, Maintenance and Operating Instructions

MAINTENANCE

Should you need to repair this unit, please see the parts list for correct part numbers. Before any maintenance is done be sure the water supply is shut off.

MAINTENANCE SCHEDULE

Activate eye wash unit using push handle Weekly

Allow water to flow for 30 seconds to

Ensure water flows evenly from both

Outlets. Ensure water is clean.

Yearly Ensure unit complies with AS 4775 - 2007

TESTING PROGRAM

The Australian Standards AS4775-2007 states that all safety equipment shall be activated on a weekly basis to flush the line and verify proper operation. All units furnishes a testing tag (SE Tag) with each unit. On this tag the date of the inspection and the inspectors initials should be noted.

Part No: RPG05 1177



Supplied in a packet of 6

 
Shroud Maintenance Kit - Part No: G10 0041





Complete Shroud Assembly - Part No: G10 0042





SPARE PARTS

No:	Description	Part No
1.	Aerator Screen & Cap Assembly	RPG05 1177
3.	Shroud Repair Kit Assembly	G10 0041
4.	Shroud Body & Aerator Repair Assembly	G10 0042
5.	12mm Activation Ball Valve & Push Hand	SE 910
6.	200mm Cycolac Shower Head	SE 870
7.	Combo Frame	SE Frame
8.	25mm Activation Ball Valve	SE 911
9.	Foot Pedal Connect Cable	SA 03003
10.	Foot Pedal Assembly	SE Treadle
11.	Supply In Line Filter Assembly	G21 0080 PC
12.	Shower Arm 25mm BSP	SC 02001
13.	Pull Rod Assembly	SA 02008
14.	Stainless Steel Bowl	68 0033
15.	Strainer Gauze	G21 0080



BIG Safety PO Box 448 Beecroft NSW 2119 12A/10 Pioneer Ave, Thornleigh NSW 2120 P:- 1300 73 22 74 E:- sales@bigsafety.com.au www.bigsafety.com.au

P



Combination Deluge Shower

