LSSR™

SIMPSON Strong-Tie

Slopeable/Skewable Rafter Hanger

The patent-pending LSSR light slopeable/skewable rafter hanger is the next generation of field-adjustable rafter hangers. One of its key features is that it can be installed after the rafter has been tacked into place. A versatile hanger, it is field adjustable for skews up to 45° and features an innovative hinged swivel seat which adjusts up to a 45° slope. New models are now available for 2x lumber.

Features:

- Makes it possible to install after the rafters are already in place
- Flange design allows for easy skew (left or right) adjustment, from 0° to 45°
- Swivel seat adjusts easily from 0° to 45° up or down

Material: See table Finish: ZMAX® coating


Installation:

- Use all specified fasteners; see General Notes
- Limit on-center spacing of rafters and joists with LSSR210-2Z and LSSR410Z to 14" o.c. minimum; for the LSSR26Z, LSSR28Z and LSSR210Z, limit on-center spacing to 8" o.c. minimum.
- For a common rafter:
 - Slide hanger into position; adjust seat and install seat nails
 - Make sure side stirrups are snug close to the joist, bend lines are plumb
 - Install a face nail on each side to hold in place
 - Install all round and obround holes on the header and joist
- · For jack rafters:
 - Fold acute side forward
 - Slide hanger into position; adjust seat and install seat nails
 - Make sure hanger is snug close to the joist, bend line is plumb
 - Install obround nails on acute side, both header and joist
- Make sure hanger is snug close to the joist and header; bend line is plumb
- Install joist nails on obtuse side
- Bend obtuse side flange back so that header flange is flush against header
- Install header nails


Codes: See p. 13 for Code Reference Key Chart


Web Applications: Visit app.strongtie.com/hs to access our Hanger Selector web application.




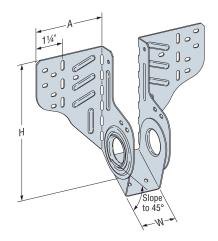


LSSR26Z

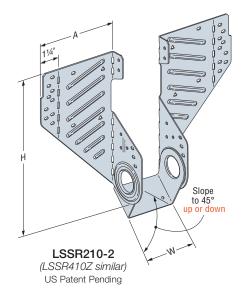


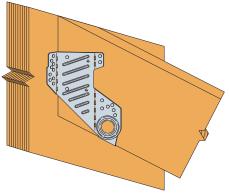

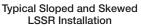

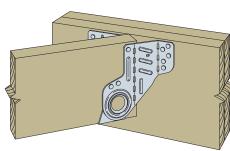

LSSR26Z Installation at 45° Skewed Left

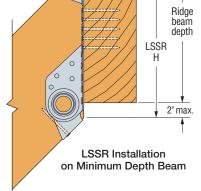



For more information and to watch an installation video, go to **strongtie.com/lssr**

SIMPSON Strong-Tie

Slopeable/Skewable Rafter Hanger (cont.)

These products are available with additional corrosion protection. For more information, see p. 16.

	Actual Joist	Model No.	Ga.	Dimensions (in.)			Fasteners (in.)		Allowable Loads								
				w	Н	А	Face	Joist	DF/SP Species Header SPF/HF Species Header						Code		
	Width (in.)								Uplift (160)	Floor (100)	Roof		IImlif4	Floor	Roof		Ref.
	, ,										Snow (115)	Const. (125)	Uplift (160)	Floor (100)	Snow (115)	Const. (125)	
	Sloped Only Hangers																
		LSSR26Z ½ LSSR28Z	18	1%6	5%	2½	(12) 0.148 x 2½	(8) 0.148 x 1½	460	1,065	1,065	1,065	395	915	915	915	-
	1 ½				71/8		(14) 0.148 x 2½	(10) 0.148 x 1½	785	1,405	1,405	1,405	675	1,210	1,210	1,210	
		LSSR210Z			91/8		(14) 0.148 x 2½	(10) 0.148 x 1½	785	1,405	1,405	1,405	675	1,210	1,210	1,210	
	3	LSSR210-2Z	16	31/8	815/16	51/8	(22) 0.162 x 2½	(18) 0.162 x 2½	695	2,365	2,365	2,365	600	2,035	2,035	2,035	
	3½	LSSR410Z	16	3%	815/16	51/8	(22) 0.162 x 2½	(18) 0.162 x 2½	695	2,365	2,365	2,365	600	2,035	2,035 2	2,035	
	Skewed Hangers or Sloped and Skewed Hangers																
		LSSR26Z	18	1%6	5%		(11) 0.148 x 2½	(7) 0.148 x 1½	460	760	760	760	395	655	655	655	- IBC, FL, - LA
	1 ½	LSSR28Z LSSR210Z			71/8	2½	(13) 0.148 x 2½	(8) 0.148 x 1½	785	925	925	925	675	795	795	795	
					91/8		(13) 0.148 x 2½	(8) 0.148 x 1½	785	1,150	1,150	1,150	675	990	990	990	
	3	LSSR210-2Z	16	31/8	815/16	51/8	(20) 0.162 x 2½	(13) 0.162 x 2½	695	1,810	1,810	1,810	600	1,555	1,555	1,555	
	3½	LSSR410Z	16	3%	815/16	51/8	(20) 0.162 x 2½	(13) 0.162 x 2½	695	1,810	1,810	1,810	600	1,555	1,555	1,555	

- 1. Uplift loads have been increased for earthquake or wind loading with no further increase allowed. Reduce where other loads govern.
- 2. For slope-only installations, the four triangle holes may be filled for an allowable roof download of 3,015 lb. for DF/SP and 2,595 lb. for SPF/HF for LSSR 16GA.
- 3. Roof loads are 125% of floor loads unless limited by other criteria. Floor loads may be adjusted for load durations according to the code provided they do not exceed those in the roof column.
- 4. On the acute side of the skewed LSSR hanger, fill obround holes only.
- 5. Fasteners: Nail dimensions are listed diameter by length. See pp. 23–24 for fastener information.

