



# Installation Instructions

Model: TH120C

### **WARNING**

*Failure to read and follow warnings may lead to serious injury or property damage.*

Do not install if product appears damaged.

Always disconnect power prior to installing, relocating, servicing or replacing thermostat.

Do not use in potentially explosive or flammable environments.

Consult a qualified electrician to assist with any questions and/or installation.

Do not use thermostat in a wet location.

Installation must be done in accordance with all national and local electrical codes.

### **Notes:**

Locate sensor bulb in area needing to be controlled. Placement near windows, exterior walls, areas of higher/lower heat or cool air will affect operation of thermostat.


Extendable sensor/bulb allows thermostat to be mounted up to 48" away from sensing bulb.

Once thermostat is wired to exhaust fan, adjust knob to desired temp setting. It is important to observe the first few on/off cycles to determine if further knob setting adjustment is needed. Adjust as necessary. Fan will run on high speed only when in operation.

### **Specifications:**

Electrical Ratings: 120v, 16 amp

Operating Range: 32°F—104°F

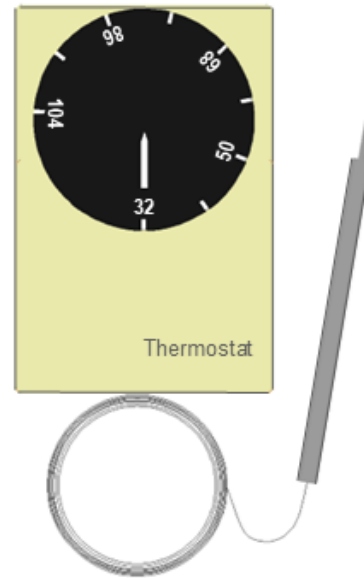

Wall Mount Junction Box  
Extendable Sensor Probe  
(Extends Up To 48")

### **Wiring Diagram**

