




PS3 & PS4 TO DREAMCAST

Author : Tim

E-DM



Game Controller Super Converters Magic Box P3P4-DC

P3/P4 ↔ DC Controller Adapter

Custom Buttons Turbo

P3/P4 ↔ DC Controller Adapter

Use your PS3 / PS4 controller and fighting stick with DREAMCAST and PC!

The amazing product, compatible with your gamepad, fighting stick, and more. Let's back to childhoods, having fun on Dreamcast consoles.

USB interface which permits hot swapping	Firmware updatable	Turbo
Xinput support	Vibration support	Custom Buttons



FEATURE

- DreamCast / PC (X-input) supported
- (Brook) Button (on the top of converter) to select Controller or Arcade Stick
- Not support VMU function
- Turbo function
- Remap function



KEYMAP

Dreamcast Controller	Dreamcast 大搖桿	PC (X-Input)	PSIV Game Pad	PSIII Game Pad
DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
A	A	A	×	×
B	B	B	○	○
X	X	X	□	□
Y	Y	Y	△	△
		Start	OPTIONS	Start
		Back	SHARE	Select
Lx	DPad	Lx	Lx	Lx
Ly		Ly	Ly	Ly
		Ry	Ry	Ry
		Rx	Rx	Rx
		Z	L1	L1
	Z	R1	R1	R1
L	C	L2	L2	L2
R	C	R2	R2	R2
		L3	L3	L3
		R3	R3	R3
Start	Start	XBOX	PS Key	PS Key
			Touch	



HOW TO SET?

How to select Controller / Arcade Stick?

- Directly plug the converter into port
The converter will set in Controller mode
The the LED indicates **Red**



- Hold on Button then plug the converter into port,
The converter will set in Arcade Stick mode
The LED indicates **Green**





THE END

