

TurboTwenty

Cleaning Instructions

1. Remove *TurboLid* cover plates from your the harmonica body by applying light pressure to the back – separating the two halves.
2. Using soft brush, such as artist brush, sweep away loose dust and dirt. BE CAREFUL not to lodge brush hair underneath reed. If you do, remove gently to avoid bending the reed.
3. Immerse under warm running water, or in small container (Tupperware, e.g.) and agitate.
4. For caked on dirt and krud, use a little bit of mouthwash, which will both dissolve dirt, and disinfect. Avoid soap – which will leave unpleasant residue.

Reassemble:

1. Identify bottom *TurboLid* with Bulge on left.
2. Insert body of harmonica into seat of lower lid, assuring that front lip of comb is against front edge of lid.
3. Align top half of lid with bottom half and snap together at both ends.

