

# Instruction steps

BAAI012BG

STEP 1




1. Take out the tent and spread it flat on the ground. Secure the four corners and two middle points with six ground nails.

STEP 2



2. Adjust the inflatable valve to the closed state, connect the pump to the air valve, and inflate the first and the second air column to 80%.


STEP 3

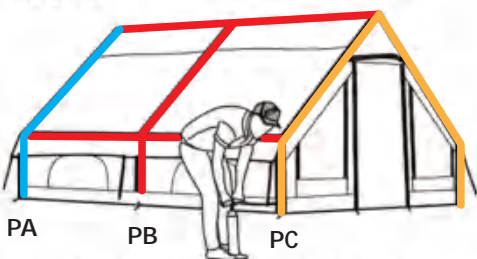

3. Inflate the third column to saturation, then fill the first two columns to 100%.

\* The inflatable column can be identified through the air valve.

STEP 4

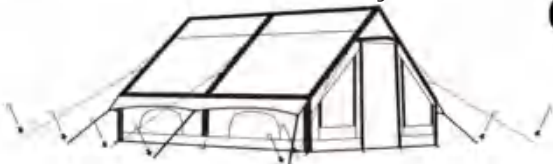

4. Secure the tent with ground nails and windbreak ropes.