



Assembly instruction

| ItemNO | Pic | Qty | ItemNO | Pic | Qty | Pic | Qty | Pic | Qty |
|--------|-----|-------|--------|-----|------|-----|-------|-----|-------|
| 1 | | 17pcs | 4 | | 2pcs | | 8pcs | | 24pcs |
| 2 | | 8pcs | A | | 2pcs | | 8pcs | | 1pc |
| 3 | | 2pcs | B | | 2pcs | | 2pcs | | 2pcs |
| | | | C | | 4pcs | | 24pcs | | 2pcs |
| | | | | | | | 8pcs | | |


1.

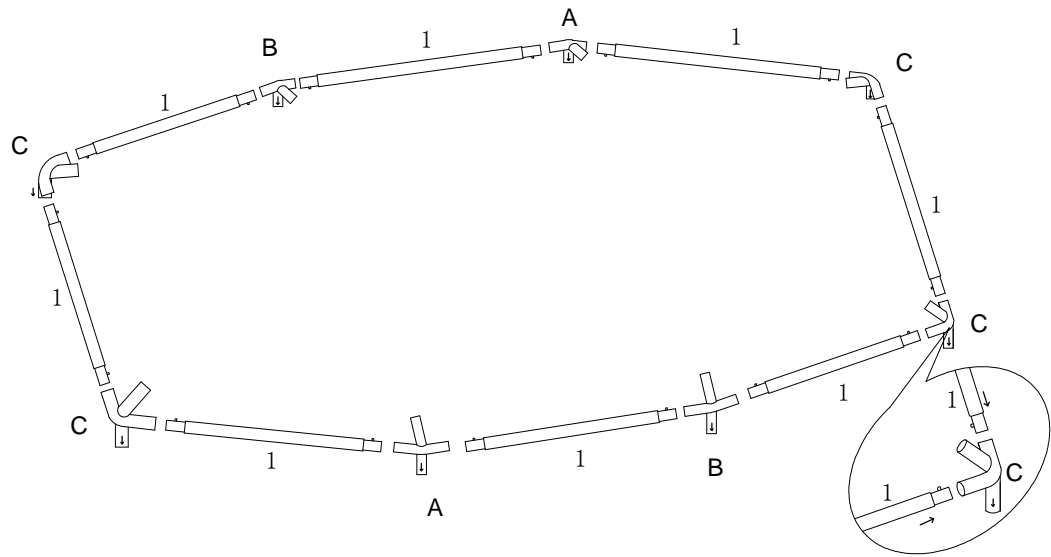


2.

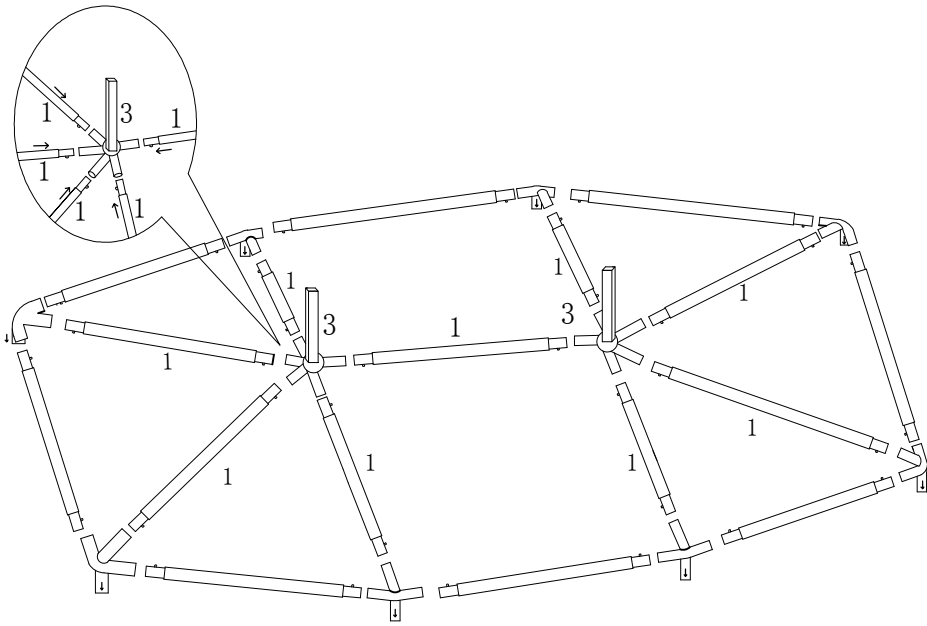


3.

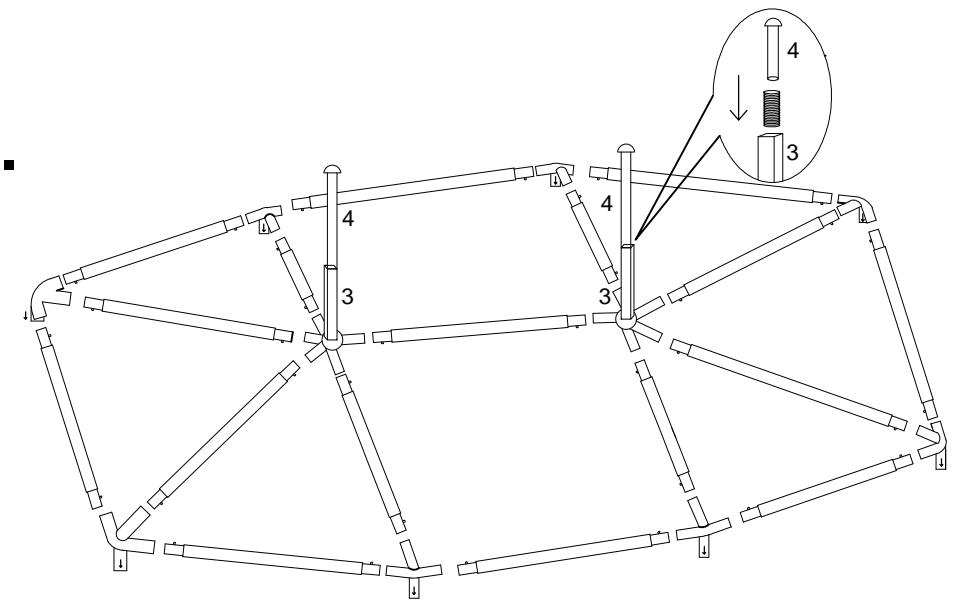


4.

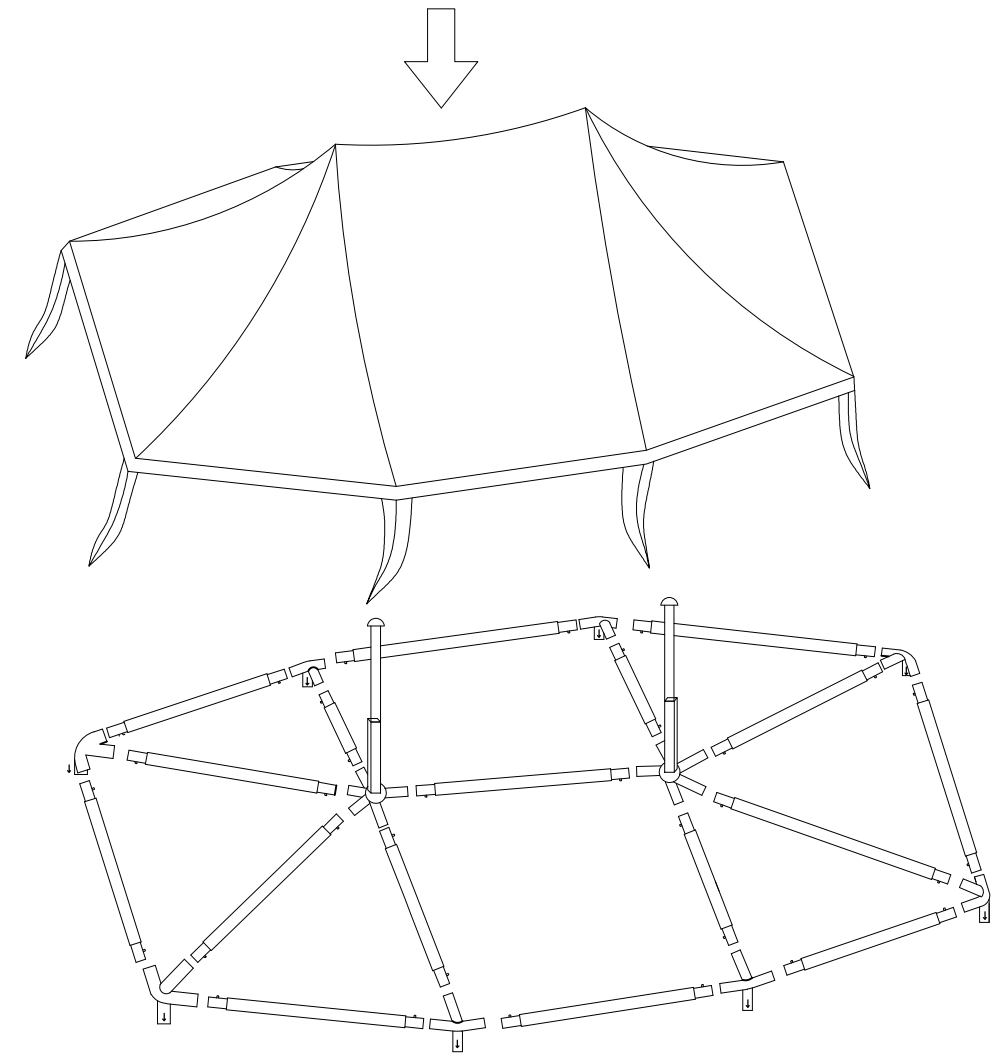


5.

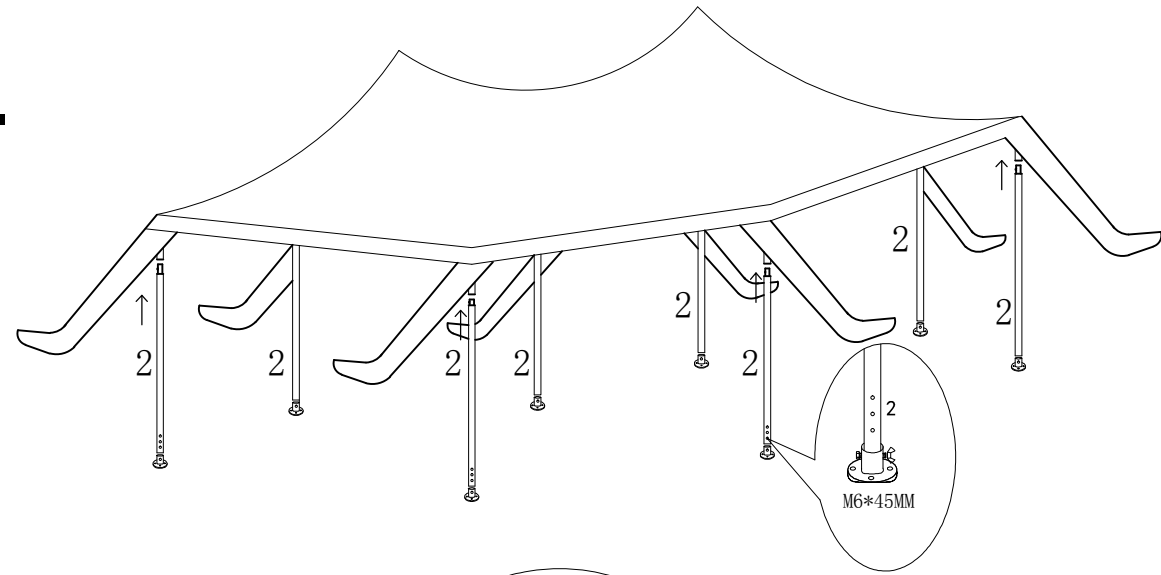

6.

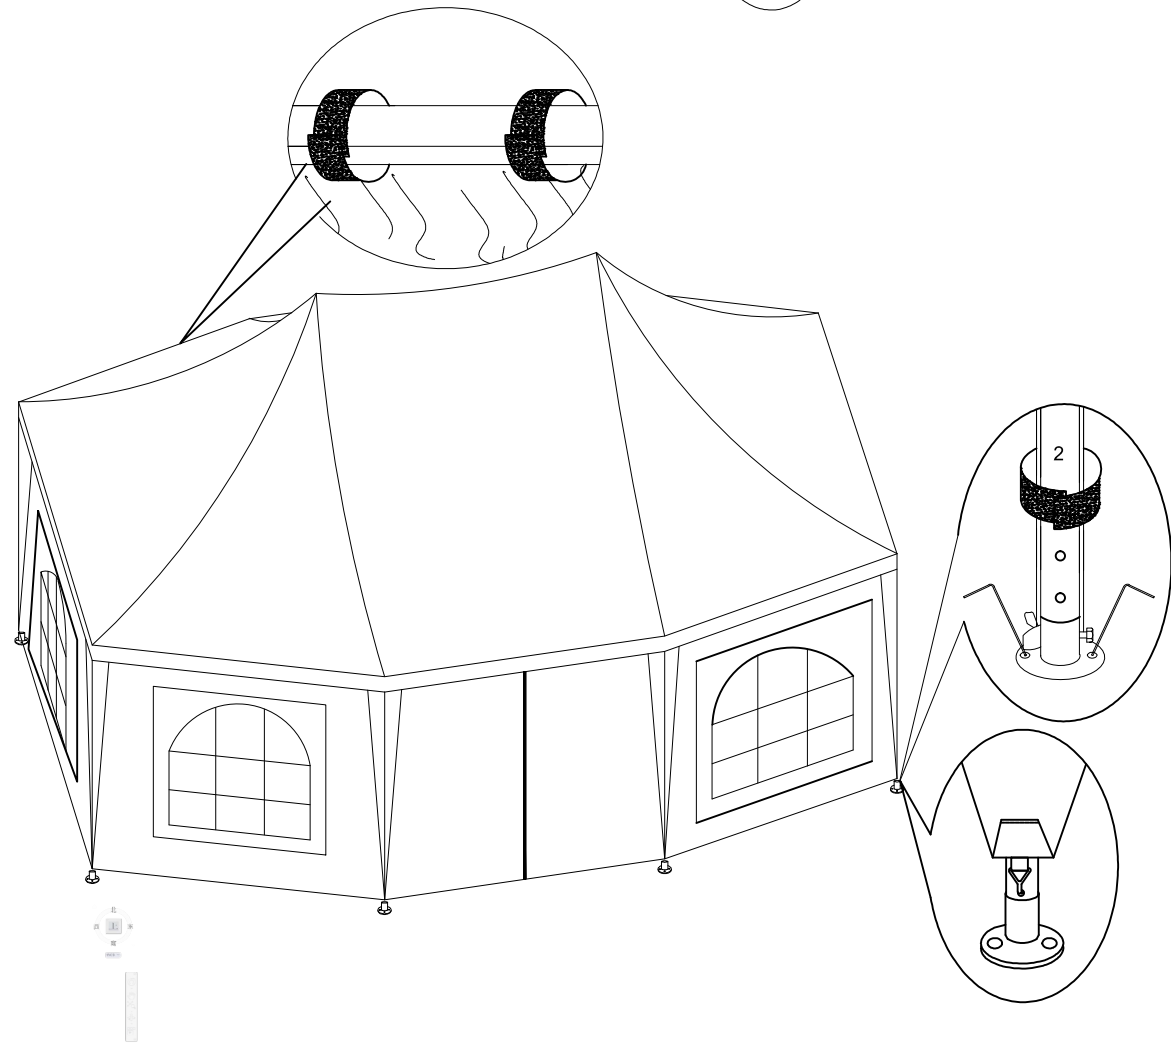

7.

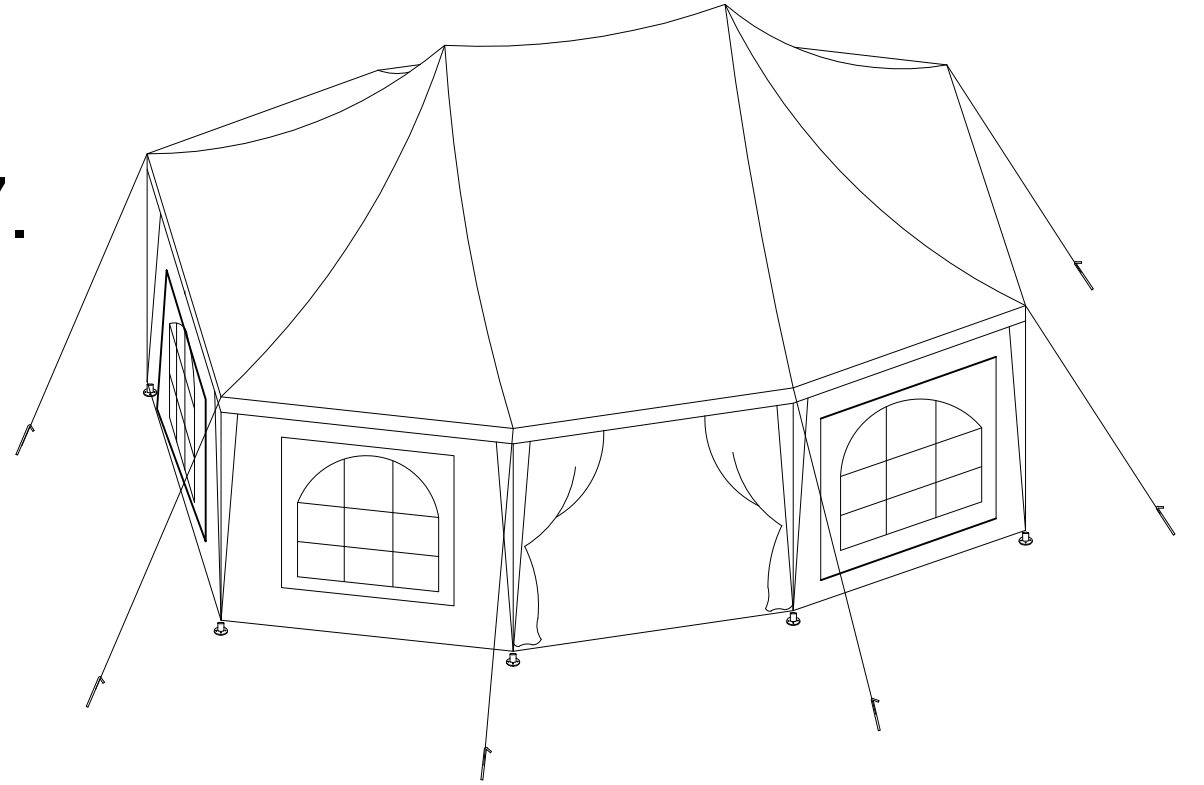

Warning

1. A 3 person assembly is required for this tent.

2. Please use rope supplied to reinforce the tent ,use a 30 degree angle for ultimate stabilisation. Fix the rope on all sides and fix the rope to the ground with pegs. If tent is use on hard surface ,please use bricks or sandbags for reinforcement.

3. Please take appropriate actions as heavy rain ,wind and snow can damage the tent. If necessary please dis-assemble and store for later use.

4. In snowy conditions please do not allow the thickness of the snow to be more then 5cm on the roof, this should be cleared as soon as possible for your safety.