

HWG-044WT

Pop up gazebo 20' x 10' Instruction manual


PARTS LIST

1



1PC

2

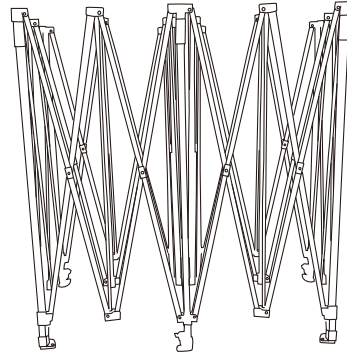

1PC

3



1PC

4




4PCS

5



4PCS


6

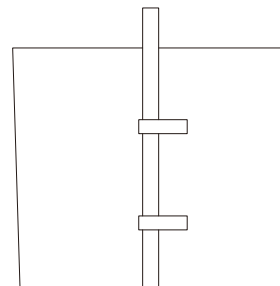


6PCS

Assembly


1 Please carefully remove the tent from the box and place it in a dry place for installation. Stand the frame up on the ground

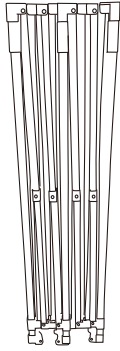

2 have 2 people stand on opposite sides. Grasp two outer legs. Lift off of ground and step backwards, stopping at arms length

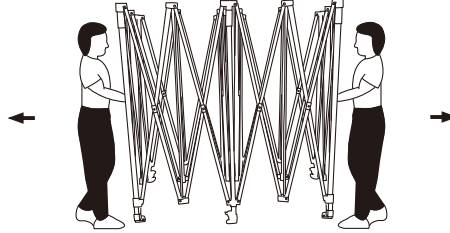


3 place shelter in center of area to be sheltered. Remove cover.

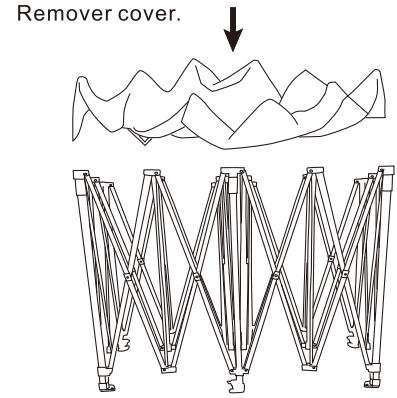


4 grasp the bottom of the diamond (shown), on opposite sides. Lift up and step backwards until shelter is fully opened. Beina careful not to pinch fingers.




5 engage the auto slider at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap button will engage in groove. Repeat on all other legs.

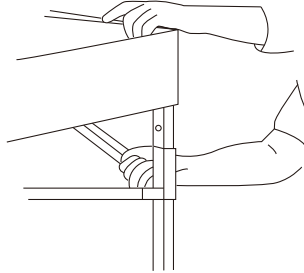

6 lift two adjacent outer legs up and pull out the inner legs until snap locks. Repeat on all legs. Raise or level the shelter using adjustment holes found near bottom of each outer legs.

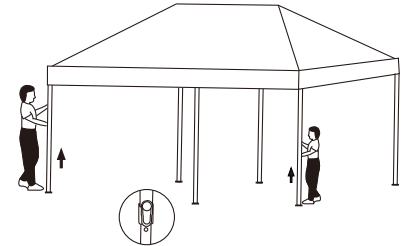

7 tie the buckle in the side of valance

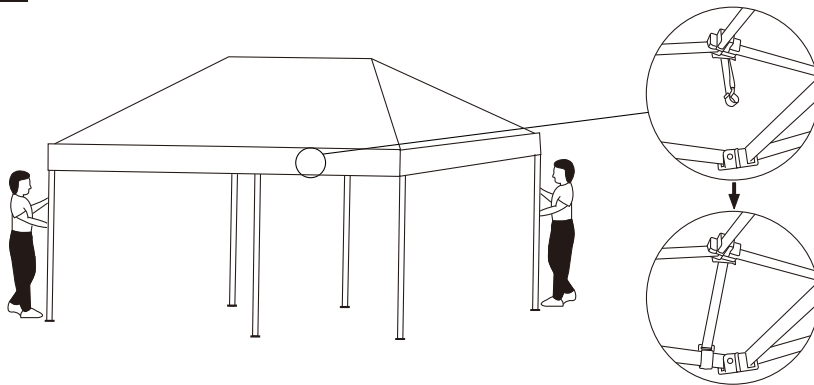

IMPORTANT

- **WINDY CONDITIONS:** Use stake kit or weight bag set
- **HEAVY WIND:** Take shelter down.
- **WET FABRIC:** Let shelter dry before closing.
- **STORAGE:** Use cover bag when not in use.
- **CLEANING:** Use mild detergent and water.
- **RAIN:** Do not leave shelter unattended.


De-assembly

1 Lift two outer legs slightly, depress snap button, telescope inner legs up into outer legs. Repeat on opposite side.



2 Release auto slider at each corner by pushing Snap-Button to release pressure on slider. Repeat on all four corners.

RELEASE SNAP-BUTTON

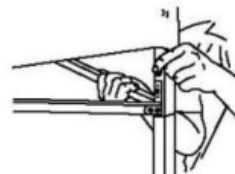

3 Grasp top of diamond on opposite sides, lift up, shake shelter a little while stepping towards partner until unit is $\frac{3}{4}$ closed. Grasp two outer legs, push together to fully close (do not pinch fingers). Put on cover bag.

