

Installation steps

JFG-003BE

STEP 1




1. Take out the tent and spread it flat on the ground. Secure the four corners with four ground nails.

STEP 2



2. Adjust the inflatable valve to the closed state, connect the pump to the air valve, and inflate the first air column to 80%.

STEP 3

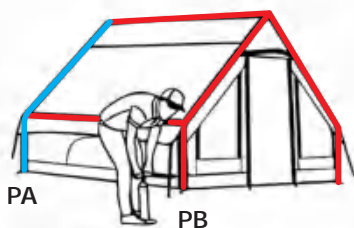

3. Inflate the other column to saturation, then fill the first column to 100%.
* The inflatable column can be identified through the air valve.

STEP 4



4. Secure the tent with ground nails and windbreak ropes.