





Description	Quantity
M8×50	60+2
M8×50	4
⊕ B M6×45	40+2
Ø6*220MM	24


Description	on Quantity	Description	Quantity	Description	Quantity	▼ ø 6*220MM	24
1#	12	A# ₽	6			S	4
2#	<u> </u>	B# 🕏	12	F#/\	1	○	4
3# •	<u> </u>	C# @	12	G# 👀	36	Ø5	4
4# ©	6	D#	1	I# Doo	8	\$3	2
5#	· 10			J# [00] [00]	16)—C	2
		E# <u>// \\</u>	1				

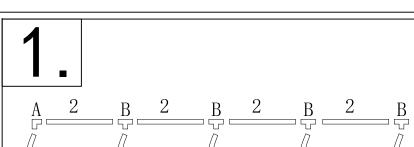


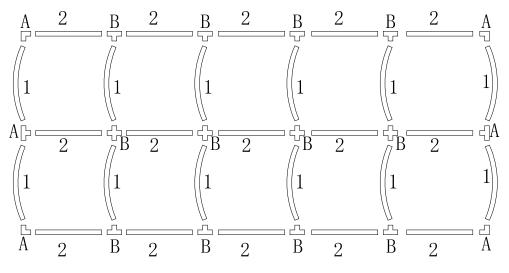


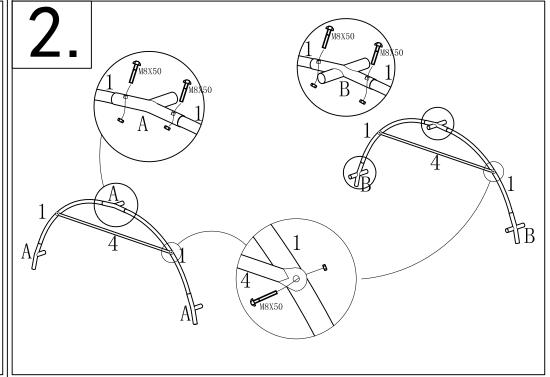

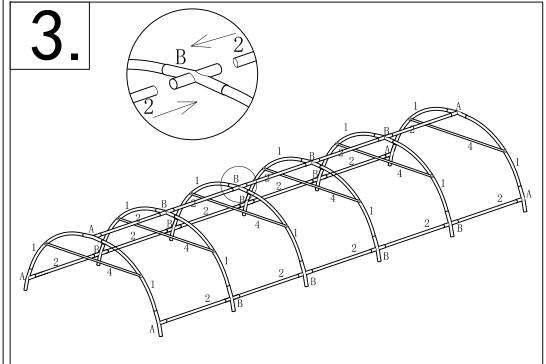

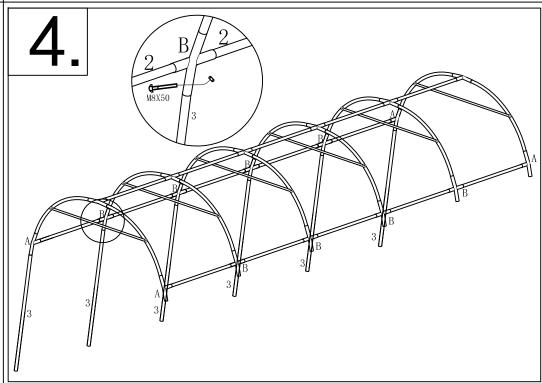

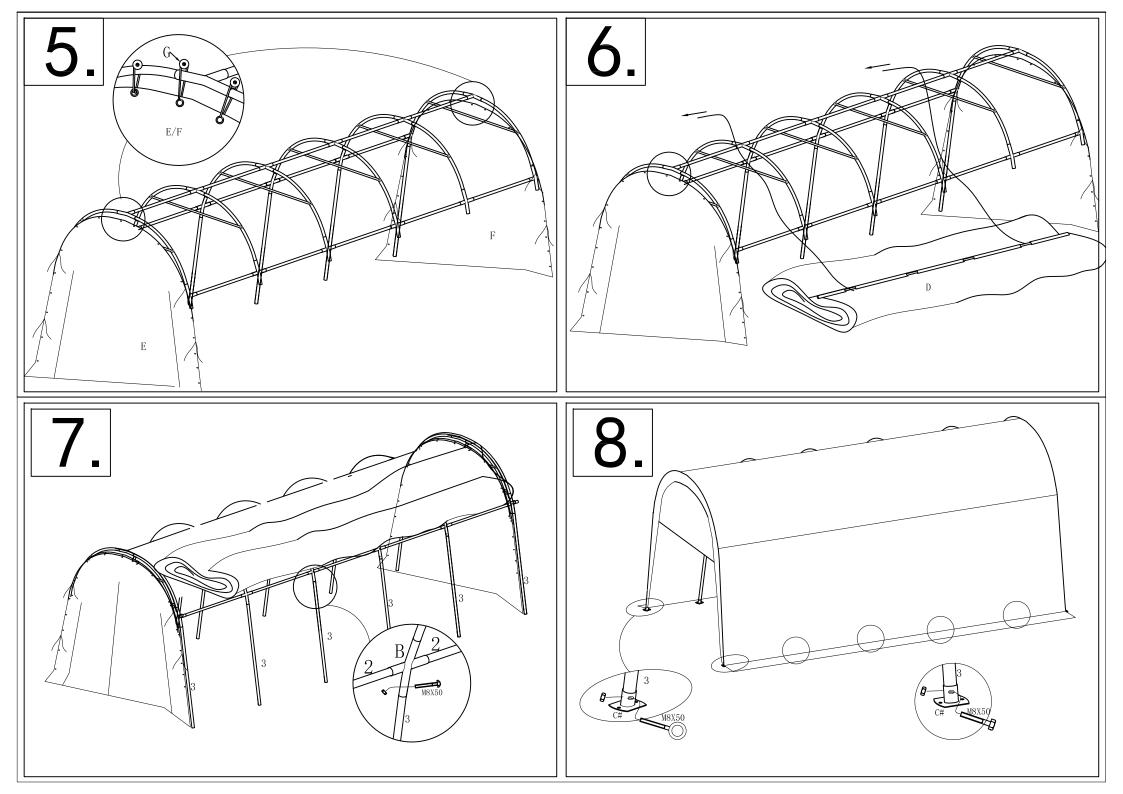


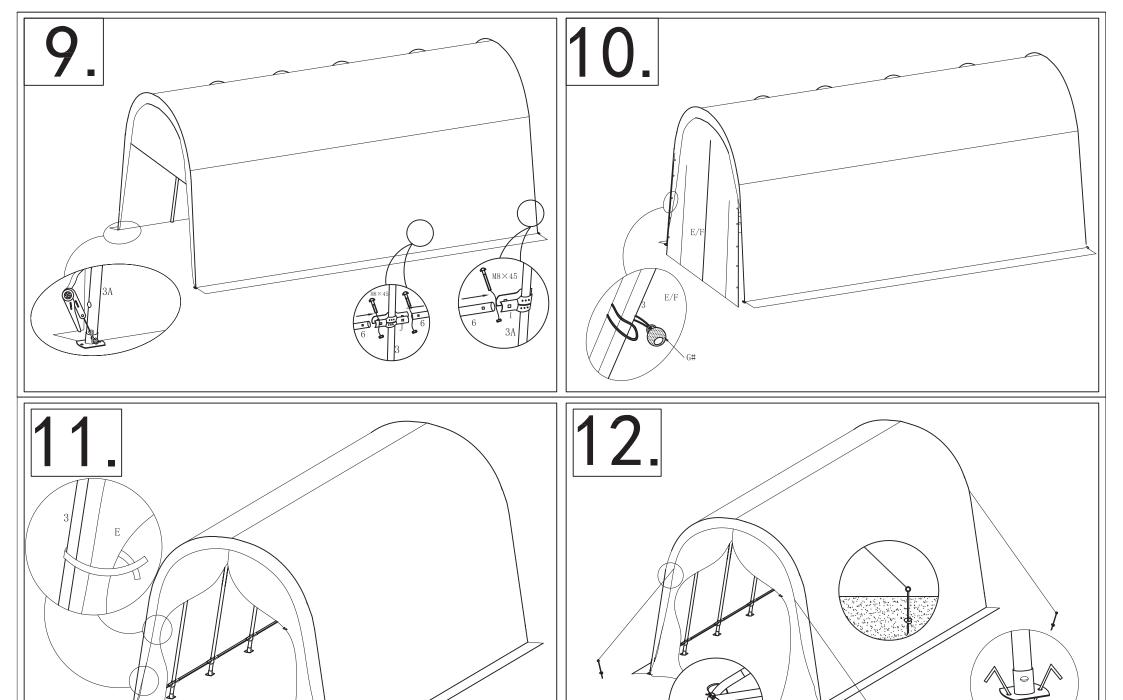


ng Ratchet Tie-Downs

these instructions in the pages that follow.

I the strap through the Ratchet's (8)

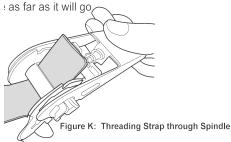

t the S-hook of the Ratchet into ole in the Corner Leg (6).

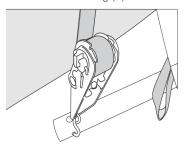

jure L: Inserting Hook into Corner Leg

Lift and lower the Ratchet's handle to wind and tighten the strap onto the spindle.

Releasing Ratchet Tie-Downs

- 1. Depress the spring-loaded bar on the handle.
- 2. Open Ratchet handle completely.
- 3. Unwind the strap.

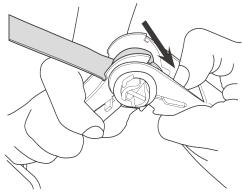


Figure N: Releasing Ratchet

ATTENTION:

- 1. Please check the manual carefully and make sure you have received all the parts.
- 2. If there is any missing, please let us know the letter of the parts you need.
- 3. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.