

GANT

TIME

# PARK HILL AUTOMATIC

## USER INSTRUCTIONS


### SPECIFICATIONS

GANT ID: G1020

MOVEMENT ID: Miyota 8217

BATTERY: Automatic Movement

### DISPLAY

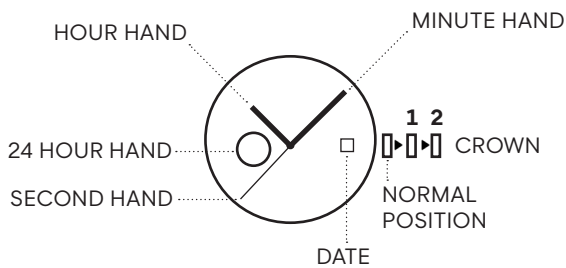

### SETTING HOUR, MINUTE & SECOND

Pull the crown to position 2 when the second hand reaches the 12 o'clock position and stops there. Then set the hour and minute hands. When setting the minute hand, put it 4 to 5 minutes earlier than the time to be set, and turn it back to the correct time.

### SETTING CALENDAR

Pull the crown to position 1 and turn counter-clockwise to adjust the date. If the date is set between 9:00 pm and 0:00 am, the date will not change correctly.