

GANT

TIME

CAMERON II

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1030

MOVEMENT ID: Miyota OS21

BATTERY: SR927W

DISPLAY

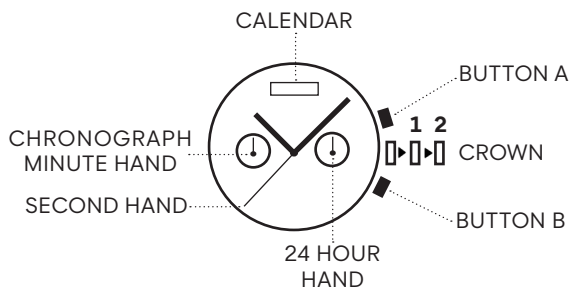

SETTING THE TIME

1. Pull the crown out to position 2.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, the hands begin to run.

SETTING CALENDAR

Pull the crown to position 1 and turn counter-clockwise to adjust the date. If the date is set between 9:00 pm and 0:00 am, the date will not change correctly.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second units up to a maximum of 59 minutes and 59 seconds. The chronograph second hand keeps going continuously for 59 minutes and 59 seconds after starting the measurement.

MEASURING TIME WITH THE CHRONOGRAPH

1. The chronograph can be started and stopped each time button A is pressed.
2. Pressing button B resets the chronograph and the chronograph second hand and chronograph minute hand returns to zero position.

CHRONOGRAPH RESET

(INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to position 2.
2. Press button A to set the chronograph second hand to zero position. The chronograph hand can be advanced rapidly by continuously pressing button A.
3. Once the hand have been zeroed, return the crown to the normal position.

* Do not push crown to normal position while the chronograph second hand returns to zero position. It stops on the way when crown is returned to normal position and its position is recognized as zero position.